

Masoneilan

a Baker Hughes business

PXR™ Control Valve

Performance X Reliability

Single Seated Globe Valve

Instruction Manual (Rev. D)



THESE INSTRUCTIONS PROVIDE THE CUSTOMER/OPERATOR WITH IMPORTANT PROJECT- SPECIFIC REFERENCE INFORMATION IN ADDITION TO THE CUSTOMER/OPERATOR'S NORMAL OPERATION AND MAINTENANCE PROCEDURES. SINCE OPERATION AND MAINTENANCE PHILOSOPHIES VARY, BAKER HUGHES COMPANY (AND ITS SUBSIDIARIES AND AFFILIATES) DOES NOT ATTEMPT TO DICTATE SPECIFIC PROCEDURES, BUT TO PROVIDE BASIC LIMITATIONS AND REQUIREMENTS CREATED BY THE TYPE OF EQUIPMENT PROVIDED.

THESE INSTRUCTIONS ASSUME THAT OPERATORS ALREADY HAVE A GENERAL UNDERSTANDING OF THE REQUIREMENTS FOR SAFE OPERATION OF MECHANICAL AND ELECTRICAL EQUIPMENT IN POTENTIALLY HAZARDOUS ENVIRONMENTS. THEREFORE, THESE INSTRUCTIONS SHOULD BE INTERPRETED AND APPLIED IN CONJUNCTION WITH THE SAFETY RULES AND REGULATIONS APPLICABLE AT THE SITE AND THE PARTICULAR REQUIREMENTS FOR OPERATION OF OTHER EQUIPMENT AT THE SITE.

THESE INSTRUCTIONS DO NOT PURPORT TO COVER ALL DETAILS OR VARIATIONS IN EQUIPMENT NOR TO PROVIDE FOR EVERY POSSIBLE CONTINGENCY TO BE MET IN CONNECTION WITH INSTALLATION, OPERATION OR MAINTENANCE. SHOULD FURTHER INFORMATION BE DESIRED OR SHOULD PARTICULAR PROBLEMS ARISE WHICH ARE NOT COVERED SUFFICIENTLY FOR THE CUSTOMER/OPERATOR'S PURPOSES THE MATTER SHOULD BE REFERRED TO BAKER HUGHES.

THE RIGHTS, OBLIGATIONS AND LIABILITIES OF BAKER HUGHES AND THE CUSTOMER/ OPERATOR ARE STRICTLY LIMITED TO THOSE EXPRESSLY PROVIDED IN THE CONTRACT RELATING TO THE SUPPLY OF THE EQUIPMENT. NO ADDITIONAL REPRESENTATIONS OR WARRANTIES BY BAKER HUGHES REGARDING THE EQUIPMENT OR ITS USE ARE GIVEN OR IMPLIED BY THE ISSUE OF THESE INSTRUCTIONS.

THESE INSTRUCTIONS ARE FURNISHED TO THE CUSTOMER/OPERATOR SOLELY TO ASSIST IN THE INSTALLATION, TESTING, OPERATION, AND/OR MAINTENANCE OF THE EQUIPMENT DESCRIBED. THIS DOCUMENT SHALL NOT BE REPRODUCED IN WHOLE OR IN PART WITHOUT THE WRITTEN APPROVAL OF BAKER HUGHES.

Table of Contents

- Safety Information 4
- About this Manual 4
- Useful Life Period 4
- Warranty 4
- Numbering System..... 5
- 1. Introduction..... 6
- 2. General 6
- 3. Unpacking 6
- 4. Installation..... 6
 - 4.1 Piping Cleanliness 6
 - 4.2 Isolation Bypass Valve..... 6
 - 4.3 Flow Direction..... 6
- 5. Air Piping..... 6
- 6. Body Disassembly..... 7
 - 6.1 Threaded Trim - Orifice ≤ 25.4mm [1 inch] 7
 - 6.2 Threaded Trim - Orifice > 25.4mm [1 inch] 7
- 7. Maintenance and Repair 7
 - 7.1 Threaded Seat Ring Removal 7
 - 7.2 Lapping Seats 8
 - 7.2.1 Threaded Trim - Orifice ≤ 25.4mm [1 inch] 8
 - 7.3 Plug Stem Pinning - Orifice > 25.4mm [1 inch] 8
 - 7.4 Packing Box..... 10
 - 7.4.1 Braided PTFE with Carbon or Aramid Core 10
- 8. Valve Body Reassembly 11
- 9. BS Bellows Seal - Bonnet-less Design..... 12
 - 9.1 Bellows Valve Disassembly 12
 - 9.2 Repair 14
 - 9.3 Plug and Seat Ring Seating Surfaces 17
 - 9.4 Bonnet Reassembly 17
 - 9.5 Valve Body Reassembly 17
 - 9.6 Actuator to Body Sub-Assembly and Plug Stem Adjustment 17
- 10. Actuators 18
 - 10.1 Model 87/88 Actuator Mounting 18
 - 10.2 Model 57/58 Actuator mounting 18
- 11. Assembly Torque Requirements 20

Safety Information

Important - Please read before installation

These instructions contain **DANGER**, **WARNING**, and **CAUTION** labels, where necessary, to alert you to safety related or other important information. Read the instructions carefully before installing and maintaining your control valve. **DANGER** and **WARNING** hazards are related to personal injury. **CAUTION** hazards involve equipment or property damage. Operation of damaged equipment can, under certain operational conditions, result in degraded process system performance that can lead to injury or death. Total compliance with all **DANGER**, **WARNING**, and **CAUTION** notices is required for safe operation.



This is the safety alert symbol. It alerts you to potential personal injury hazards. Obey all safety messages that follow this symbol to avoid possible injury or death.



Indicates a potentially hazardous situation which, if not avoided, could result in death or serious injury.



Indicates a potentially hazardous situation which, if not avoided, could result in serious injury.



Indicates a potentially hazardous situation which, if not avoided, could result in minor or moderate injury.



When used without the safety alert symbol, indicates a potentially hazardous situation which, if not avoided, could result in property damage.

Note: Indicates important facts and conditions.

About this Manual

- The information in this manual is subject to change without prior notice.
- The information contained in this manual, in whole or part, shall not be transcribed or copied without Baker Hughes's written permission.
- Please report any errors or questions about the information in this manual to your local supplier.
- These instructions are written specifically for the PXR control valves, and do not apply for other valves outside of this product line.

Useful Life Period

The current estimated useful life period for the PXR control valves is 25+ years. To maximize the useful life of the product, it is essential to conduct annual inspections, routine maintenance and ensure proper installation to avoid any unintended stresses on the product. The specific operating conditions will also impact the useful life of the product. Consult the factory for guidance on specific applications if required prior to installation.

Warranty

Items sold by Baker Hughes are warranted to be free from defects in materials and workmanship for a period of one year from the date of shipment provided said items are used according to Baker Hughes recommended usage. Baker Hughes reserves the right to discontinue manufacture of any product or change product materials, design or specifications without notice.


Prior to installation:

- The valve must be installed, put into service and maintained by qualified and competent professionals who have undergone suitable training.
- All surrounding pipe lines must be thoroughly flushed to ensure all entrained debris has been removed from the system.
- Under certain operating conditions, the use of damaged equipment could cause a degradation of the performance of the system which may lead to personal injury or death.
- Changes to specifications, structure, and components used may not lead to the revision of this manual unless such changes affect the function and performance of the product.

! WARNING

1. It is the end user's responsibility to ensure properly loaded and supported piping to avoid undesired stresses on the product which may result in damage to the product, loss of containment, or loss of functionality and resulting unsafe states or conditions.
2. It is the end user's responsibility to correctly identify end locations and place product in areas that may contain explosive atmospheres. The failure of properly following the test, installation, maintenance and disassembly/assembly instructions may result in a compromised product which in turn could result in an uncontrolled or unexpected loss of containment and release of pressure.
3. It is the end user's responsibility to take appropriate actions to ensure that site personnel who are performing installation, commissioning, and maintenance have been trained in proper site procedures for working with and around Baker Hughes supplied equipment, per Safe Site Work Practices.
4. The failure of properly following the test, installation, maintenance and disassembly/assembly instructions may result in a compromised product which in turn could result in an uncontrolled /unexpected loss of containment and release of pressure. It is the responsibility of the person conducting the tasks listed above to take great care in following such procedures.
5. It is the end user's responsibility to:
 - Recognize and safely contain any leak.
 - Ensure proper Personal Protective Equipment is available and used.
 - Follow Proper lifting techniques and procedures, per Safe Site Work Practices.
6. Proper Lockout/Tagout of energy sources prior to maintenance, per Safe Site Work Practices, is the end user's responsibility. This includes any potential control signals or circuits that may have a remote or automated control function over any product. Instructions to properly release spring stored energy are included in this manual.
7. After installation or maintenance, it is the end user's responsibility to ensure the equipment has been properly inspected and returned to proper condition before being returned to service.

PXR Numbering System

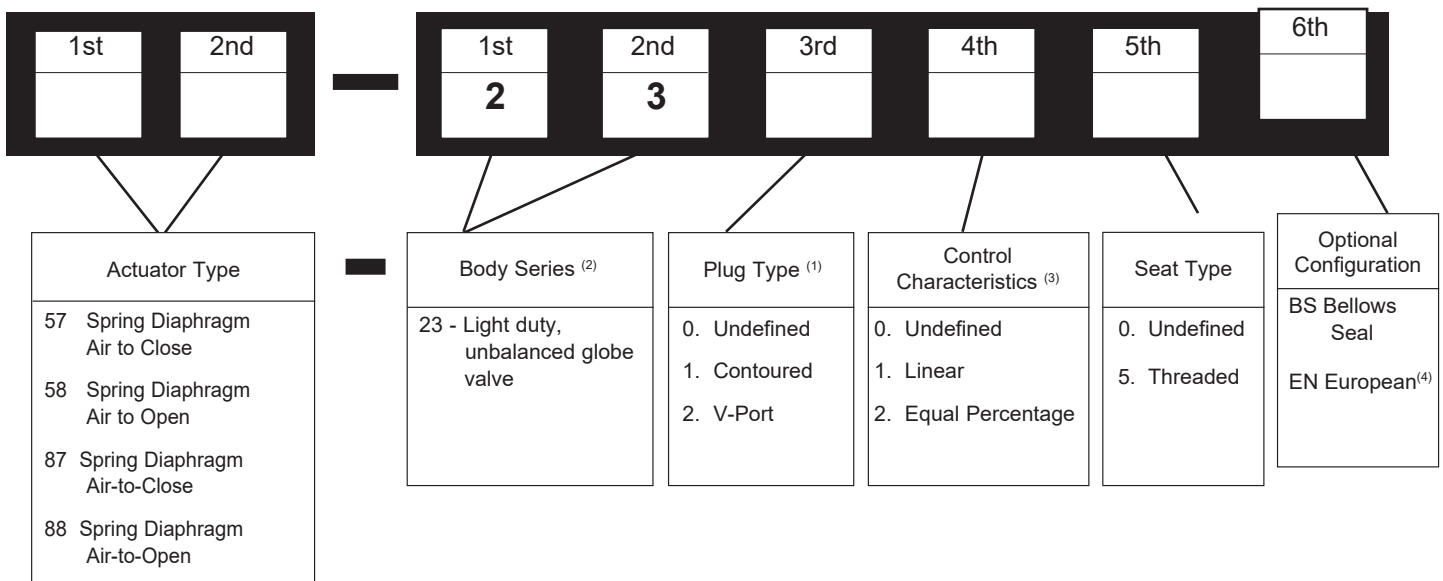

Notes:

- (1) Any new numbering system other than the plug type and control characteristics mentioned in the above table is not allowed.
- (2) Angle body design is not allowed, consult Baker Hughes.
- (3) Low noise and anti-cavitation cages are not allowed.
- (4) European standard face to face as per EN558-1(DIN 3202 F1)

1. Introduction

The following instructions should be thoroughly reviewed and understood prior to installing, operating or performing maintenance on this equipment. Throughout the text, safety and/or caution notes will appear and must be strictly adhered to, otherwise, serious injury or equipment malfunction could result.

Baker Hughes has a highly skilled After Sales Department available for start-up, maintenance and repair of our valves and component parts.

Arrangements for this service can be made through your local Baker Hughes's representative or sales department. When performing maintenance use only **Masoneilan™** replacement parts. Parts are obtainable through your local representative or spare parts department. When ordering parts, always include the model and serial number of the unit being repaired.

2. General

These installation and maintenance instructions apply to all sizes and ratings of the **PXR™ (Performance X Reliability)** control valves regardless of the type of trim used.

PXR single ported top guided control valves are designed with built in versatility making them well-suited to handle a wide variety of process applications.

Standard construction offers a contoured plug with a threaded seat ring. The top guided stem provides maximum support to ensure plug stability for orifice $\leq 25.4\text{mm}$ [1 inch].

A series of reduced area trim is available to provide wide flow range capabilities in all valve sizes.

Tight Shutoff Class IV leakage is standard. Optional constructions meet IEC 534-4 and ANSI/FCI 70.2 Class V requirements.

Replacing the conventional plug with the V-port plug design (23205 Series). The top guided single seated plug provides maximum support to ensure plug stability for orifice $> 25.4\text{mm}$ [1 inch].

Recommended spare parts required for maintenance are listed in the Parts Reference table on page 21. The model number, size, rating and serial number of the valve are shown on the identification tag located on the actuator. Refer to page 5 for the PXR numbering system.

3. Unpacking

Care must be exercised when unpacking the valve to prevent damage to the accessories and component parts. Contact the local Baker Hughes Sales office or Service Center with any issues or problems. Be sure to note the valve model number and serial number in all correspondence.

4. Installation

4.1 Piping Cleanliness

Before installing the valve in the line, clean piping and valve of all foreign material such as welding chips, scale, oil, grease or dirt. Gasket surfaces should be thoroughly cleaned to ensure leak-proof joints.

4.2 Isolation Bypass Valve

To allow for in-line inspection, maintenance or removal of the valve without service interruption, provide a manually operated stop valve on each side of the PXR valve with a manually operated throttling valve mounted in the by-pass line - see Figure 1 below.

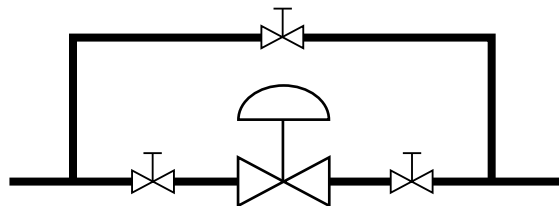


Figure 1 - Typical Installation

4.3 Flow Direction

The valve must be installed so that the process fluid will flow through the valve in the direction indicated by the flow arrow located on the body.

The flow direction of PXR is flow-to-open.

5. Air Piping

The actuators are designed to accept 1/4" NPT air supply piping. Use 1/4" OD tubing (4 x 6 mm) or equivalent for all air lines. If the supply air line exceeds 25 feet in length (7 meters) or if the valve is equipped with volume boosters, then 3/8" tubing (6 x 8 mm) is preferred. All connections must be free of leaks.

CAUTION

Do not exceed supply pressure indicated on serial plate located on the yoke of the actuator.

6. Body Disassembly

Access to the internal components of the body can be accomplished with the actuator removed. To remove the 57/58 and 87/88 spring diaphragm actuators from the body, refer to the 87/88 Series Actuators Installation, Operation and Maintenance Manuals.

CAUTION

Prior to performing maintenance on the valve, isolate the valve and vent the process pressure. Shut off the supply air line and the pneumatic or electric signal line.

6.1 Threaded Trim - Orifice $\leq$ 25.4mm [1 inch] (Figure 11 on page 21)

After removing the actuator, disassemble the body using the following procedure:

- Remove body stud nuts (B014).
- Remove bonnet (B003), and single piece plug and stem (B112) sub-assembly together as one unit.
- Remove threaded seat ring (B102) from the body (B001).

Note: Spiral wound body gasket (B015) is standard in the PXR design and it is imperative that a new gasket be installed each time the valve is disassembled.

- Remove packing flange stud nuts (B201), packing flange (B213) and packing follower (B212).
- Remove single piece plug and stem (B112) from the bonnet (B003).

CAUTION

Care must be taken not to let the integral stem/plug slip down when performing step B as it tends to slip out. Care must be taken to avoid damage to the plug stem and guide bushing.

- Remove old packing (B206) and guide bushing (B011) from the bonnet. Refer to Figure 9 on page 19.
- All components may now be inspected for wear and service damage. After determining the maintenance required, proceed to the appropriate Section of this instruction manual.

6.2 Threaded Trim - Orifice $>$ 25.4mm [1 inch] (Figure 12 on page 21)

After removing the actuator, disassemble the body using the following procedure:

- Remove body stud nuts (B014).
- Remove bonnet (B003) and plug stem (B120) and plug (B112) sub-assembly together as one unit.
- Remove threaded seat ring (B102) from the body (B001).

Note: Spiral wound gasket (B015) is standard in the PXR design, and it is imperative that new gasket be installed each time the valve is disassembled.

- Remove packing flange stud nuts (B201), packing flange (B123) and packing follower (B212).
- Remove plug (B112) and plug stem (B120) sub-assembly from the bonnet (B003).

CAUTION

Care must be taken to avoid damage to the plug stem and guide bushing.

- Remove old packing (B206) and guide bushing (B011) from the bonnet. Refer to Figure 9 - Plug Stem Pinning on page 19.
- All components may now be inspected for wear and service damage. After determining the maintenance required, proceed to the appropriate Section of this instruction manual.

7. Maintenance and Repair

The purpose of this section is to provide recommended maintenance and repair procedures. These procedures assume the availability of standard shop tools and equipment.

7.1 Threaded Seat Ring Removal (Figure 11 on page 21)

Threaded seat rings (B102) are installed tightly by the manufacturer, and after years of service they may be difficult to remove.

To facilitate removal, seat ring wrenches can be fabricated to engage the seat ring lugs and adapted to a standard wrench. If the seat ring is exceptionally resistant to removal, the application of heat or penetrating oil should be helpful.

CAUTION

When using heating devices, ensure that proper safety practices are observed. Flammability and toxicity of the process fluid must be considered and proper precautions taken.

7.2 Lapping Seats

Lapping is the process of working the valve plug against the seat ring with an abrasive to produce a close fit. If valve leakage is excessive, lapping becomes necessary. The plug and seat ring seating surfaces should be free of large scratches or other defects, and the contact surfaces of the seats should be as narrow as possible. This may require dressing both parts in a lathe. The seating surface angle of the plug is 28 degrees and the seat ring is 30 degrees (relative to the centerline axis). A good grade of fine grinding compound is required for the lapping operation.

The compound should be mixed with a small quantity of lubricant such as graphite. This will slow the cutting rate and prevent tearing of the seating surfaces. The amount of lapping required depends on the materials, condition of seating surfaces, and accuracy of machining. If a short period of lapping does not visibly improve seating, there is usually no advantage in continuing as excessive lapping may result in rough seats. The only remedy is replacement or re-machining of one or both parts. When lapping new plugs and seat rings, begin with a medium fine (240 grit) and finish with a finer grade (600 grit).

Note: Lapping should produce a line contact area, not the entire surface, due to the difference in seat angles.

CAUTION

Before lapping, the plug and stem sub-assembly must be concentric for orifice > 25.4mm [1 inch]. (See pinning operation, section 7.3).

7.2.1 Threaded Trim - Orifice $\leq$ 25.4mm [1 inch]

(Figure 11 on page 21)

1. Clean body gasket surface areas.
2. When seat has been removed, ensure that the sealing surface in the body bridge and the threads are thoroughly cleaned.

Note: A lubricant compatible with the process should be applied sparingly to the seat ring threads and sealing shoulder.

3. Install and tighten seat ring using fabricated wrench used for removal.

CAUTION

Do not overtighten. Do not strike seat ring lugs directly. This could distort the seat ring resulting in seat leakage.

4. Apply lapping compound on the plug at several spots equally spaced around the seating area.

5. Insert the single piece (orifice $\leq$ 25.4mm [1 inch]) plug and stem or plug and stem pinned > 25.4mm [1 inch] sub-assembly carefully into the body until it is seated.
6. Place bonnet (B003) on the body and fasten the bonnet to the body using four body stud nuts (B014) spaced equally apart. Apply slight pressure and tighten evenly.

CAUTION

Do not tighten nuts to final torque specifications at this time. The bonnet is used temporarily for guiding purposes only.

7. Insert two or three pieces of packing (B206) into the packing box to assist in guiding the stem and plug during lapping.
8. Screw a drilled and tapped rod with a T-handle onto the plug stem and secure with a locknut - see Figure 7 on page 19.
9. Apply slight pressure on the stem, and rotate the stem in short oscillating strokes (around 8 to 10 times). Repeat this step as necessary.

Note: As an alternative, drill a hole through a flat steel plate and fasten to the plug stem using two locknuts.

Note: The plug should be lifted and turned 90° each time before repeating Step (9). This intermittent lifting is required to keep the plug and seat ring concentric during lapping.

CAUTION

Avoid over-lapping as this can cause damage to the seating surface that can further degrade leakage performance.

10. After completion of the lapping operation, remove bonnet and plug. The seating area of the seat ring and the plug must be cleaned of all lapping compound in preparation for reassembly. Do not remove seat ring.

7.3 Plug Stem Pinning - (Orifice > 25.4mm [1 inch])

Plug stem pinning in the field may be required for the following:

- Replacing existing plug and stem, or
- Replacing existing stem only

Replacing Plug and Stem

If it is necessary to replace the plug, then the plug stem must be replaced at the same time. The original pin hole in an existing stem will not provide the necessary fit, and might seriously impair the strength of the assembly.

Note: While pinning is being performed, care must be taken not to damage the seating surface or plug shank. Always use a soft metal or plastic vise jaws with cylindrical features to hold the plug shank area - see Figure 9 on page 19.

A. Screwing Stem to Plug

- Hold the plug (with vise jaw assembly) in a vise.
- Lock two nuts against each other on the end of the new plug stem, and screw the stem solidly into the plug using a wrench on the upper nut.

When properly assembled, the thread in the stem should be completely engaged in the plug shank..

B. Drilling the New Parts

- **If the plug shank area has a center mark:**

Place the plug shank on a V-block and use a suitable drill size to either:

- Match the hole size in the plug, or
- Match Diameter C - see Figure 9 on page 19.

Drill through the plug-stem assembly.

- **If the plug shank area does not have any hole or any center mark:**

- Measure dimension D based on the plug shank diameter and stem diameter - see Figure 9 on page 19.
- Place the plug shank on a V-block, and make a center mark on the plug shank area using a center punch.
- Drill through the plug-stem assembly using a suitable size drill bit. Make sure the hole is drilled parallel -not perpendicular -to the flat on the plug shank.

In all cases after drilling: Remove any burrs from the plug shank hole by making a slight chamfer.

C. Pinning the Plug-Stem Assembly

1. Select the correct size pin based on the plug shank diameter and stem diameter - see Figure 9 on page 19. Apply a small amount of grease on the pin and hand assemble it into the hole in the plug.
2. Press fit the pin into the hole using a hammer. Complete the pinning operation by taking care to ensure that the pin is recessed by the same amount at both sides - see Figure 9 on page 19.
3. After the plug has been pinned, it should be placed in a lathe to ensure it is concentric with the stem.

If the assembly is not running true, then the stem should be placed in a collet with the plug shank against it and the plug should be adjusted. Alignment of plug stem can be performed by means of a soft faced mallet.

Replacing Existing Stem Only

A. Removing Existing Pin and Stem

1. Place the plug shank on a V-block and use a drift punch to drive out the old pin.

Note: If it is necessary to drill out the pin, use a drill bit slightly smaller than the pin diameter.

2. Hold the plug shank in a vise.
3. Lock one nut against another at the end of the plug stem. Using a wrench on the lower nut, unscrew the stem from the plug. The stem is removed by turning it counter-clockwise.

B. Screwing Stem to Plug

- Hold the plug (with vise jaw assembly) in a vise.
- Lock two nuts against each other on the end of the new plug stem, and screw the stem solidly into the plug using a wrench on the upper nut.

When properly assembled, the reference mark (see Section A above) should be flush with the end of the plug shank.

C. Drilling the New Stem

Place the plug shank on a V-block and use a suitable size drill bit to drill the stem (use the hole in the plug as a guide).

Note: If the hole in the plug shank has been slightly damaged while removing the old pin, choose a drill bit and a pin with a slightly larger diameter than the normal pin.

D. Pinning

Select the correct size pin based on the plug shank diameter and pin hole diameter. Proceed as described in part D of the previous section, taking care not to damage the plug shank area.

Ensure plug stem alignment following the pinning operation.

7.4 Packing Box (Figure 8)

Packing box maintenance is one of the principle action items of routine servicing. Tightness of the packing is maintained by packing compression. Compression is achieved by evenly tightening the packing flange nuts (B201) against the packing flange (B213). Care must be taken not to over tighten as this could prevent smooth operation of the valve. If all compression is used up and the valve leaks, then new packing is required.

CAUTION

Valve must be isolated and the pressure vented before performing packing box maintenance.

7.4.1 Braided PTFE with Carbon or Aramid Core (Standard) (Figure 8)

Note: The Braided PTFE/Carbon or Aramid packing rings have a skive cut allowing packing replacement without disconnecting the plug stem from the actuator connector or actuator stem.

- Loosen and remove packing flange nuts (B201).
- Lift the packing flange (B213) and packing follower (B212) up the valve stem.
- By means of a hooked instrument, remove packing rings (B206) ensuring not to damage the sealing surfaces of the packing box or plug stem.
- Replace packing rings (B206).

Note: Assemble and compress rings one at a time into packing box. The skive cut of each packing ring must be placed about 120 degrees apart.

- Assemble packing follower (B212) and packing flange (B213).
- Assemble and tighten packing stud nuts (B201).

CAUTION

Do not overtighten.

- Place valve back in service and only tighten packing as necessary to stop external leakage.

Note: In an emergency, string packing may be used as a temporary repair only. It must be replaced with the correct packing as soon as possible.

7.4.2 Flexible Graphite Rings

Note: Flexible graphite packing rings replacement may require disconnecting the plug stem from the actuator stem and removal of the actuator if rings are not skive cut.

- By means of a hooked instrument, remove packing (B206) ensuring not to damage the sealing surfaces of the packing box or plug stem.

Note: On valves equipped with an optional lubricator connection, the lantern ring must also be removed to gain access to lower packing rings. Pay close attention to the order and number of rings extracted with the lantern ring. This will help with reassembly.

- Replace new packing set (B206): First, assemble a back-up ring (Graphite Filament Yarn braided ring), then the flexible graphite rings (smooth rings), and finally another braided back-up ring:

Note: Assemble and compress rings one at a time into packing box.

- Assemble packing follower (B212) and packing flange (B213).
- Assemble and tighten packing stud nuts (B201)

CAUTION

Do not overtighten.

- Proceed to appropriate instructions for actuator and valve assembly adjustment.
- Place valve back in service and only tighten packing as necessary to stop external leakage.

7.4.3 Low Emissions Packing

The Masoneilan "Low-E" (Low Emissions) Packing is a high performance packing system capable of containing fugitive emissions well below the specifications of the most severe recommendations. It is also available with a fire proof configuration if required.

The packing is provided as a set of rings consisting of middle rings bound by end rings also referred to as anti-extrusion rings. All of our "Low-E" solutions come with live loading which is imperative to maintain a constant load on the packing and is necessary for thermal cycling applications.

Applied properly, this packing exhibits below current regulations. Consequently, it can effectively prevent fugitive emissions leaks from a control valve. The "Low-E" packing system can directly replace conventional packing, requiring no modification to the control valve or actuator.

The packing material may vary depending on the specifications and timing when the valve was ordered. It is important to understand the specific packing material that is being replaced.

Installation should be performed by a qualified technician. The following paragraphs will provide guidance but you may also refer to the Masoneilan Valve Packing Manual.

7.4.3.1 Preparation

7.4.3.1.1 Stem

Inspect stem for any nicks or scratches on the surface finish. If any damage is present, the stem must be replaced or it will damage the packing.

Note: A properly etched part number on the stem in the packing area will have no adverse effect on the performance of the packing.

Stem finish should be 3-7 AARH (Ra 0,1/0,2).

7.4.3.1.2 Packing Box

Note: Bonnets that have a lube hole or leak detection port are unacceptable for use with "Low-E" packing.

CAUTION

Packing box should be clean and free of burrs, rust, and any foreign matter. Parts can be cleaned with denatured alcohol.

Note: Packing box finish should be 125 AARH (Ra 3,2) or better.

The packing box may be bored or honed oversize by up to 0.015" (0.38 mm) above the nominal diameter to improve the finish. For instance, a nominal 0.875" (22.22 mm) packing box may be bored or honed up to 0.890" (22.60 mm) and the "Low-E" Packing will still seal properly.

Packing box must be finished to the bottom of the bore.

7.4.3.1.3 Packing

Inspect packing rings. DO NOT use packing if any nicks or scratches on packing are observed. Check packing instructions to ensure that it is in the proper arrangement (different packing materials contain arrangements specific to the design).

7.4.3.2 Packing Installation

- Refer to the packing instructions that were provided with the packing for proper installation.
- The Masoneilan Valve Packing Manual is available as an additional aid while completing the packing installation.
- The packing should be checked for leakage.

Note: All exposed surfaces of the packing set must be covered with the lubricant.

- Packing load should be checked after the valve has cycled approximately 500 times. Adjust if necessary. Plant maintenance and operation personnel should periodically inspect valves to spot leakage. Adjust if necessary and per OEM recommendations. If a leak is detected and cannot be resolved, any non-conforming hardware parts must be replaced.

7.4.4 Packing Box Efficiency

The constant supervision of the packing box is one of the main routing operations of the maintenance service. In order to provide a correct operation of the valve, the packing should not be tightened over the compression value necessary to provide the tightness. The packing box efficiency is obtained by the compression of the packing, or by combining it with use of the lubricant. As it wears, gradually re-tighten the packing up to the limits of the possible compression. In order to add packing, it is necessary only to remove the packing follower and flange and introduce one or two split rings.

Note: In case of urgency, the braided packing of suitable size can be inserted without removal of the worn rings. Before this operation, the valve must be put out of service. If the packing is made up of non-split rings, it may be necessary to disassemble the valve, remove the worn packing and reassemble per the instructions.

8. Valve Body Reassembly

After completion of the required maintenance, the valve should be reassembled using the following procedures:

Note: If any of the following steps were completed during maintenance, then proceed to the next step.

- Clean all gasket mating surfaces.
- Lubricate seat ring threads with Never-Seez (or equivalent).
- Install and tighten seat ring using the same wrench used for removal.

CAUTION

Do not overtighten. Do not strike seat ring lugs directly. This could distort the seat ring resulting in unwarranted seat leakage. Refer to Figure 10 on page 20 for proper seat ring torque

- Carefully install the single piece plug and stem or plug and stem assembly based on orifice size.

Note: Valve should be lapped before final assembly. See Section 7.2.

E. Install body gasket (B015).

Note: Spiral wound body gaskets (B015) are standard in the PXR design. It is imperative that a new gasket be installed each time the valve is disassembled.

F. Assemble bonnet (B003) and body stud nuts (B014). Bonnet must be positioned so the packing flange studs are at 90° to the flow center line.

CAUTION

Tighten nuts (B014) until metal-to-metal contact is obtained with proper bolt torque. Refer to Figure 10 and torque tables 2 and 3 on page 20 for proper bolt torque and tightening sequence specifications.

G. Insert guide bushing (B011) and packing (B206). Refer to Section 7.4 for proper packing assembly procedure for standard designs.

H. Install packing follower (B212) and packing flange (B213).

I. Install packing flange stud nuts (B201)

CAUTION

**Do not overtighten
(See Section “7.4. Packing Box”).**

J. Refer to the below section 10 for actuator mounting onto the valve and plug stem adjustment.

9. 23005 Series PXR BS Bellows Seal – Bonnet-less Design

This section is applicable for valve size 0.5 inches up to 4 inches (included).

CAUTION

Since this is a sealing bellows, the plug stem should never be turned under any circumstances.

There is a built-in anti-rotation feature, consisting of a double flat surface machined on the plug stem that slides into a rectangular slot machined in the upper bushing (B141b) of the bellows.

CAUTION

**IT IS IMPORTANT TO DISCONNECT THE
ACTUATOR FROM THE VALVE BEFORE
CHANGING THE ACTUATOR ROTATIONAL
POSITION.**

9.1 Bellows Valve Disassembly

Note: O-rings are standard in the 23005 Series PXR design. It is recommended that new O-rings be installed each time the valve is disassembled.

9.1.1 Separate Plug and Stem Version

Note: Drive nut should be unscrewed by using the tools shown on the Figure 6 on page 16 coupled to a flat spanner.

After removing the actuator, disassemble the body sub-assembly using the following procedure:

- Disconnect the leak-off circuit from the bonnet (if this option is included).
- Remove packing flange stud nuts (B201), packing flange (B213) and packing follower (B212).
- Remove body stud nuts (B014).
- Remove bonnet extension (B007), stem-bellow sub-assembly (B124) and bellows and stem assembly (B124) at the same time.
- Remove the plug pin (B903), then remove the plug (B112) from the plug stem (B120).

CAUTION

Be careful during plug disassembly, fluids can be enclosed on the extension bonnet (B007).

- Remove the three hexagonal socket set screw (B914a).
- Untighten and remove bonnet spud (B003) by using tooling shown in Figure 3 on page 13.
- Remove O-ring (B716) in the bonnet spud.
- Remove existing packing (B206) and guide bushing (B203).
- Remove stem-bellow S/A (B124) by the top of the bonnet extension (B007). Use tooling shown in Figure 4 on page 14 to avoid damaging/breaking bellow during disassembly.


CAUTION

Be careful not to damage the seating surfaces of the bellows bushing.


- Remove the body gasket (B015).
- Bonnet extension (B007), plug (B112), guide bushings (B011 and B203) and seat ring (B102) may now be inspected for wear and service damage.

After determining the maintenance required, proceed to the appropriate section of these instructions.

Note: For Integrated Plug and stem version, B112 and B903 are not relevant and Bellows and Stem Sub-assembly is one piece i.e. B124.

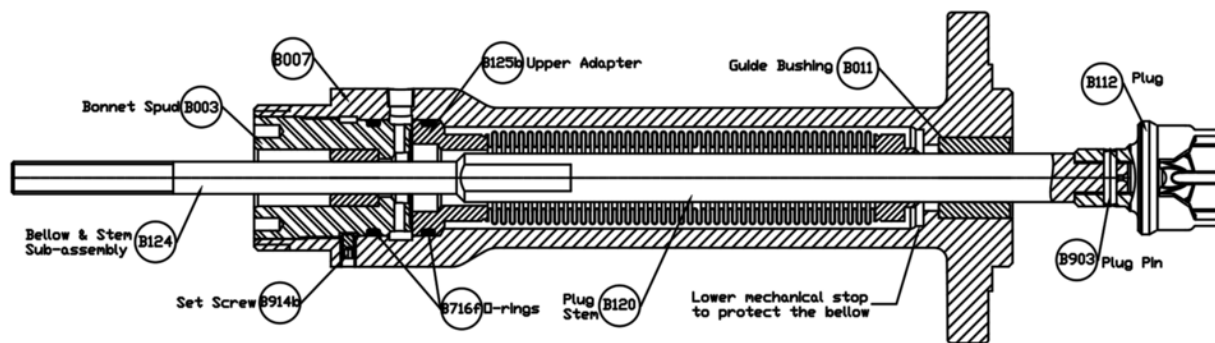

Bellow Seal Assembly-Separate Plug and Stem

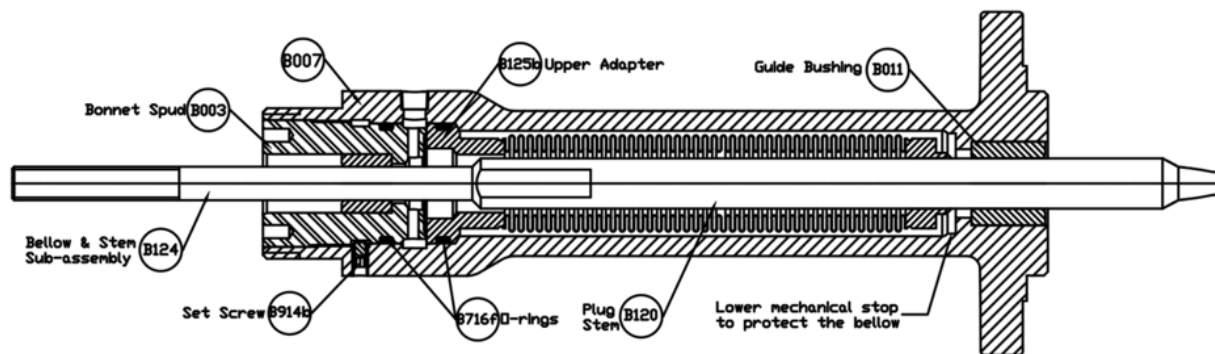

Bellow Seal Assembly-Integrated Plug and Stem

Figure 2 - Bellow Seal Assembly

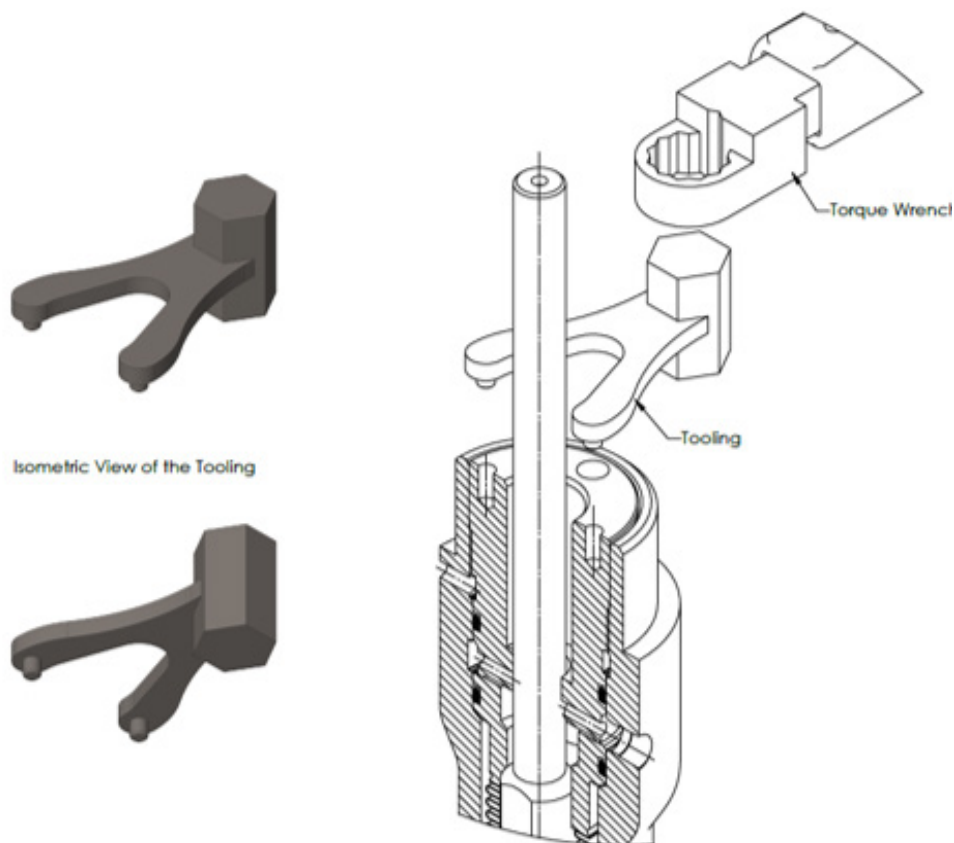


Figure 3 - Bonnet Spud Tightening Tooling

9.2 Repair

The purpose of this section is to provide recommended maintenance and repair procedures. These procedures assume the availability of standard shop tools and equipment.

9.2.1 Plug / Bellow-Stem Sub-Assembly

Plug stem pinning in the field may be required for:

- Replacing existing plug and stem-bellows sub-assembly
- Replacing stem-bellows sub-assembly only

Note: If the plug needs replacing, the stem-bellows sub-assembly should be replaced at the same time.

The original pin hole in a stem which is being reused sometimes prevents a satisfactory result being obtained and can also weaken the plug-stem assembly.

If the stem-bellows sub-assembly is being replaced, the new assembly can be fitted on an existing plug as long as it is in good condition and the removal of the pin has not deformed the hole or damaged it in any other way.

Note: Always use soft metal vise jaws to hold the plug guide surface. Failure to take this precaution could result in damage to the plug guide surface during pinning - see Figure 5 on page 16.

Be careful not to damage the plug seating surface during pin removal and assembly operations.

9.2.1.1 Mounting of the Plug and Stem-Bellows Sub-Assembly into the Bonnet Extension

- Clean all contact surfaces of the bonnet extension (B007) and the stem-bellow sub-assembly (B124).
- Assemble a new O-ring (B716) on the upper adapter (B141b) of the new stem-bellow sub-assembly (B124).
- Insert the new stem-bellows sub-assembly (B124) through the top hole into the bonnet extension (B007). Use tooling shown in Figure 4 on page 14 to avoid damaging/breaking bellow during assembly.
- Pin the plug (B112) on the stem (B120) - see section 9.2.1.3 below.

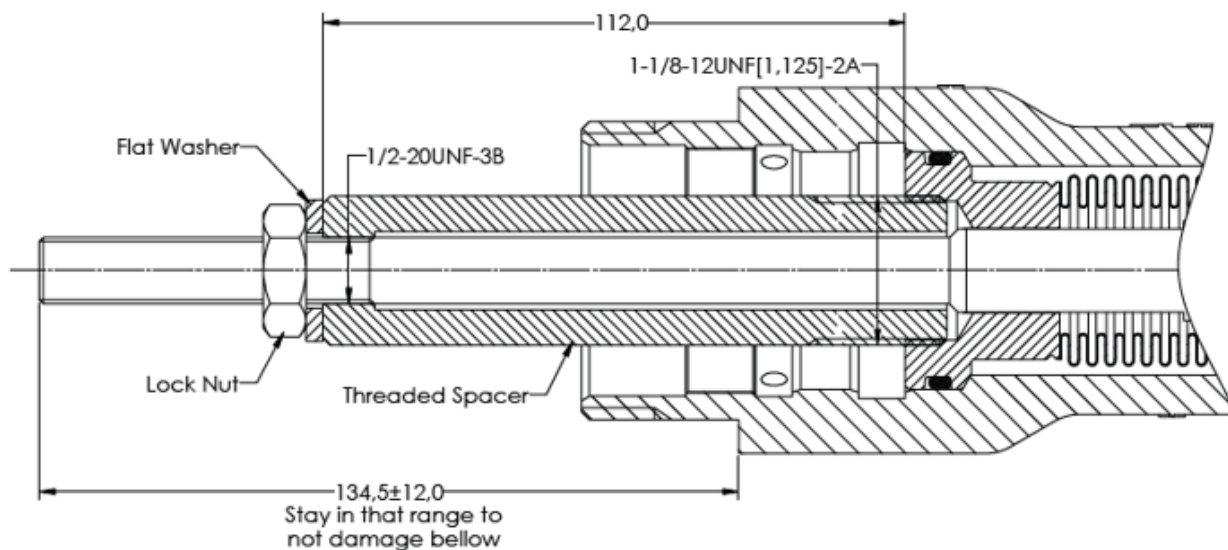


Figure 4 - Bellow and Stem Sub-Assembly Pulling Out Tooling

9.2.1.2 Plug Stem Pinning

Replacing Plug (B112) and Stem-Bellow Sub-Assembly (B124)

A. Screw Plug (B112) on Stem (B120)

- Lock two nuts against each other on the end of the plug stem and use a flat spanner on the upper nut to prevent rotation of the stem-bellows sub-assembly. Screw the plug (B112) onto the lower part of the stem (B120) while inserting the plug shank into the guide bushing (B011) in the bonnet extension (B007).
- Pull and hold the plug (B112) out of the bonnet extension (B007) to allow access to the plug pin (B903).

B. Drilling the New Parts

- **If the plug (B112) is already fully drilled**, (typical for 440C hardened stainless steel material or solid Stellite or equivalent), then drill the stem (B120) to the same diameter (Diameter C in Figure 5 on page 16 as the plug shank hole.
- **If the plug guide area has a center mark**, place the plug guide on a V-block and use a suitable size drill to either:
 - Match the hole size in the plug (B112), or
 - Match Diameter C - see Figure 5 on page 16
 - Drill through the plug-stem assembly.
- **If the plug guide area has no hole or any center mark**:
 - Measure Dimension D based on the plug guide diameter and stem diameter - see Figure 5 on page 16.
 - Place the plug guide on a V-block, and make a center mark on the plug guide area using a center punch.
 - Drill through the plug-stem assembly using a suitable size drill bit.

In all cases after drilling: Remove any burrs from the plug guide hole by making a slight chamfer.

C. Pinning the Plug-Stem Assembly

- Select the correct size pin based on the plug guide diameter and stem diameter - see Figure 5 on page 16. Apply a small amount of grease on the pin (B903) and hand-assemble it into the hole in the plug.
- Press fit the pin (B903) into the hole using a hammer. Complete the pinning operation by ensuring that the pin is recessed by the same amount from both sides - see Figure 5 on page 16.

Replacing Stem-Bellow Sub-Assembly Only (B124)

A. Screw Plug (B112) on Stem (B120)

- Lock two nuts against each other on the end of the plug stem and use a flat spanner on the upper nut to prevent rotation of the stem-bellows sub-assembly. Screw the plug (B112) onto the lower part of the stem (B120) while inserting the plug shank into the guide bushing (B011) in the bonnet extension (B007).
- Pull and hold the plug (B112) out of the bonnet extension (B007) to allow access to the plug pin (B903).

B. Drilling the New Stem

Place the plug guide on a V-block and use a suitable size drill bit to drill the stem (use the hole in the plug as a guide).

Note: If the hole in the plug guide has been slightly damaged while removing of the old pin, choose a drill bit and a pin with a slightly larger diameter than the normal pin.

C. Pinning

- Select the correct size pin based on plug guide diameter and pin hole diameter. Proceed as described in Paragraph C "Pinning the Plug-Stem Assembly" above, taking care not to damage the plug guide area.

Table 4 - Plug Guide Diameters

Plug Guide Diameter		Plug Stem Diameter		Pin Hole Diameter					
E		F		C		D		L	
in	mm	in	mm	in	mm	in	mm	in	mm
7/8	22.22	1/2	12.70	.138	3.50	1.65	42	.70	18
1-1/2	38.10	1/2	12.70	.138	3.50	2.17	55	1.25	32
2-3/8	60.32	3/4	19.05	.197	5	2.75	70	2	50
2-3/4	69.85	3/4	19.05	.197	5	2.75	70	2	50

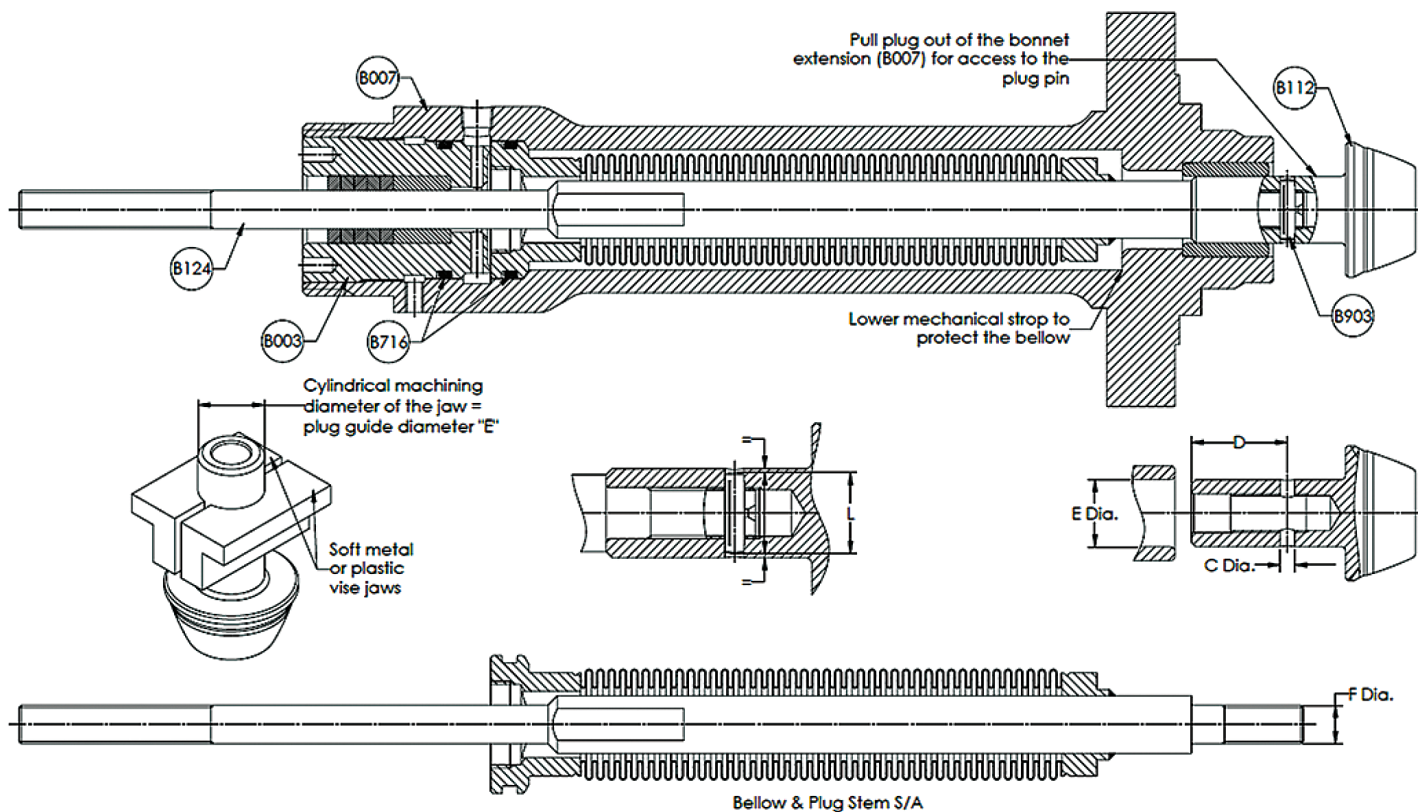


Figure 5 - Unpinning and Pinning of the Plug to the Stem

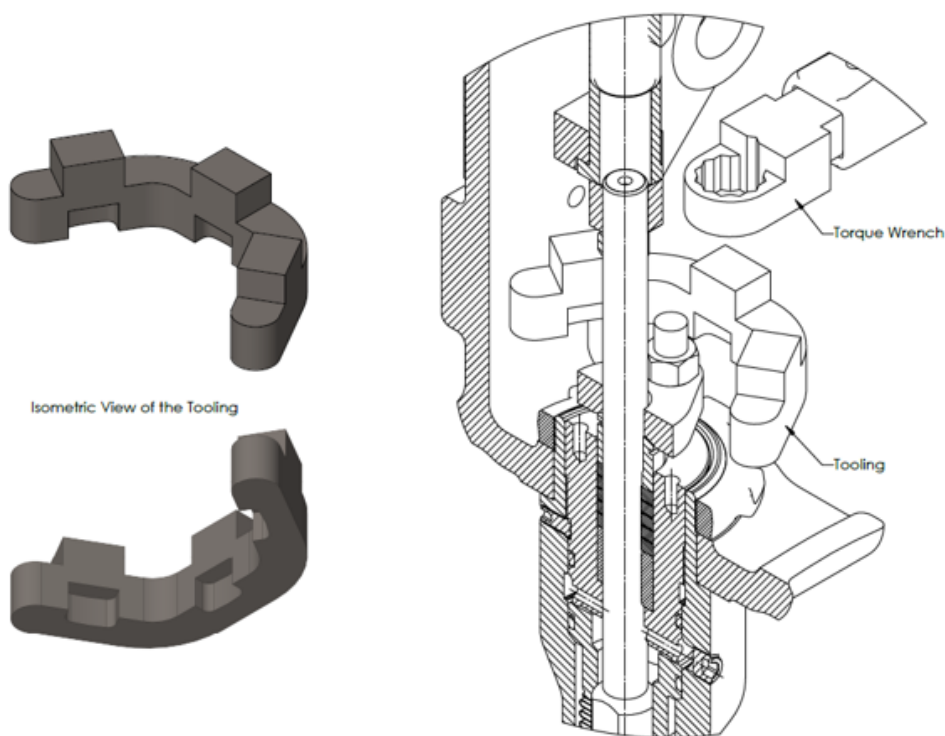


Figure 6 - Drive Nut Tightening Tools

9.3 Plug and Seat Ring Seating Surfaces

It is not possible to lap the plug (B112) and seat ring (B102) seating surfaces after the bellows sub-assembly (B125) has been assembled to the stem (B120).

If the seat ring (B102) shows signs of minor wear, it should be turned on a lathe to clean up the worn area.

The seating surface of the seat ring (B102) is 30 degrees from centerline axis. However, no more than 0.010 in. (0.25 mm) of material should be removed.

In cases where the seat ring (B102) cannot be repaired, or if the plug (B112) is also damaged, the only alternative is to replace both parts.

9.4 Bonnet Reassembly

- Place the new O-ring (B716) into the groove of the bonnet spud (B003).
- Add grease on the thread of the bonnet spud (B003)

Tighten the bonnet spud (B003) into the bonnet extension B007 by using tooling shown in Figure 3 on page 13 coupled to a torque wrench. Tightening torque indicated in the table below:

Table 5 - Bonnet Reassembly Torque

Valve Size (in)	ASME Pressure Rating	Tightening Torque (±10%)	
		daN.m	Ft-lbs
0.5 to 4	150/300	30	221.3

Screw the three hexagonal socket set screw (B914a).

9.5 Valve Body Reassembly

Refer to instructions stated in Section 8 on page 16 for the specific trim type involved.

Except for specific instructions relative to PXR 23005 Series Bellow Seal valves indicated below:

- Before inserting packing (B206), insert guide bushing (B203) into the bonnet spud (B003)

9.6 Actuator to Body Sub-Assembly and Plug Stem Adjustment

Refer to the 87/88 Series Actuator Installation, Operation and Maintenance Manual.

Except for specific instructions relative to PXR 23005 Series Bellow Seal valves indicated below:

- Tighten drive nut by using tools shown in Figure 6. Tightening torque are indicated in the following table:

Table 6 - Plug Stem Adjustment Torque

Valve Size (in)	ASME Pressure Rating	Tightening Torque (±10%)	
		daN.m	Ft-lbs
0.5 to 1	150/300	30	221.3
1.5 to 2	150/300	50	368.8
3	150/300	90	663.8
4	150/300	150	1106.3

WARNING

Assembly of the No. 6 actuator on a bellows seal valve requires a three-sectioned coupling. Follow coupling instructions as described for the No. 10, 16 and 23 actuators.

CAUTION

The bellows assembly causes a “spring back” effect. Measure this plug spring back before referring to the 87/88 Series Actuator Installation, Operation and Maintenance Manual. Be sure to add this spring back length to the over seat adjustment.

10. Actuators

10.1 Model 87/88 Actuator Mounting

Refer to 87/88 IOM

10.2 Model 57/58 Actuator Mounting

Assemble the pneumatic actuator with the valve using the following procedures:

Note: Check the following before mounting, then proceed to the next step.

- A. The spring scale
- B. The actuator stroke
- C. Check that the valve plug is in contact with the seat ring.
- D. Position the actuator vertically on the valve bonnet spud.
- E. Orient correctly the actuator and fasten it with drive nut.

CAUTION



Take care not to damage the bonnet spud nut threads when lowering the yoke onto the valve.

10.1.1 Air to extend (57 Actuator)

- A. Apply air pressure to specified stroke of the valve.
- B. Position the split clamp to engage the thread on both plug stem and actuator stem. If the split clamp does not engage with both stems, extend the actuator stem until alignment and engagement is achieved.
- C. Install and tighten indicator arm, spring lock washers and hexagon screws.
- D. Fix the stroke scale on the yoke to the right position in alignment with the indicator.

10.1.2 Air to retract (58 Actuator)

- A. Apply air pressure to retract the actuator stem until a metal-to-metal touch has been made with the diaphragm case.
- B. Carefully reduce air pressure extend the actuator stem to the specified stroke of the valve.
- C. Position the split clamp to engage the thread on both plug stem and actuator stem. If the split clamp does not engage with both stems, extend the actuator stem until alignment and engagement is achieved.
- D. Install and tighten indicator arm, spring lock washers and hexagon screws.
- E. Fix the stroke scale on the yoke to the right position in alignment with the indicator.

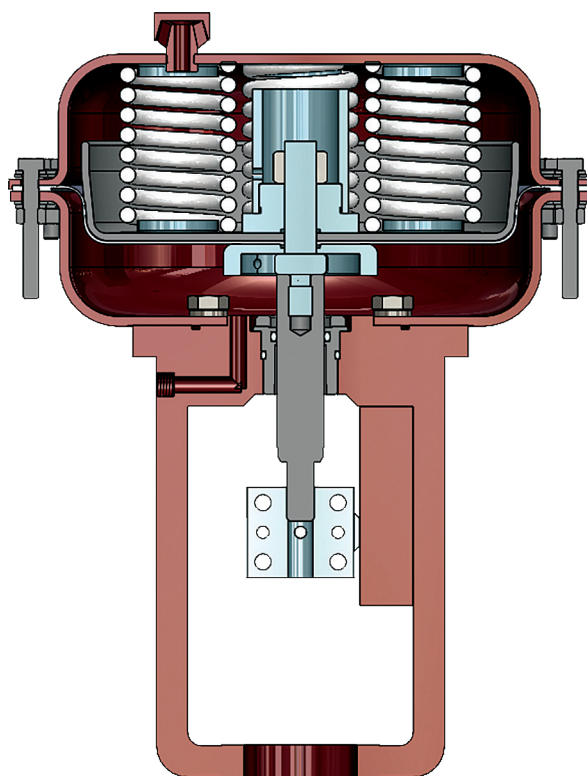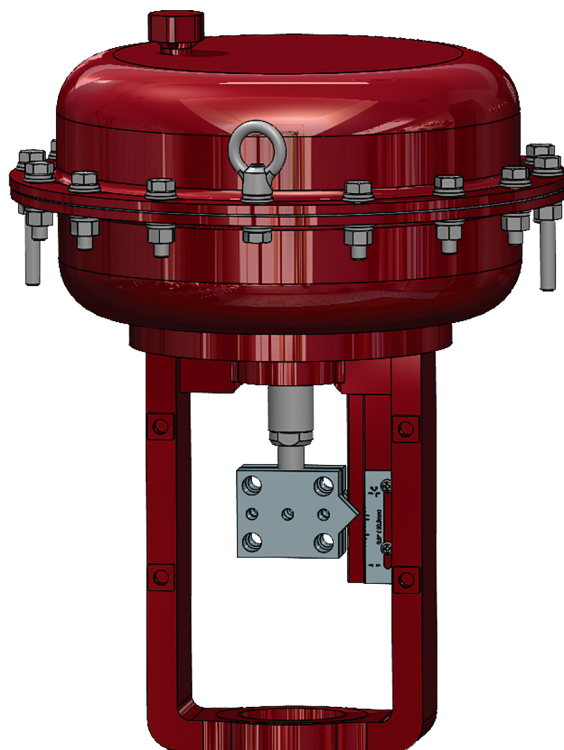

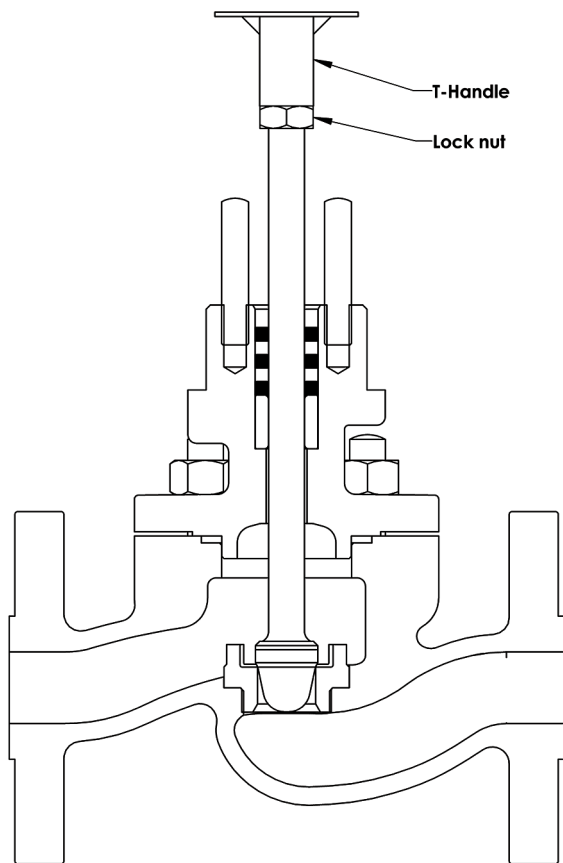


Figure 7 - Seat Lapping Device

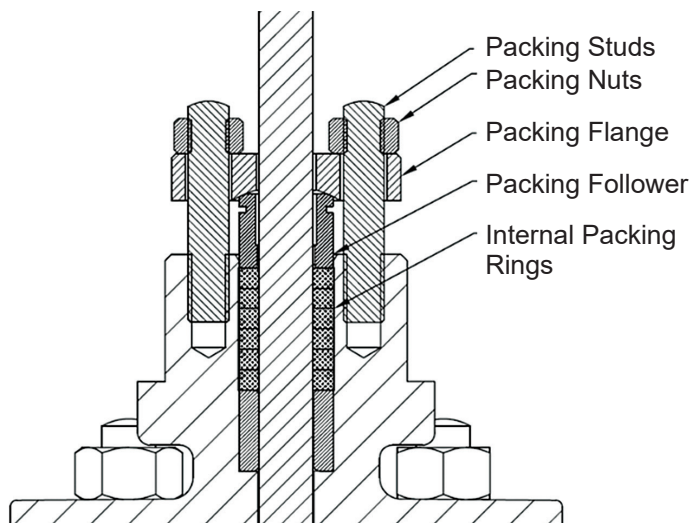


Figure 8 - Standard Packings

Note: Actual quantity of packing rings may defer from the representation depending on the stem size and version.

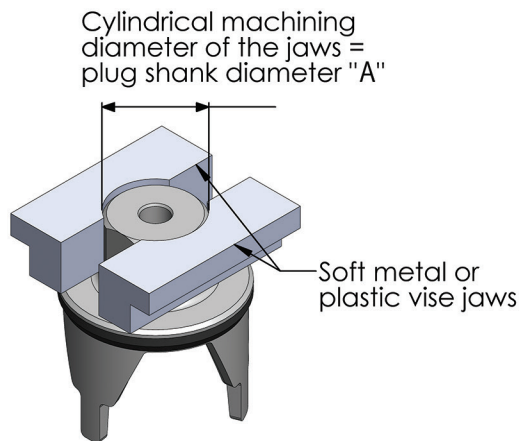
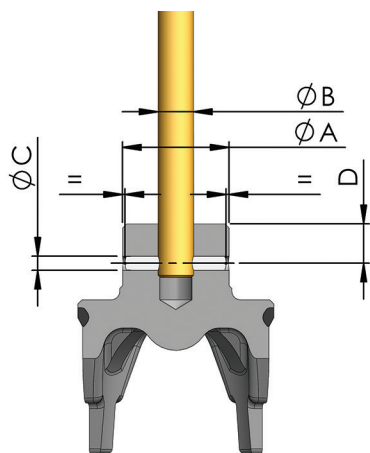


Figure 9 - Plug Stem Pinning

Table 1 - Plug Stem Pinning

Valve Size		Plug Shank Diameter A		Plug Stem Diameter B		Pin Hole Diameter C		D	
NPS	DN	in.	mm	in.	mm	in.	mm	in.	mm
1.5	40	0.89	22.5	0.5	12.70	0.188	4.78	0.551	14
3 - 4	80 - 100	1.5	38.1	0.5	12.70	0.188	4.78	0.551	14
6	150	1.57	40	0.75	19.05	0.250	6.35	0.827	21

11. Assembly Torque Requirements

Table 2 - Seat Ring Torque

Valve Size		Seat ring Thread Diameter	Torque	
NPS	DN	(in.)	(FT-LBS)	(m.daN)
0.5	15	1.25	60	8
0.75	20	1.25	60	8
1	25	1.25	60	8
1.5	40	2.125	200	27
2	50	2.125	200	27
3	80	3.25	720	98
4	100	4.25	1080	146
6	150	5.75	2750	373

Table 3 - Body and Bonnet Bolting

Valve Size		ASME Class	Stud Size	Stud Qty	Body/Bonnet: All Material Bolt Materials: ASME A193 Gr B7 ASTM A194 Gr 2H	
					Torque	
NPS	DN				(FT-LBS)	(m.daN)
0.5 - 1	15 - 25	150 - 300	1/2 - 13	4	23.6	3.2
1.5 - 2	40 - 50		1/2 - 13	4	27.3	3.7
3	80		5/8 - 11	6	53.1	7.2
4	100		5/8 - 11	8	57.5	7.8
6	150		5/8 - 11	12	57.5	7.8

Notes:

1. Do not exceed maximum torque values listed.
2. Tighten in increments until required torque levels are reached.
3. Reject assembly if metal-to-metal contact is not achieved after reaching maximum torque.
4. Torque requirements shown are for standard B7 studs and 2H nuts.

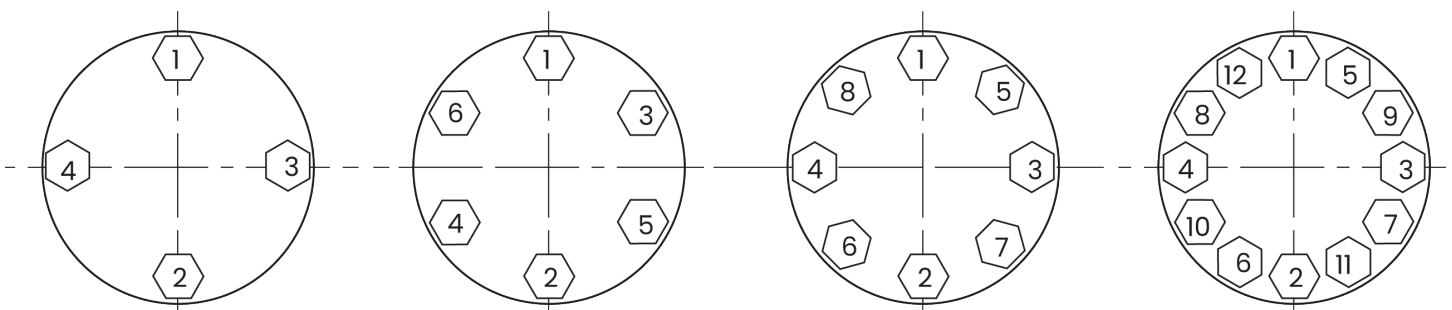
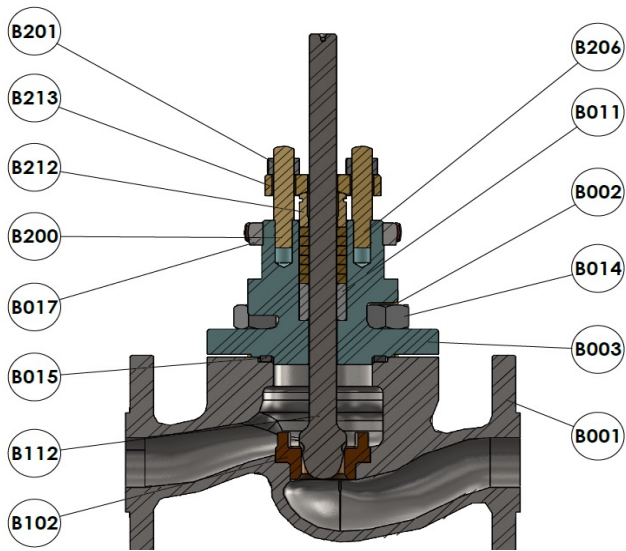
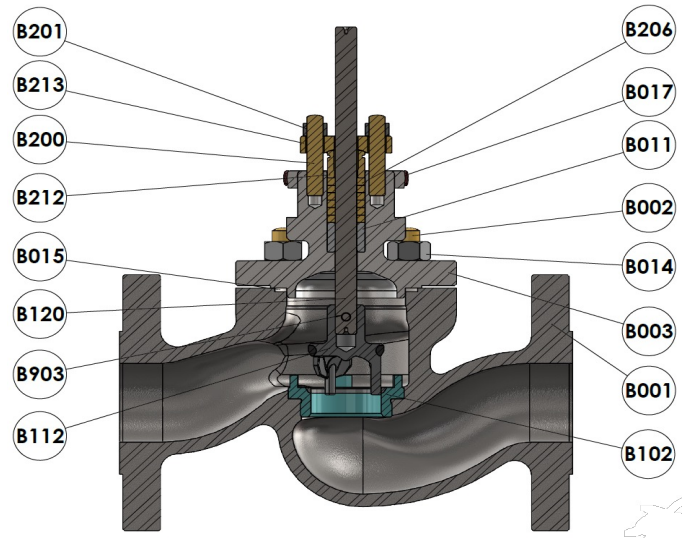


Figure 10 - Bolting Torques and Tightening Sequence



**Figure 11 - Threaded Seat Ring
Contoured Plug**

NPS 0.5" to 3" (when orifice ≤ 25.4mm [1 inch])



**Figure 12 - Threaded Seat Ring
V-Port Plug**

NPS 1.5" to 6" (when orifice > 25.4mm [1 inch])


23005 Series PXR Version without Bellow Seals

Parts Reference

Ref.	Part Name
B001	Valve Body
B002	Body Stud
B003	Valve Bonnet
B011	Guide Bushing
B014	Body Stud Nut
B015 ●	Body Gasket
B017	Drive Nut
B102 ●	Seat Ring


● Recommended spare parts

Ref.	Part Name
B112 ●	Plug
B120 ●	Plug Stem
B200	Packing Flange Stud
B201	Packing Flange Stud Nut
B206 ●	Packing
B212	Packing Follower
B213	Packing Flange
B903 ●	Plug Pin

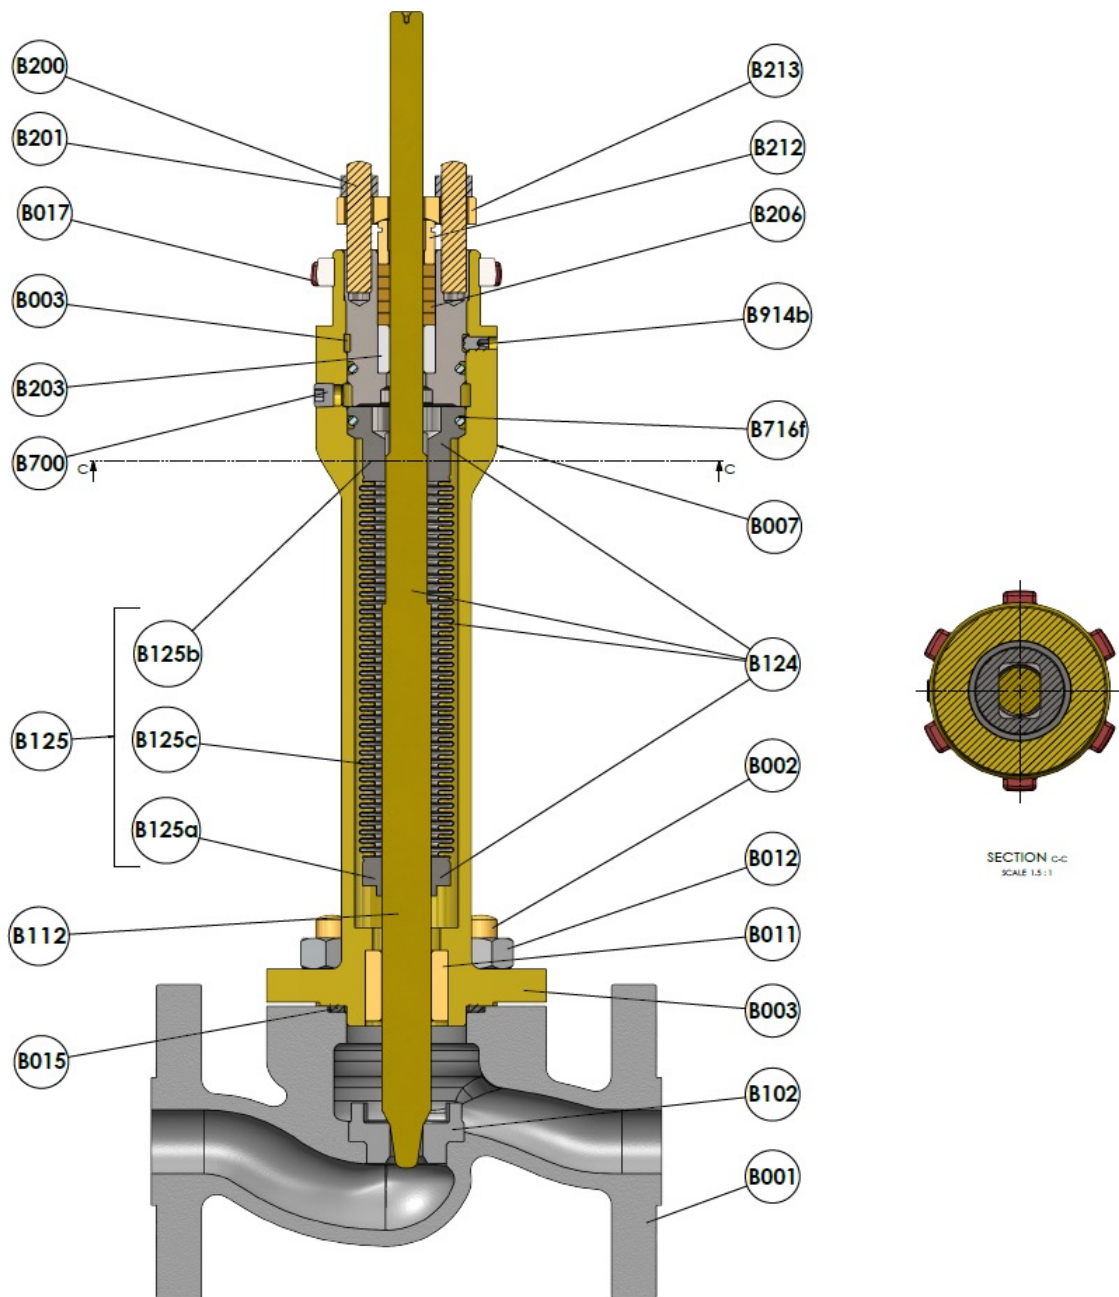


Bellows Seal Design - 0.5" to 4" when orifice size < 0.812"

Figure 13a - PXR 23005 Series Bellows Seal Design

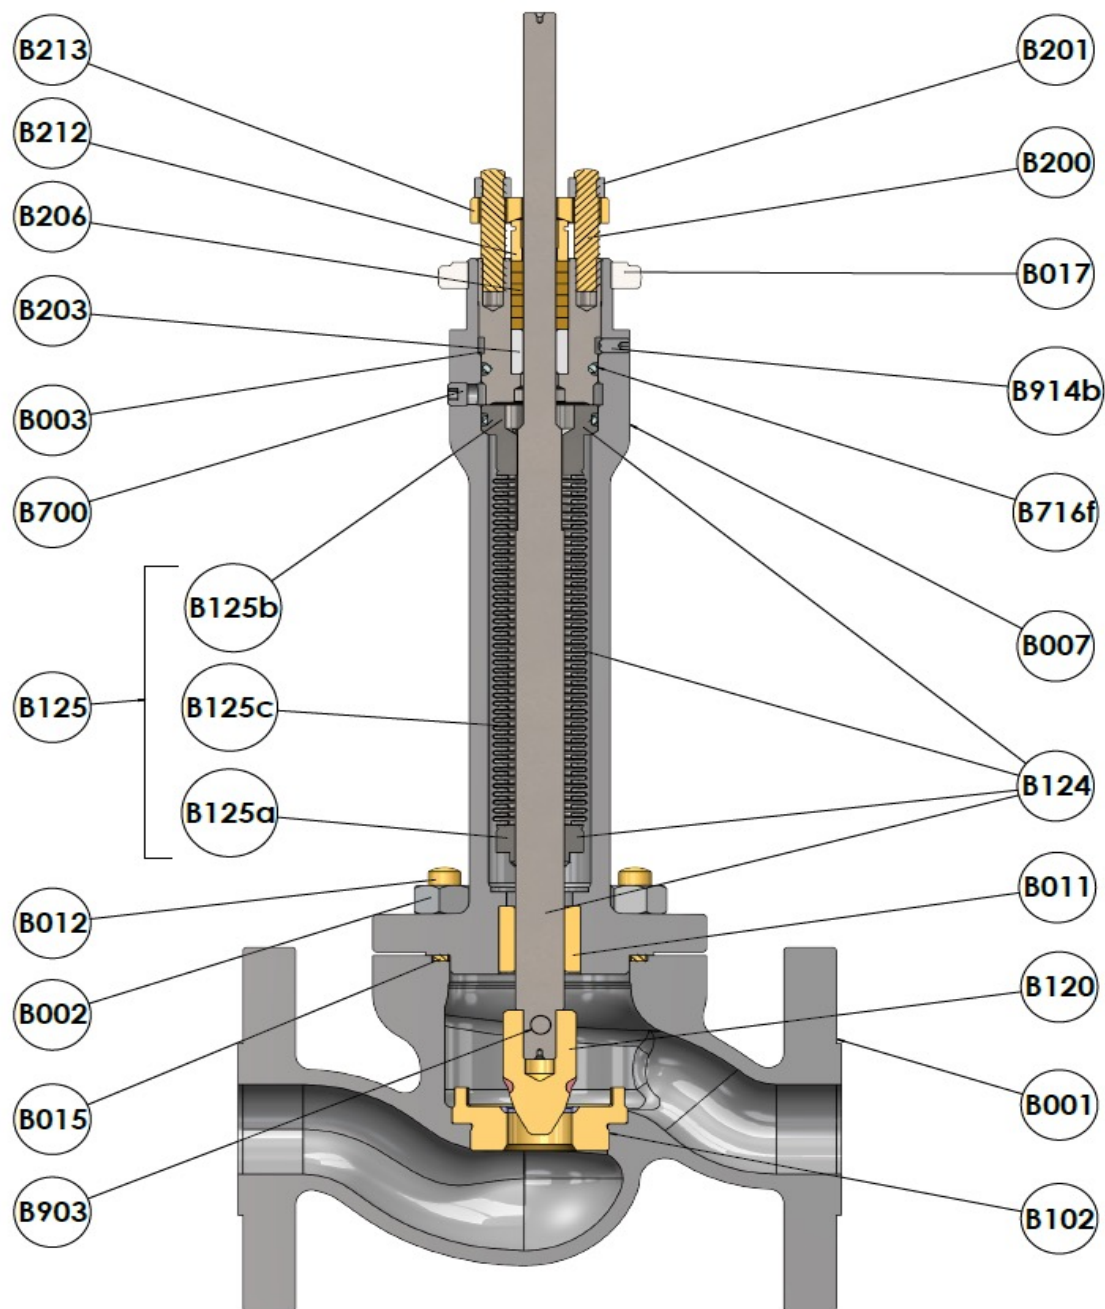

Bellows Seal Design - 0.5" to 4" when orifice size = 0.812" and 0.994"

Figure 13b - PXR 23005 Series Bellows Seal Design

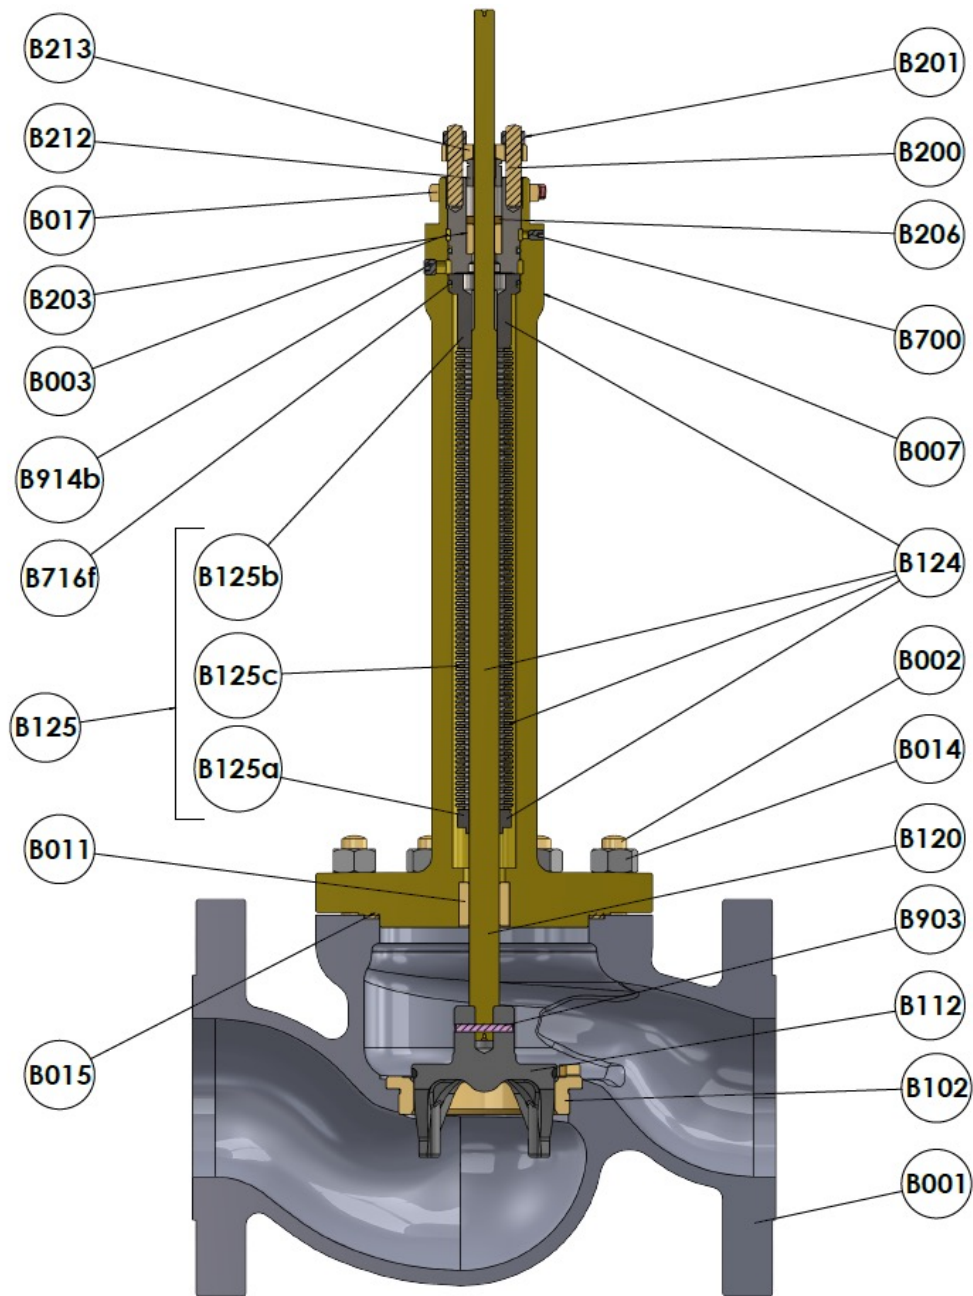

Bellows Seal Design - 0.5" to 4" when orifice size >1"

Figure 13c - PXR 23005 Series Bellows Seal Design


Parts Reference

Ref.	Part Name
B001	Valve Body
B002	Body Stud
B003	Bonnet
B007	Bonnet Spud
B011	Guide Bushing
B014	Body Stud Nut
B015 ●	Body Gasket
B017	Drive Nut
B102 ●	Seat Ring
B112 ●	Plug
B120 ●	Plug Stem
B124	Bellows & Plug Stem S/A
B125	Bellows S/A
B125a	Lower Adaptor
B125b	Upper Adaptor
B125c	Bellows
B200	Packing Flange Stud
B201	Packing Flange Stud Nut
B203	Guide Bushing
B206 ●	Packing
B212	Packing Follower
B213	Packing Flange
B700	1/8" Npt Plug
B716f	O-Ring
B903 ●	Plug Pin
B914b	Hex Socket Set Screw

● Recommended spare parts

Find the nearest local Channel Partner in your area:

valves.bakerhughes.com/contact-us

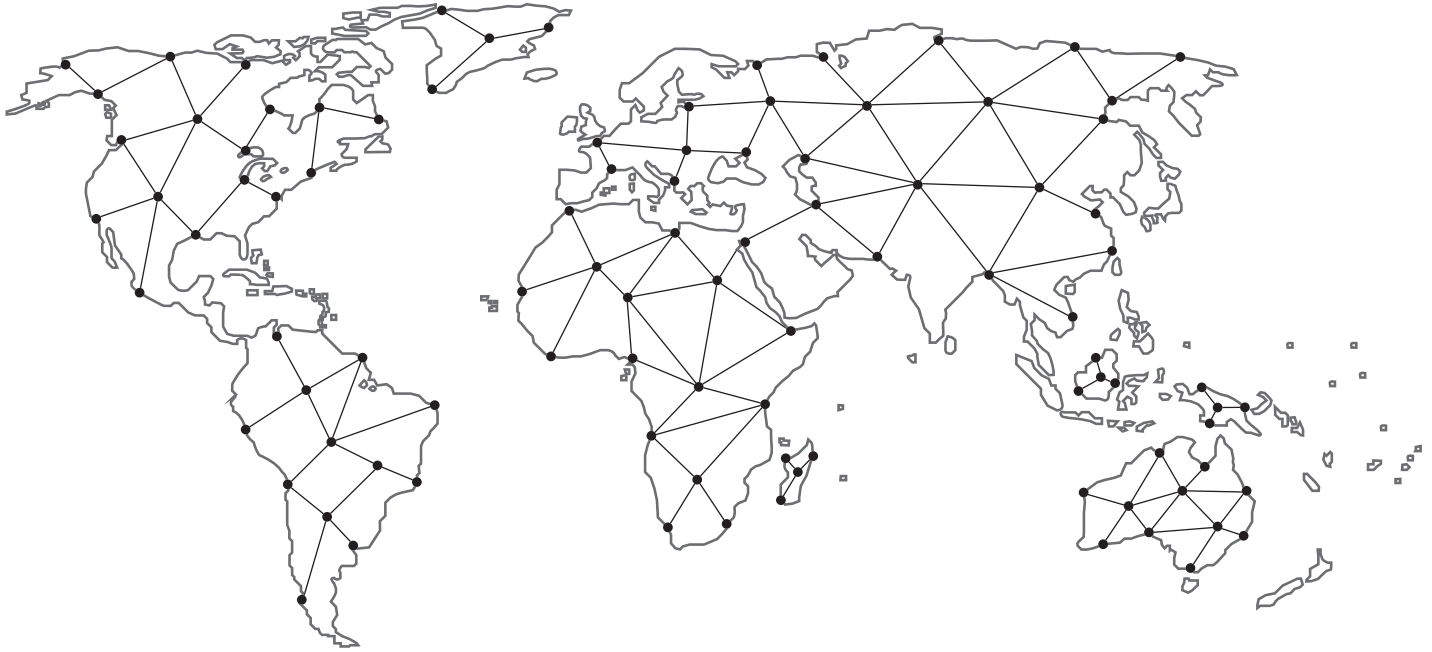

Tech Field Support and Warranty:

Phone: +1-866-827-5378

valvesupport@bakerhughes.com

valves.bakerhughes.com

Copyright 2026 Baker Hughes Company. All rights reserved. Baker Hughes provides this information on an "as is" basis for general information purposes. Baker Hughes does not make any representation as to the accuracy or completeness of the information and makes no warranties of any kind, specific, implied or oral, to the fullest extent permissible by law, including those of merchantability and fitness for a particular purpose or use. Baker Hughes hereby disclaims any and all liability for any direct, indirect, consequential or special damages, claims for lost profits, or third party claims arising from the use of the information, whether a claim is asserted in contract, tort, or otherwise. Baker Hughes reserves the right to make changes in specifications and features shown herein, or discontinue the product described at any time without notice or obligation. Contact your Baker Hughes representative for the most current information. The Baker Hughes logo, Masoneilan, and PXR are trademarks of Baker Hughes Company. Other company names and product names used in this document are the registered trademarks or trademarks of their respective owners.



bakerhughes.com