Masoneilan

a Baker Hughes business

84003 Series SteamForm™

Trim Installation Guide for Horizontally Installed SteamForm Valves with Bolted Bonnet (model numbers ending in "AB")

Instruction Manual (Rev. A)



THESE INSTRUCTIONS PROVIDE THE CUSTOMER/OPERATOR WITH IMPORTANT PROJECT- SPECIFIC REFERENCE INFORMATION IN ADDITION TO THE CUSTOMER/ OPERATOR'S NORMAL OPERATION AND MAINTENANCE PROCEDURES. SINCE OPERATION AND MAINTENANCE PHILOSOPHIES VARY, BAKER HUGHES COMPANY (AND ITS SUBSIDIARIES AND AFFILIATES) DOES NOT ATTEMPT TO DICTATE SPECIFIC PROCEDURES, BUT TO PROVIDE BASIC LIMITATIONS AND REQUIREMENTS CREATED BY THE TYPE OF EQUIPMENT PROVIDED.

THESE INSTRUCTIONS ASSUME THAT OPERATORS ALREADY HAVE A GENERAL UNDERSTANDING OF THE REQUIREMENTS FOR SAFE OPERATION OF MECHANICAL AND ELECTRICAL EQUIPMENT IN POTENTIALLY HAZARDOUS ENVIRONMENTS. THEREFORE. THESE INSTRUCTIONS SHOULD BE INTERPRETED AND APPLIED IN CONJUNCTION WITH THE SAFETY RULES AND REGULATIONS APPLICABLE AT THE SITE AND THE PARTICULAR REQUIREMENTS FOR OPERATION OF OTHER EQUIPMENT AT THE SITE.

THESE INSTRUCTIONS DO NOT PURPORT TO COVER ALL DETAILS OR VARIATIONS IN EQUIPMENT NOR TO PROVIDE FOR EVERY POSSIBLE CONTINGENCY TO BE MET IN CONNECTION WITH INSTALLATION, OPERATION OR MAINTENANCE. SHOULD FURTHER INFORMATION BE DESIRED OR SHOULD PARTICULAR PROBLEMS ARISE WHICH ARE NOT COVERED SUFFICIENTLY FOR THE CUSTOMER/OPERATOR'S PURPOSES THE MATTER SHOULD BE REFERRED TO BAKER HUGHES.

THE RIGHTS, OBLIGATIONS AND LIABILITIES OF BAKER HUGHES AND THE CUSTOMER/ OPERATOR ARE STRICTLY LIMITED TO THOSE EXPRESSLY PROVIDED IN THE CONTRACT RELATING TO THE SUPPLY OF THE EQUIPMENT. NO ADDITIONAL REPRESENTATIONS OR WARRANTIES BY BAKER HUGHES REGARDING THE EQUIPMENT OR ITS USE ARE GIVEN OR IMPLIED BY THE ISSUE OF THESE INSTRUCTIONS.

THESE INSTRUCTIONS ARE FURNISHED TO THE CUSTOMER/OPERATOR SOLELY TO ASSIST IN THE INSTALLATION, TESTING, OPERATION, AND/OR MAINTENANCE OF THE EQUIPMENT DESCRIBED. THIS DOCUMENT SHALL NOT BE REPRODUCED IN WHOLE OR IN PART WITHOUT THE WRITTEN APPROVAL OF BAKER HUGHES.

FOR SAFETY INFORMATION, REFER TO BAKER HUGHES MASONEILAN 84003 SERIES STEAMFORM INSTRUCTION MANUAL (BHMN-84003-IOM-31013C-0620)

Contents

Sa	ıfety Guidelines	4	
ΑŁ	out this Manual	4	
W	arranty	4	
In	nstallation Kit Contents		
1.	Secure Installation Cradle for Trim Assembly	7	
2.	Install Diffuser into Cradle	7	
3.	Locate cage and Plug Subassembly Install Lifting Rings onto Cage.	8	
4.	Install Cage Over Plug Subassembly	8	
5.	Install Lifting Rings onto Plug Subassembly	9	
6.	Lift Plug Subassembly and Cage and Position onto Seat Ring Diffuser	9	
7.	Secure the Cage to the Diffuser Using Set Screws	. 10	
8.	Lift Plug Subassembly, Cage and Diffuser as One Piece (Cartridge)	. 10	
9.	Install Seat Ring Gasket	11	
10	. Remove Installation Cradle from Grating and Install onto Valve Body	. 12	
11	. Lift Trim Assembly Using Lift Points on Plug. Place into Assembly Cradle	. 13	
12	. Lower Trim Assembly (Cartridge) into the Cradle	. 14	
13	. Slide Trim Assembly (Cartridge) into Valve Body	. 15	
14	. Slide Trim Fully into Valve Body	. 16	
15	. Push Plug Subassembly Fully into Cage	. 16	
16	. Remove Cradle from Assembly	. 17	
17	. Install Remaining Valve Components Per Valve Assembly	. 17	
18	Install Packing Components and Actuator	. 18	

About this Manual

- The information in this manual is subject to change without prior notice.
- The information contained in this manual, in whole or part, shall not be transcribed or copied without Baker Hughes's written permission.
- Please report any errors or questions about the information in this manual to your local supplier.
- These instructions are written specifically for the 84003 SteamForm[™] valve with bolted bonnet, and do not apply for other valves outside of this product line.

Warranty

Items sold by Baker Hughes are warranted to be free from defects in materials and workmanship for a period of one year from the date of shipment provided said items are used according to Baker Hughes recommended usages. Baker Hughes reserves the right to discontinue manufacture of any product or change product materials, design or specifications without notice.

Note - prior to installation:

- The valve must be installed, put into service and maintained by qualified and competent professionals who have undergone suitable training.
- All surrounding pipelines must be thoroughly flushed to ensure all entrained debris has been removed from the system.
- Under certain operating conditions, the use of damaged equipment could cause a degradation of the performance of the system which may lead to personal injury or death.
- Changes to specifications, structure, and components used may not lead to the revision of this manual unless such changes affect the function and performance of the product.

Safety Guidelines



This is the safety alert symbol. It alerts you to potential personal injury hazards. Obey all safety messages that follow this symbol to avoid possible injury or death.



This symbol indicates a potentially hazardous situation, which if not avoided, could result in serious injury or death.



This symbol indicates a potentially hazardous situation, which if not avoided, could result in serious injury.




This symbol indicates a potentially hazardous situation, which if not avoided, could result in minor or moderate injury.



When used without the safety alert symbol **1**, indicates a potentially hazardous situation, which if not avoided, could result in property damage.

Note: Indicates important facts and conditions.

Numbering System

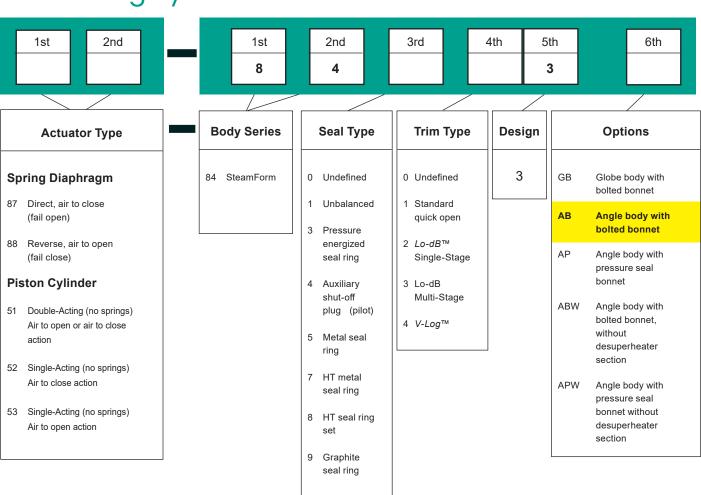


Installation Kit Contents

Part	Description	Qty
	Installation Cradle	1
	Hold-Down Tie	3
	Hold-Down Bolt	6
	Hold-Down Nut	6
	Cradle Adjustment Bolts	4
	Spare Set of Trim Set Screws	8
	Swivel Hoist Rings for Diffuser	2
	Swivel Hoist Rings for Cage	2

1. Secure Installation Cradle for Trim Assembly

Position installation cradle vertically as shown in Figure 1. Use hold-down ties and bolts to secure the installation cradle to the grating as shown in Figure 2.

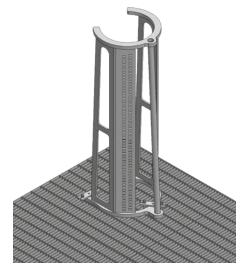



To prevent risk of falling parts, ensure no personnel is below grating during installation.

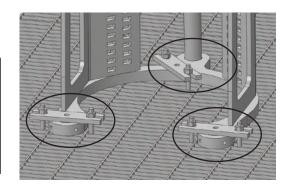


Figure 2 - Hold-down Ties and Bolts

Figure 1 - 84003 Installation Cradle

2. Install Diffuser into Cradle

Install seat ring diffuser into the top of the installation cradle as shown in Figure 3 using the appropriate hoist rings provided with the installation kit as indicated in Figure 4. Once secured into cradle, remove the lifting rings from the seat ring diffuser.

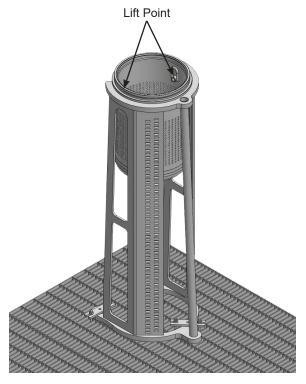


Figure 3 - Seat Ring Diffuser




Diffuser Lifting Holes Here, Use

Swivel Type Hoist Rings

Figure 4 - Swivel Type Hoist Rings

3. Locate cage and Plug Subassembly, and position near the installation cradle using the provided lift rings. Install Lifting Rings onto Cage.

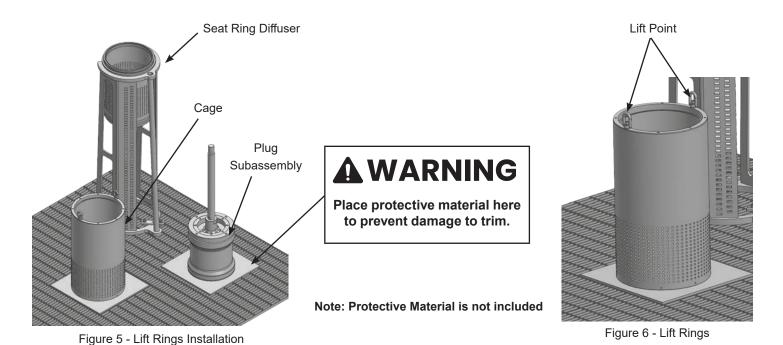

Install Cage Over Plug Subassembly

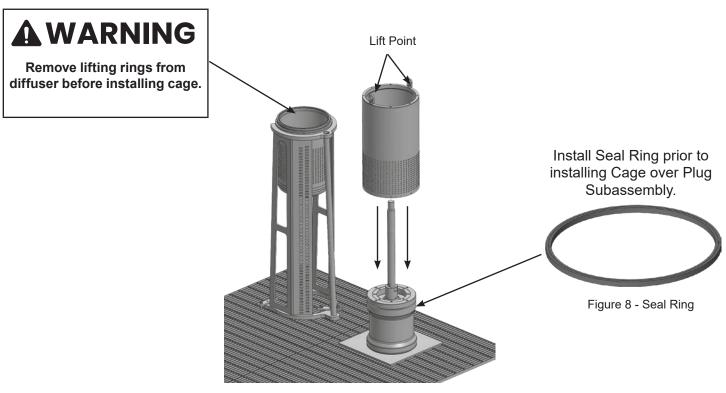


Figure 7 - Cage Over Plug Subassembly

5. Install Lifting Rings onto Plug Subassembly

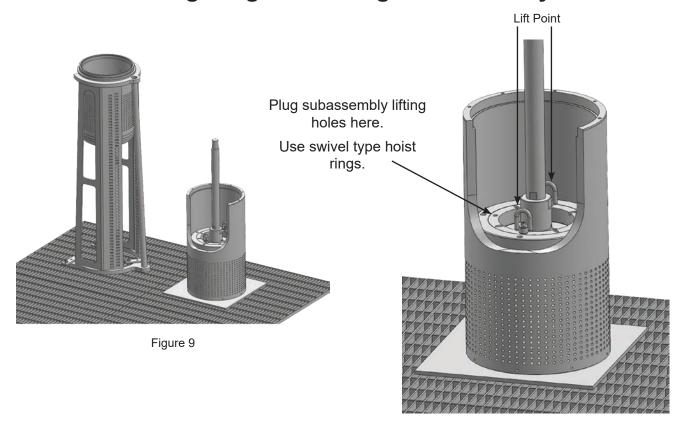


Figure 10 - Plug Subassembly Lifting Holes

6. Lift Plug Subassembly and Cage and Position onto Seat Ring Diffuser

Lift Point

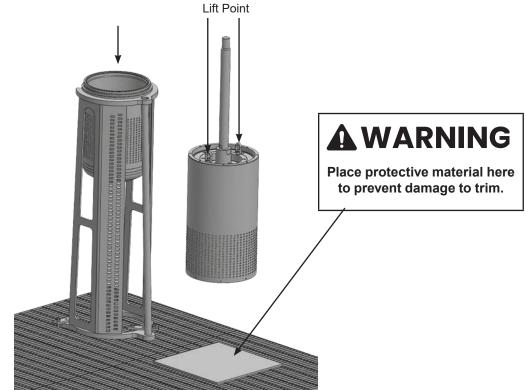


Figure 11 - Seat Ring Diffuser Placement

7. Secure the Cage to the Diffuser Using Set Screws

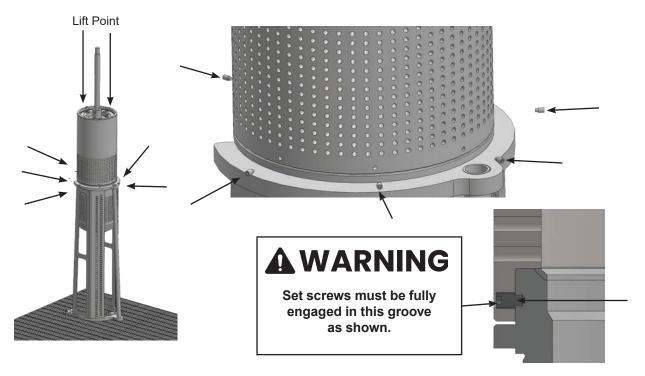


Figure 12 - Cage to Diffuser Set Screws

Lift Plug Subassembly, Cage and Diffuser as One Piece 8. (Cartridge)

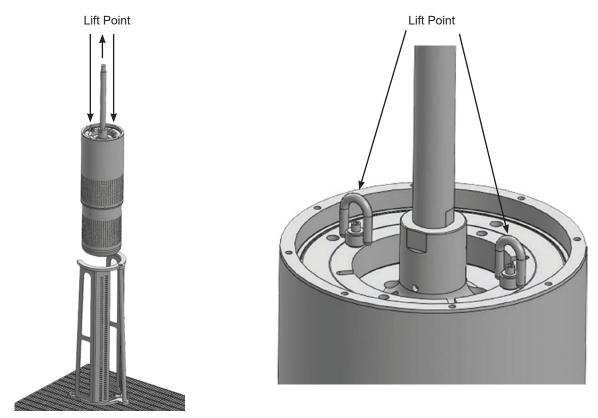


Figure 13 - Lift Plug Subassembly, Cage and Diffuser

Install Seat Ring Gasket



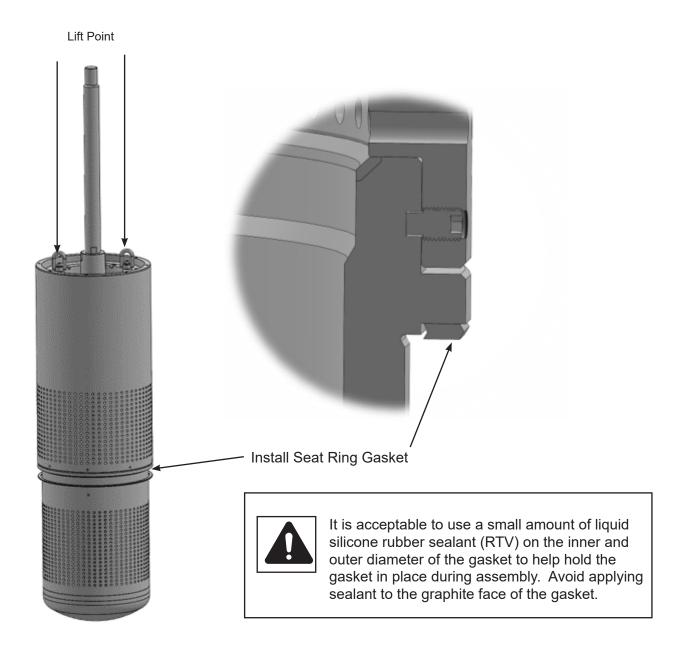


Figure 14 - Installing Seat Ring Gasket

10. Remove Installation Cradle from Grating and Install onto **Valve Body**

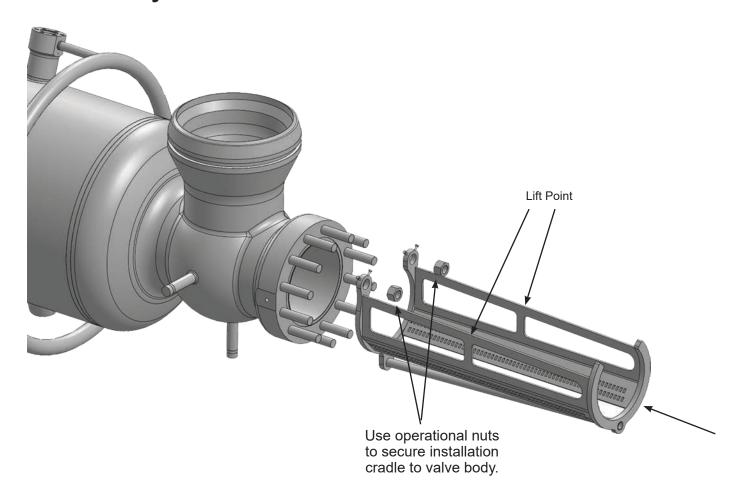

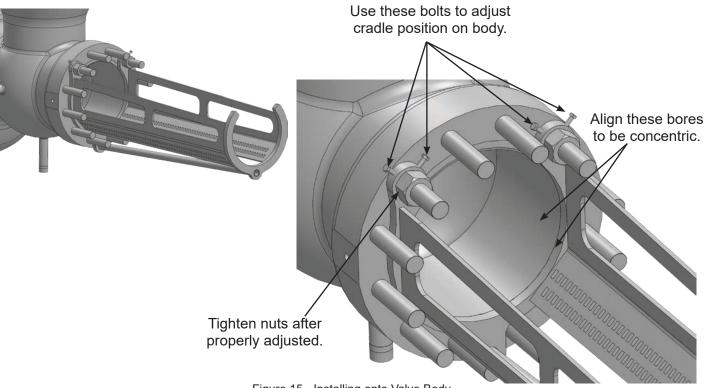

11. Lift Trim Assembly Using Lift Points on Plug. Place into Assembly Cradle.

* Ensure seat ring gasket is installed prior to installing trim, see section 9.

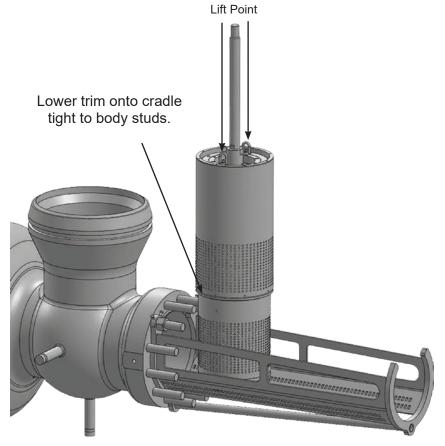


Figure 16 - Placement into Assembly Cradle

12. Lower Trim Assembly (Cartridge) into the Cradle

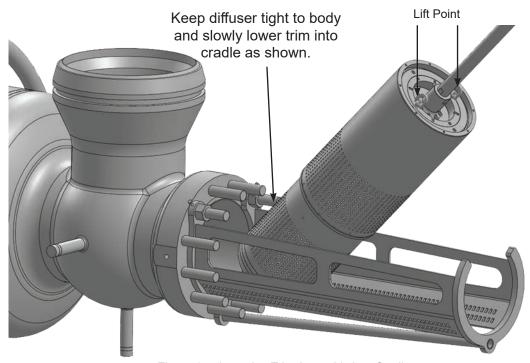


Figure 17 - Lowering Trim Assembly into Cradle

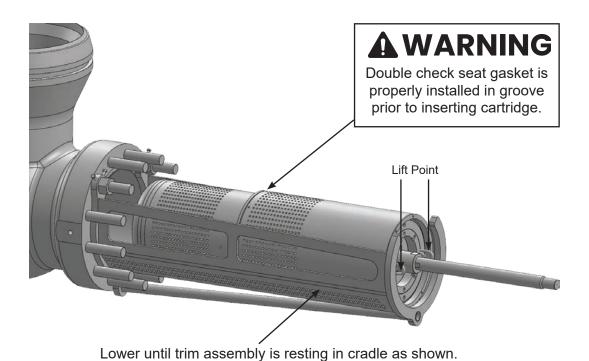


Figure 18 - Lowering Trim Assembly into Cradle

13. Slide Trim Assembly (Cartridge) into Valve Body


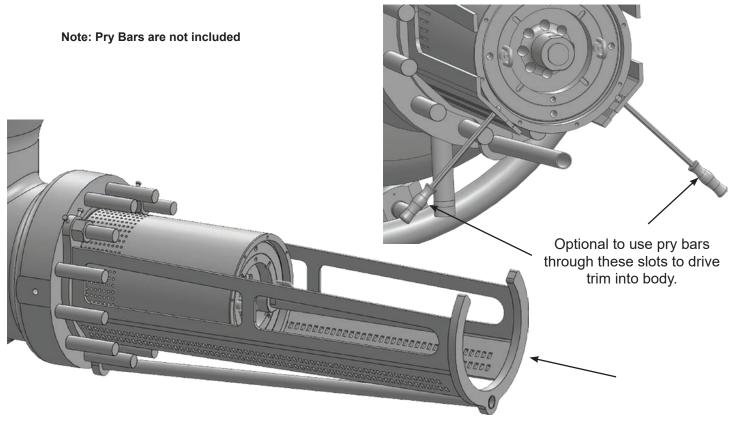


Figure 19 - Slide Trim Assembly into Valve Body

14. Slide Trim Fully into Valve Body.

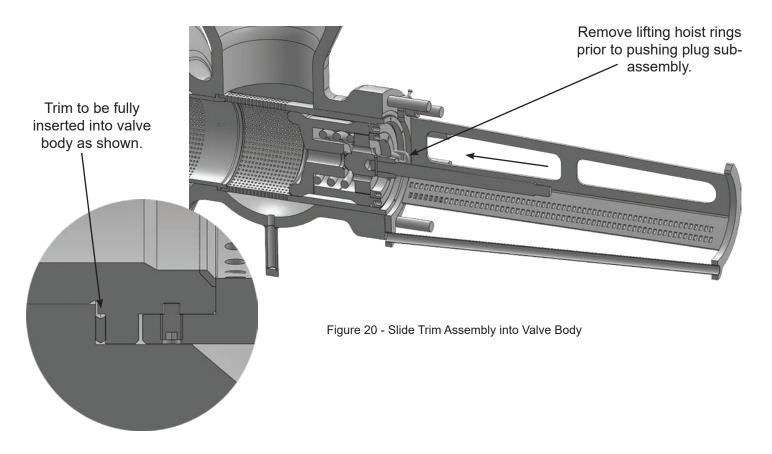

15. Push Plug Subassembly Fully into Cage.

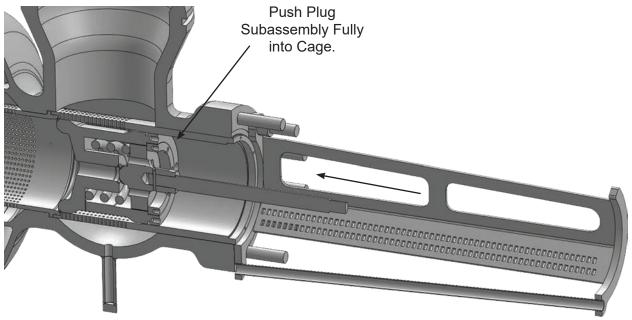


Figure 21 - Plug Assembly into Cage

16. Remove Cradle from Assembly



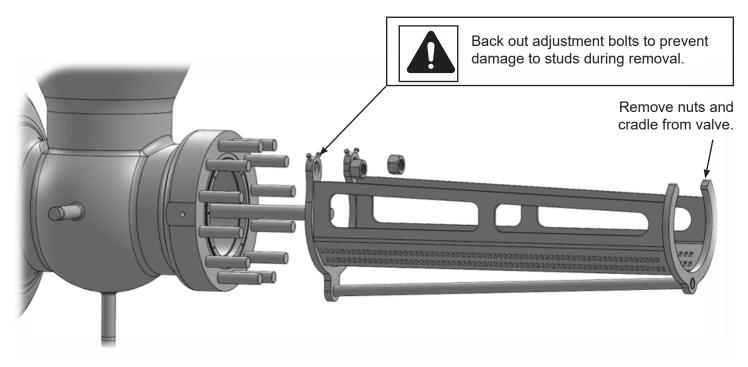


Figure 22 - Removing Cradle from Assembly

17. Install Remaining Valve Components Per Valve Assembly **Drawing**

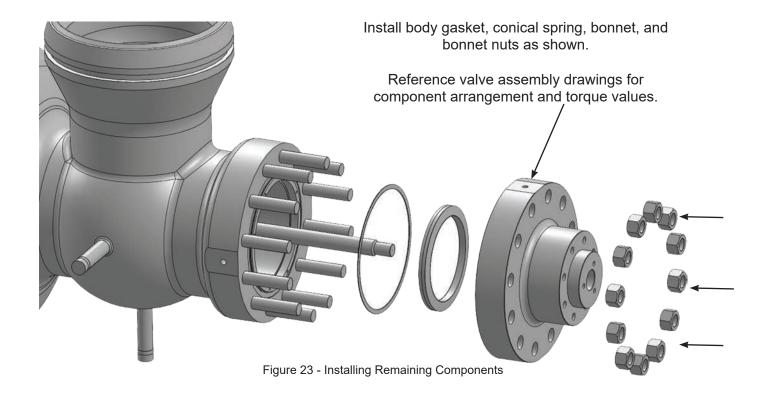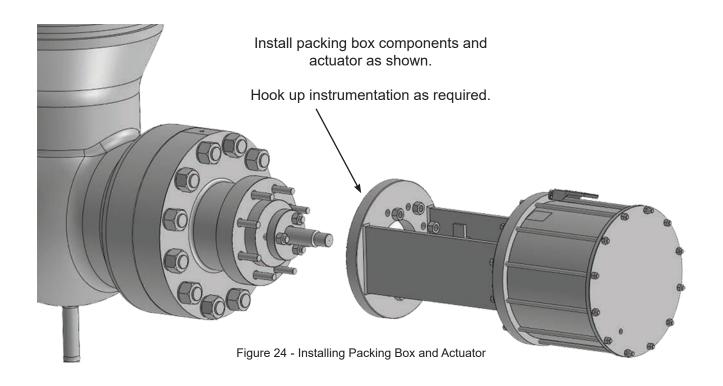

18. Install Packing Components and Actuator



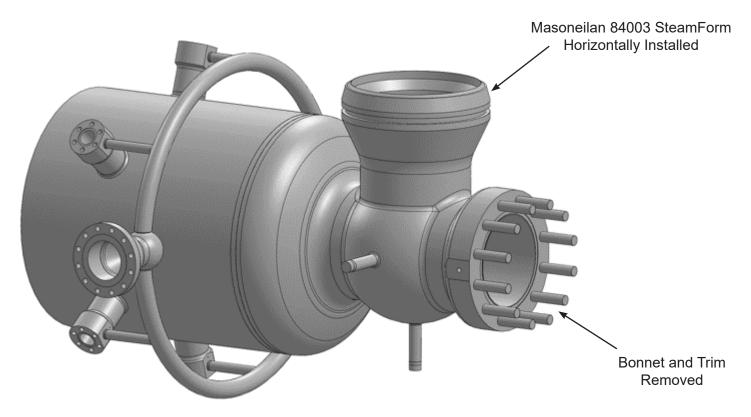



Figure 25 - 84003 SteamForm Horizontally Installed

** USE THIS GUIDE IN REVERSE ORDER FOR VALVE DISASSEMBLY**

Notes:	

Find the nearest local Channel Partner in your area:

valves.bakerhughes.com/contact-us

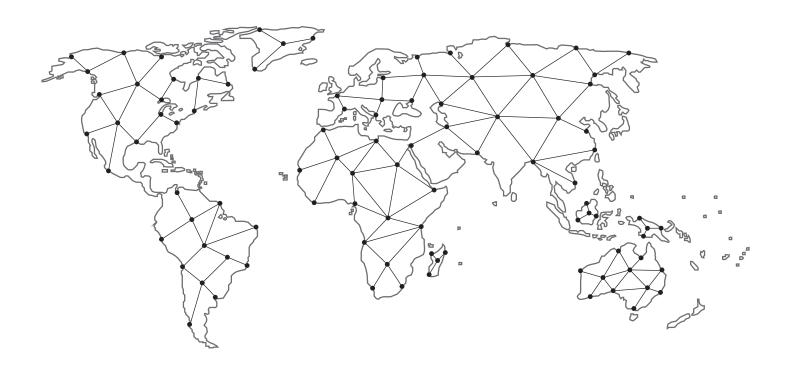

Tech Field Support & Warranty:

Phone: +1-866-827-5378

valvesupport@bakerhughes.com

valves.bakerhughes.com

Copyright 2024 Baker Hughes Company. All rights reserved. Baker Hughes provides this information on an "as is" basis for general information purposes. Baker Hughes does not make any representation as to the accuracy or completeness of the information and makes no warranties of any kind, specific, implied or oral, to the fullest extent permissible by law, including those of merchantability and fitness for a particular purpose or use. Baker Hughes hereby disclaims any and all liability for any direct, indirect, consequential or special damages, claims for lost profits, or third party claims arising from the use of the information, whether a claim is asserted in contract, tort, or otherwise. Baker Hughes reserves the right to make changes in specifications and features shown herein, or discontinue the product described at any time without notice or obligation. Contact your Baker Hughes representative for the most current information. The Baker Hughes logo, and Masoneilan are trademarks of Baker Hughes Company. Other company names and product names used in this document are the registered trademarks or trademarks of their respective owners.

