
# Datasheet

# Bently Nevada Machinery Condition Monitoring

141612 Rev. T

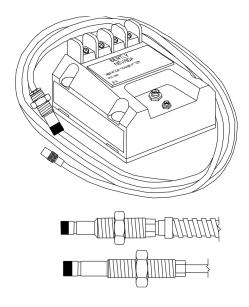

# **Description**

The 990 Vibration Transmitter is intended primarily for the original equipment manufacturers (OEMs) of centrifugal air compressors or small pumps, motors, or fans who prefer to provide a simple 4 to 20 mA proportional vibration signal as the input to their machinery control system.

The transmitter is a two-wire, loop-powered device that accepts input from our 3300 NSv proximity probe and its matching extension cable (available in 5 m and 7 m system length options).

The transmitter conditions the signal into appropriate peak-to-peak vibration amplitude engineering units, and provides this value as a proportional 4 to 20 mA industry-standard signal as the input to the control system where machinery protection alarming and logic occurs†.

The 990 transmitter provides the following notable features:

- Integrated Proximitor Sensor requires no external unit
- Non-isolated "PROX OUT" and "COM" terminals plus a coaxial connector to provide a dynamic vibration and gap voltage signal output for diagnostics.
- Non-interacting zero and span potentiometers under the Transmitter label supports loop adjustment.
- Test Input pin for quick verification of loop signal output, using a function generator as the input.
- A Not OK/Signal Defeat circuit prevents high outputs or false alarms due to a faulty proximity probe or loose connection.
- Choice of DIN-rail clips or bulkhead mounting screws as standard options simplifies mounting.





 Potted construction for high humidity (up to 100% condensing) environments.
 Compatibility with 3300 NSv proximity probe allows transducer installation in small areas with minimal clearance, typical of centrifugal air compressors. isolation between test equipment and the loop signal, and ensure that the installation maintains machinery protection integrity.

#### **Notes**

† Vibration transmitters have many limitations when compared to a continuous vibration monitoring system. They are a practical solution in some applications for measuring general vibration levels and are a valuable tool for overall vibration trending. However, they provide limited capability for machinery diagnostics using the vibration signal and do not capture dynamic vibration signals (used for diagnostics) in the event of a vibration alarm. While the transmitter is capable of peak vibration alarming and non-OK checking, the 4-20 mA signal cannot be used to determine the phase of vibration, and monitor functions such as gap alarms, phase alarms, Timed OK channel defeat, Danger Bypass, and Trip Multiply cannot be used. In addition, PLCs attached to the vibration transmitter can only provide peak-to-peak trending data and are not suitable for plant-wide diagnostic systems such as System 1 or Rule Paks.

‡ The 990 Vibration Transmitter's "Prox Out" coaxial connector provides a non-isolated dynamic transducer signal for machinery diagnostics. You can connect this signal directly to battery-powered or isolated test equipment to diagnose machinery problems. However, since the "PROX OUT" signal is not isolated from the 4 to 20 mA loop signal, an interface is available (and strongly recommended) for signal isolation. The 990/991 Test Adapter conditions the 990 Transmitter's "PROX OUT" signal for use with acpowered test equipment. It also inverts and isolates the 990's transducer signal, making it suitable for equipment such as oscilloscopes and analyzers, and preserving industrystandard conventions for signal polarity. We strongly recommend the use of this test adapter for all applications to maintain



# **Specifications**

Unless otherwise noted, the following specifications apply at +22°C (+72°F) using a 3300 NSv Probe and Extension Cable, and an AISI 4140 steel target.



These specifications also apply to 990 with modifications 147202-01 (RMOD 4140 3300XL 8MM 5M) and 165335-01 (MOD 4140 3300 XL 8MM 9M).

# **Electrical**

Input	Accepts 1 non-contacting 3300 NSv Proximity Probe and extension cable.
Power	Requires +12 to +35 Vdc input at the transmitter terminal.
4 to 20 mA signal output	4 to 20 mAdc over specified full- scale range in 2-wire configuration.
4 to 20 mA loop accuracy	Within $\pm 1.5\%$ over specified fullscale range. Accuracy is rated from the TEST signal input to the voltage measured across a 250 $\Omega$ loop resistance. The $\pm 1.5\%$ error is in addition to the Prox Out Incremental Scale Factor.
Probe gap	Probe must be gapped between 0.5 and 1.75 mm (20 and 55 mils) from target to ensure full scale range.
Maximum loop resistance	1,000 Ω including cable at 35 Vdc.
Current limiting	23 mA typical.
Zero and span	Non-interacting external adjustments.
NOT OK/signal defeat	Signal output will go to less than 3.6 mA within 100 µs after a Not OK condition occurs. Signal output is restored within 2-3 seconds after the Not OK condition is removed.

Power-up inhibit	Signal output stays at less than 3.6 mA (NOT OK) for 2 to 3 seconds after power is applied. The purpose is to signal that the device is not yet ready. Transients may be observed when device goes O.K.
Proximitor sensor output	Compatible with ungrounded, portable test equipment. When using grounded, ac-powered test equipment, use the 122115-01 Test Adapter for signal isolation.
Output impedance	Prox Out has a 10 k $\Omega$ output impedance calibrated for a 10 M $\Omega$ load.
Prox out linear range	1.4 mm (55 mils). Begins at approximately 0.25 mm (10 mils) from target surface.
Prox Out incremental scale factor	7.87 mV/µm (200 mV/mil) ±6.5% typical including interchangeability errors when measured in increments of 0.25 mm (10 mils) over the linear range using a flat 30 mm (1.2 inch) target. Worst case 7.87 mV/µm ±10%. Typical Noise Level: 50 mV/pp.
Temperature stability	Incremental scale factor remains within ±10% of 7.87 mV/µm (200 mV/mil) from 0°C to +70°C (+32°F to +158°F).
Frequency response	5 Hz to 6,000 Hz +0, 3 dB.
Minimum target size	9.5 mm (0.375 in) diameter.
Leadwire length	Maximum for Proximitor Sensor Output (BNC connector), maximum cable distance is 3 meters (10 feet).
Non- Hazardous, Zone 2 or Div 2 Hazardous area locations	Power Supply: 28 V



### **Environmental Limits**

Transmitter Temperature	
Operating temperature	-35°C to +85°C (-31°F to +185°F)
Storage temperature	-52°C to +100°C (-62°F to +212°F).

Probe Temperature		
Operating	-52°C to +177°C	
temperature	(-62°F to +351°F)	
Storage	-52°C to +177°C	
temperature	(-62°F to +351°F)	
Relative humidity	100% condensing, non-submerged, with protection of coaxial connectors.	

#### Mechanical

henylene sulfide (PPS).
03 or 304 Stainless Steel (SST).
coaxial, fluoroethylene ylene (FEP) insulated.
ole AISI 302 SST with optional uter jacket.
(50 lbf) probe case to probe maximum.
kg (0.9 lbm).
kg (1.8 lbm) typical.

# **Thread Engagement Limits**

Probe Case Thread	Maximum Length of Thread Engagement	
1/4-28	0.375 in	
3/8-24	0.563 in	

Probe Case Thread	Maximum Length of Thread Engagement	
M8x1	12 mm	
M10x1	15 mm	



Maximum thread engagement lengths are per the industry standard of 1.5 times the nominal thread diameter. A fit class matching that of the external probe thread is assumed for all internal threads. Applications with thread engagement lengths exceeding the values in the table above may exhibit binding during installation. Contact your Bently Nevada representative if you require probe thread engagement lengths exceeding the values above. Bently Nevada does not replace proximity probes under warranty due to excessive thread engagement lengths.



When drilling and tapping a mounting hole for a 1/4-28 probe, a #3 or larger tap drill is recommended.



# **Compliance and Certifications**

# **FCC**

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- This device may not cause harmful interference.
- This device must accept any interference received, including interference that may cause undesired operation.

#### **EMC**

EN 61000-6-2

EN 61000-6-4

EMC Directive 2014/30/EU

#### **ATEX**

ATEX Directive 2014/34/EU

#### **RoHS**

RoHS Directive 2011/65/EU

### **Maritime**

ABS 2009 Steel Vessels Rules

1-1-4/7.7,4-8-3/1.11.1,4-9-7/13



# **Hazardous Area Approvals**



For the detailed listing of country and product-specific approvals, refer to the *Approvals Quick Reference Guide* (108M1756).

For additional technical documentation, please log in to bntechsupport.com and access the Bently Nevada Media Library.

Pi [0.84 W]	Po [0.17 W]	Po [0.8 W]
Ci [20 nF]	Co [80 nF]	Co [27.3 nF]
Li [10 μH]	Lo [1 H]	Lo [5.3 mH]

#### **cNRTLus**

Class I, Div 2 Groups A, B, C, D

T5@ Ta [+85°C, Type 4]

Installed per Drawing 128838

# ATEX/IECEX



II 1 G Ex ia IIC T4 Ga T4 @ Ta = -35°C to +85°C



II 3 G Ex nA IIC T4 Gc T4 @ Ta= -35 °C to + 85°C

# **Entity Parameters**

#### Zone 2

Power Supply: 28 V

### Zone 0/1

Terminal blocks E1-E2 "Power supply 4-20 mA"	Terminal blocks E3-E4 and connector J2 "Proximitor"	Connector J3 "Probe"
Ui [28 V]	Uo [28 V]	Uo [28 V]
li [120 mA]	lo [6 mA]	lo [100 mA]



# **Ordering Information**



For the detailed listing of country and product-specific approvals, refer to the *Approvals Quick Reference Guide* (108M1756).

For additional technical documentation, please log in to bntechsupport.com and access the Bently Nevada Media Library.

#### 990-AA-BB-CC-DD

A: Full-scale Option		
04	0-4 mils pp (0-100 μm pp)	
05	0-5 mils pp (0-125 μm pp)	
B: System	Length Option	
50	5.0 metres (16.4 feet)	
70	7.0 metres (23.0 feet)	
C: Mounting Option		
01	35 mm DIN rail clips	
02	Bulkhead screws	
03	DIN clips and screws	
D:Agency A	D:Agency Approval Option	
00	Not required	
01	CSA Division 2	
05	CSA Division 2, ATEX Zone 0, ATEX Zone 2 and includes ABS maritime approval	

# 3300 NSv Proximity Probes, Standard

### Part Number-AA-BB-CC-DD-EE

330901	3300 NSv Probe, 1/4-28 UNF thread, without armor.
330902	3300 NSv Probe, 1/4-28 UNF thread, with armor.
330908	3300 NSv Probe, 3/8-24 UNF thread, without armor.
330909	3300 NSv Probe, 3/8-24 UNF thread, with armor.

# **A:Unthreaded Length Option**



Unthreaded length must be at least 0.7 inches less than the case length.

Order in inc	rements of 0.1 in	
Length conf	igurations in the second secon	
Minimum le	ngth: 0 in	
Maximum le	ength: 9.2 in	
Example: 04	<b>↓</b> = 0.4 in	
B: Case Len	gth Option	
Order in inc	rements of 0.1 in	
Minimum length: 0.8 in		
Maximum length: 9.9 in		
Example: <b>35</b> = 3.5 in		
C: Total Length Option		
05	0.5 metre (1.67 feet)	
10	1.0 metre (3.25 feet)	
50	5.0 metres (16.4 feet)	
70	7.0 metres (23 feet)	
D: Connector Option		



01	Miniature coaxial ClickLoc connector with connector protector, standard cable	
02	Miniature coaxial ClickLoc connector, standard cable	
11	Miniature coaxial ClickLoc connector with connector protector, FluidLoc cable	
12	Miniature coaxial ClickLoc connector, FluidLoc cable	
E: Agency Approval Option		
00	Not required	
05	Multiple Approvals (CSA NRTL/C and BASEEFA/CENELEC, which	

includes CSA Division 2)

# 3300 NSv Probes, Metric

### Part Number-AA-BB-CC-DD-EE

330903	3300 NSv Probe, M8 x 1 thread, without armor.
330904	3300 NSv Probe, M8 x 1 thread, with armor.
330905	3300 NSv Probe, M10 x 1 thread, without armor.
330910	3300 NSv Probe, M10 x 1 thread, with armor.

# A: Unthreaded Length Option



Unthreaded length must be at least 20 mm less than the case length.

Order in increments of 10 mm	Order	in	increments	of	10 mm
------------------------------	-------	----	------------	----	-------

Minimum length: 0 mm

Maximum length: 230 mm

Example **06** = 60 mm

**B:** Case Length Option

Order in increments of 10 mm		
Minimum length: 20 mm		
Maximum length: 250 mm		
Example: <b>25</b>	= 250 mm	
C: Total Len	gth Option	
05	0.5 metre (1.67 feet)	
10	1.0 metre (3.25 feet)	
50	5.0 metres (16.4 feet)	
70	7.0 metres (23 feet)	
D: Connector Option		
01	Miniature coaxial ClickLoc connector with connector protector, standard cable	
02	Miniature coaxial ClickLoc connector, standard cable	
11	Miniature coaxial ClickLoc connector with connector protector, FluidLoc cable	
12	Miniature coaxial ClickLoc connector attached, FluidLoc cable	
E: Agency Approval Option		
00	Not required	
05	Multiple Approvals (CSA NRTL/C and BASEEFA/CENELEC, which includes CSA Division 2)	



# 3300 NSv Reverse Mount Probe

### 330906-02-12-CC-DD-EE 3/8-24 UNF threads

### 330907-05-30-CC-DD-EE M10 x 1 UNF threads

C: Total Length Option		
05	0.5 metre (1.67 feet)	
10	1.0 metre (3.25 feet)	
50	5.0 metres (16.4 feet)	
70	7.0 metres (23 feet)	
D: Conn	ector Option	
02	Miniature coaxial ClickLoc connector, standard cable	
12	Miniature coaxial ClickLoc connector attached, FluidLoc cable	
E: Agend	cy Approval Option	
00	Not required	
05	Multiple Approvals (CSA NRTL/C and BASEFA/CENELEC, which	

# **Extension Cable**

#### 330930-AAA-BB-CC

A: Cable Length Option		
040	4.0 metres (13.1 feet)	
045	4.5 metres (14.8 feet)	
060	6.0 metres (19.7 feet)	
065	6.5 metres (21.3 feet)	
B Armor Option		
00	Without stainless steel armor	

includes CSA Division 2)

With FEP covered stainless steel armor		
With stainless steel armor		
Without stainless steel armor, with connector protector		
With FEP covered stainless steel armor and connector protector		
With stainless steel armor and connector protector		
C: Agency Approval Option		
Not Required		
Multiple Approvals (CSA NRTL/C and BASEEFA/CENELEC (which includes CSA Division 2)		



### **Accessories**

990/991 Test Adapter. Package includes: 990/991 Test Adapter, 9V battery, Universal AC Adapter, Power Cord (North American), User Guide and Soft Carrying Case.

The 990/991 Test Adapter inverts and isolates the PROX OUT signal from the 990 Transmitter so that you can connect 990 Transmitters to AC-powered diagnostic equipment. The Adapter modifies the PROX OUT signal so that it matches our standard Proximitor sensor signals by performing these functions:

- Shifts the phase of the PROX OUT signal by 180° by changing the voltage from positive to negative
- Shifts the phase of the PROX OUT signal by 180° by changing the voltage from positive to negative
- Shifts the phase of the PROX OUT signal by 180° by changing the voltage from positive to negative

The 990/991 Test Adapter provides the following benefits:

- Small size and weight for portable operation
- Battery or AC adapter power options
- Automatic shutoff circuit that powers down the unit when the battery is low
- 2 channels, so that you can display an orbit for XY probe configurations.

### 990/991 Test Adapter Accessories

123266-01	Coaxial Cable Kit. Includes 4 cables with length of 1.5 metres (5 feet) each.
02211505	Single coaxial cable with length of 1.5 metres (5 feet).

# 990/991 Test Adapter Spare Parts

01810700	Battery (9 volt alkaline).	
02270056	AC adapter. Has universal AC input to 9 volts DC output. Input is 108 to 132 Vac with 120 Vac nominal, or 207 to 253 Vac with 240 Vac nominal.	
02198937	Power cord (for North American AC power outlet).	
123133	990 Test Adapter User Guide	

### **Probe and Transmitter Accessories**

02173006	Bulk cable (specify length in feet). 1.0 mm <sup>2</sup> (18 AWG), 2-conductor, twisted, shielded cable used for the 4 to 20 mA loop. Also used for the PROX OUT signal on the 990 Transmitter's terminal strip.	
123655	990/991 Transmitter System Installation User Guide	
330153-05	Cable Connector Kit. Package Includes 1 set of 75 Ω miniature male and female connectors, shrink tubing and 3300 Isolator Seal for protection of coaxial connectors.	
163356	Connector Crimp Tool Kit. Includes one set of 75 Ω ClickLoc inserts and connector installation instructions. Supplied with carrying case.	




122115-01

330951-01	990 Mounting Screws (spares). Contains 4 screws.
284726	DIN rail mounting kit. Installed on the 990 Transmitter to allow mounting on 35 mm DIN rail.




# **Graphs and Figures**

All dimensions shown in millimeters (inches) unless noted otherwise

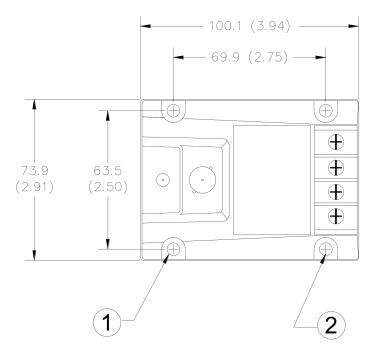

- 1. Mounting holes, 5.8 mm (0.23 in) diameter, 4 places
- 2. Bulkhead mount holes, 4 each. 6-32 x 1.326 screws provided when mounting option specified


Figure 1: 990 Vibration Transmitter Dimensions (top view)

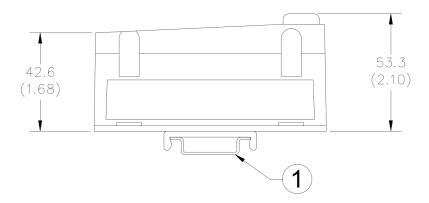

1. 35mm DIN rail DIN mount clips (when DIN rail mounting is specified)

Figure 2: 990 Vibration Transmitter Dimensions (side view)



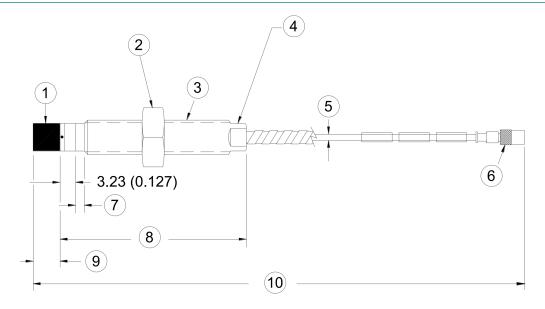

- 1. Probe tip, 5.26 mm (0.207 in) maximum diameter
- 2. Hexagonal nut
- 3. Case Thread
- 4. Wrench flats
- 5.  $75\Omega$  cable, 2.8 mm (0.11 in ) maximum outside diameter, 7.6 mm (0.30 in) maximum outside diameter of armor
- 6. Miniature male coaxial connector, 7.23 mm (0.285 in) maximum outside diameter "D"
- 7. Unthreaded length "A"
- 8. Case length "B"
- 9. 2.92 mm (0.115 in) maximum
- 10. Total length "C", +30%, -0%


Figure 3: 3300 NSv Proximity Probes, Standard Mount

### **Available Probes**

330901, 1/4-28 UNF-2A, without armor 330902, 1/4-28 UNF-2A, with armor 330903, M8x1 thread, without armor 330904, M8x1 thread, with armor 330905, M10x1 thread, without armor 330908, 3/8-24 UNF-2A, without armor 330909, 3/8-24 UNF-2A, with armor


Standard mounts	Supplied with these wrench flats
1/4-28 UNF thread probes	7/16-inch lock nut and 7/32 inch
M8x1 thread probes	13-mm lock nut and 7 mm.
3/8-28 UNF thread probes	9/16-inch lock nut and 5/16-inch.
M10x1 thread probes	17-mm lock nut and 8 mm.





- 1. 12 mm (0.49 in) maximum diameter
- 2. 36.3 mm (1.43 in) maximum
- 3. 51.1 mm (2.01 in) maximum
- 4. Connector protector (fluorosilicone material)

**Figure 4: Installed Connector Protectors** 

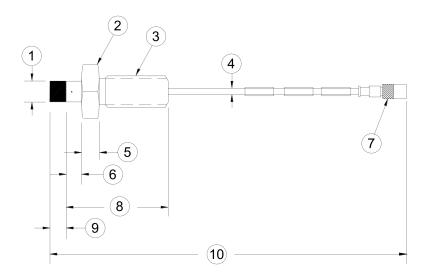

- 1. Probe tip, 5.26 mm (0.207 in) maximum diameter
- 2. Hexagonal nut
- 3. Case thread
- 4.  $75\Omega$  cable, 2.8 mm (0.11 in) outside diameter
- 5. 5.08 mm (0.20 in)
- 6. Unthreaded case length "A", 5.08 mm (0.20 in)
- 7. Miniature male coaxial connector, 7.23 mm (0.285 in) maximum outside diameter "D"
- 8. Case length "B", 30.48 mm (1.20 in)
- 9. 2.92 mm (0.115 in) maximum
- 10. Total length "C", +30%, -0%


Figure 5: 3300 NSv Proximity Probes, Reverse Mount

**Available Probes** 330906, 3/8-24 UNF-2A 330907, M10x1 thread




Reverse mount probes are not available with armor or connector protector options.



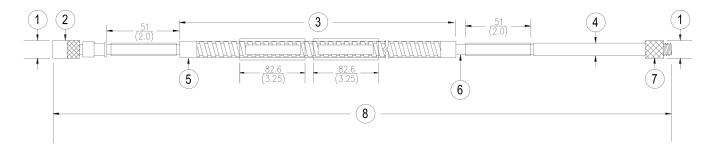

- 1. 7.2 mm (0.285 in) maximum diameter
- 2. Miniature male coaxial connector
- 3. FEP-coated or uncoated armor, armor length is 300 mm (11.8 in) less than cable length
- 4.  $75\Omega$  cable, 2.80 mm (0.11 in) maximum outside diameter, 7.6 mm (0.30 in) maximum outside diameter of armor, 7.0 mm (0.275 in) maximum outside diameter of uncoated armor
- 5. Stainless steel ferrules, 8.4 mm (0.33 in) diameter
- 6. FEP-insulated coaxial cable
- 7. Miniature female coaxial connector
- 8. Cable length +20%, -0%

Figure 6: 3300 NSv Extension Cable

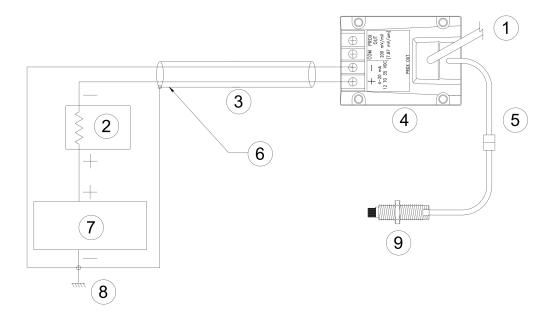

1. To test adapter 122115-01




- 2. Receiver
- 3. Cable shield
- 4. Transmitter
- 5. Extension cable
- 6. Recommended wiring is shielded, twisted-pair, 1.0 mm (18 AWG) (part number 02173006). Maximum length is 13 km (8 miles).
- 7. Power supply,  $V_{PS} = 17$  to 35 Vdc
- 8. Common (ground)
- 9. Probe

Figure 7: 990 Vibration Transmitter Loop Wiring Connections



The phase of the PROX OUT signal is inverted from the standard for Bently Nevada products. Also, connecting grounded AC-powered equipment to PROX OUT may result in a false alarm. Use test adapter 122115-01 to connect AC equipment to the transmitter. Note that the 122115-01 also inverts the PROX OUT signal.

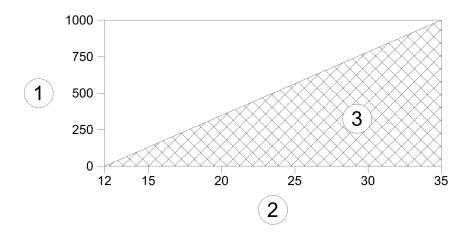

- 1. Maximum loop resistance in ohms (R<sub>LOOP</sub>)
- 2. Power supply voltage  $(V_{PS})$
- 3. Operating region

Figure 8: 990 Vibration Transmitter Maximum Loop Resistance



RLOOP = 43.5 x (Vps - 12) W maximum. If the maximum loop resistance is exceeded, then the full-scale current does not reach 20 mA.



Copyright 2024 Baker Hughes Company. All rights reserved.



Bently Nevada, M2, Proximitor, System 1 and Orbit Logo are registered trademarks of Bently Nevada, a Baker Hughes business, in the United States and other countries. The Baker Hughes logo is a trademark of Baker Hughes Company. All other product and company names are trademarks of their respective holders. Use of the trademarks does not imply any affiliation with or endorsement by the respective holders.

Baker Hughes provides this information on an "as is" basis for general information purposes. Baker Hughes does not make any representation as to the accuracy or completeness of the information and makes no warranties of any kind, specific, implied or oral, to the fullest extent permissible by law, including those of merchantability and fitness for a particular purpose or use. Baker Hughes hereby disclaims any and all liability for any direct, indirect, consequential or special damages, claims for lost profits, or third party claims arising from the use of the information, whether a claim is asserted in contract, tort, or otherwise. Baker Hughes reserves the right to make changes in specifications and features shown herein, or discontinue the product described at any time without notice or obligation. Contact your Baker Hughes representative for the most current information.

The information contained in this document is the property of Baker Hughes and its affiliates; and is subject to change without prior notice. It is being supplied as a service to our customers and may not be altered or its content repackaged without the express written consent of Baker Hughes. This product or associated products may be covered by one or more patents. See Bently.com/legal.

1631 Bently Parkway South, Minden, Nevada USA 89423 Phone: 1.775.782.3611 (US) or Bently.com/support Bently.com

