

Model T9

Ultrasonic Flow Transducer Installation Guide



Model T9

Ultrasonic Flow Transducer

Installation Guide

BH047C21 EN C
May 2023

panametrics.com

Copyright 2023 Baker Hughes company.

This material contains one or more registered trademarks of Baker Hughes Company and its subsidiaries in one or more countries. All third-party product and company names are trademarks of their respective holders.

[no content intended for this page]

Information Paragraphs

- **Note** paragraphs provide information that provides a deeper understanding of the situation, but is not essential to the proper completion of the instructions.
- **Important** paragraphs provide information that emphasizes instructions that are essential to proper setup of the equipment. Failure to follow these instructions carefully may cause unreliable performance.
- **Caution!** paragraphs provide information that alerts the operator to a hazardous situation that can cause damage to property or equipment.
- **Warning!** paragraphs provide information that alerts the operator to a hazardous situation that can cause injury to personnel. Cautionary information is also included, when applicable.

Safety Issues

WARNING! It is the responsibility of the user to make sure all local, county, state and national codes, regulations, rules and laws related to safety and safe operating conditions are met for each installation.

Auxiliary Equipment

Local Safety Standards

The user must make sure that he operates all auxiliary equipment in accordance with local codes, standards, regulations, or laws applicable to safety.

Working Area

WARNING! Auxiliary equipment may have both manual and automatic modes of operation. As equipment can move suddenly and without warning, do not enter the work cell of this equipment during automatic operation, and do not enter the work envelope of this equipment during manual operation. If you do, serious injury can result.

WARNING! Make sure that power to the auxiliary equipment is turned OFF and locked out before you perform maintenance procedures on the equipment.

Qualification of Personnel

Make sure that all personnel have manufacturer-approved training applicable to the auxiliary equipment.

Personal Safety Equipment

Make sure that operators and maintenance personnel have all safety equipment applicable to the auxiliary equipment. Examples include safety glasses, protective headgear, safety shoes, etc.


Unauthorized Operation

Make sure that unauthorized personnel cannot gain access to the operation of the equipment.

Environmental Compliance

Waste Electrical and Electronic Equipment (WEEE) Directive

Panametrics Solutions is an active participant in Europe's *Waste Electrical and Electronic Equipment (WEEE)* take-back initiative, directive 2012/19/EC.

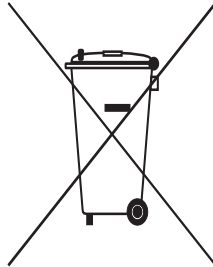

The equipment that you bought has required the extraction and use of natural resources for its production. It may contain hazardous substances that could impact health and the environment.

In order to avoid the dissemination of those substances in our environment and to diminish the pressure on the natural resources, we encourage you to use the appropriate take-back systems. Those systems will reuse or recycle most of the materials of your end life equipment in a sound way.

The crossed-out wheeled bin symbol invites you to use those systems.

If you need more information on the collection, reuse and recycling systems, please contact your local or regional waste administration.

Certification and Safety Statements

Product safety issues and special installation requirements are documented in this product's Certification and Safety Statement (CSS) document, available for download from the Product Support Portal.

EU Declaration of Conformity

The EU Declaration of Conformity (EU DoC) and other compliant documents can be downloaded from the Product Support Portal.

Chapter 1. Information

1.1 Overview1
 1.2 Transducer Construction1

Chapter 2. Installing Pipe Nozzles

2.1 Introduction 3
 2.2 Identifying and Checking the Nozzle Installation Kit Components 4
 2.3 Selecting and Marking the First Nozzle Location 5
 2.4 Determining and Marking the Second Nozzle Location 7
 2.5 Installing the First Welding Boss 10
 2.6 Installing the First Nozzle12
 2.7 Installing the Second Welding Boss and Nozzle 14
 2.8 Hot Tapping the Pipe 14

Chapter 3. Inserting T9 Transducers into the Pipe

3.1 Introduction 15
 3.2 Inserting Transducers with the Simple Holder 15
 3.3 Inserting Transducers with the Barrel Holder 19
 3.4 Inserting Transducers with the Flanged Holder21
 3.4.1 Securing the Transducers24

Chapter 4. Maintenance

4.1 Introduction 27
 4.2 Removing Transducers 27

Chapter 5. T9 Specifications

5.1 Specifications31

[no content intended for this page]

Chapter 1. Information

1.1 Overview

The *T9 ultrasonic flow transducer* is used exclusively with the Panametrics line of ultrasonic flowmeters. These transducers measure the flow rate of saturated steam and most gases through pipes having diameters between 2 in. (50 mm) and 48 in. (1200 mm). Such measurements are independent of the pipe material. This document provides details on the following topics:

- Transducer Construction
- Nozzle Installation
- Transducer Installation
- Maintenance
- Specifications

1.2 Transducer Construction

Each T9 transducer assembly (see Figure 1) consists of the following components:

- a metallic body
- a transducer head that consists of a piezoelectric element wired to the BNC connector
- a BNC style connector for use in connecting the transducer to the flowmeter
- an optional noise dampening fitting improves transducer signal transmission.

The T9 transducer has a 180° head and is available in the following lengths: 11 in. (28 cm), 13 in. (33 cm) and 16 in. (40 cm).

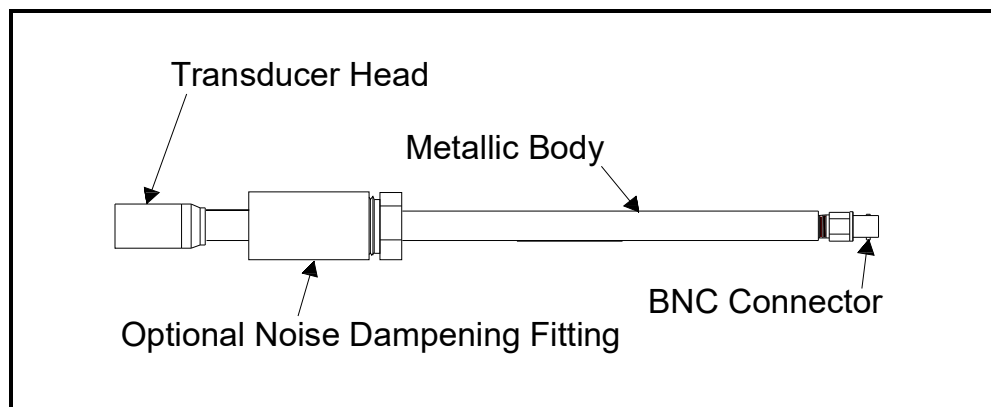


Figure 1: General T9 Transducer

[no content intended for this page]

Chapter 2. Installing Pipe Nozzles

2.1 Introduction

Before the T9 transducers can be installed into the pipe, you will need to install pipe nozzles. Nozzles can be installed on a hot or cold pipe using a Panametrics Nozzle Installation Kit. Nozzles are installed in a Tilted 45° configuration.

IMPORTANT: This procedure only applies if you are using a Nozzle Installation Kit. If you are tapping the pipe without using a Nozzle Installation Kit, refer to the supplied drawings in your shipment. This procedure is written and illustrated for installations on horizontal pipes; however, the procedure is the same for vertical pipe installations.

This procedure contains the following instructions:

- Identifying and Checking the Nozzle Installation Kit Components
- Selecting and Marking the First Nozzle Location
- Determining and Marking the Second Nozzle Location
- Installing the First Welding Boss
- Installing the First Nozzle
- Installing the Second Welding Boss and Nozzle
- Hot Tapping the Pipe

2.2 Identifying and Checking the Nozzle Installation Kit Components

The nozzle kit consists of various components which you must identify and check as described in the following sub-sections.

The Nozzle Installation Kit contains the materials listed below. Use Figure 2 to help identify each component.

- 2 Nozzles
- 2 Welding Bosses
- 1 Jig
- 1 Threaded Rod (1 in. diameter), washer and nut

IMPORTANT: You will need to supply eight $\frac{5}{8}$ in. x 4.25 in. studs with two nuts each.

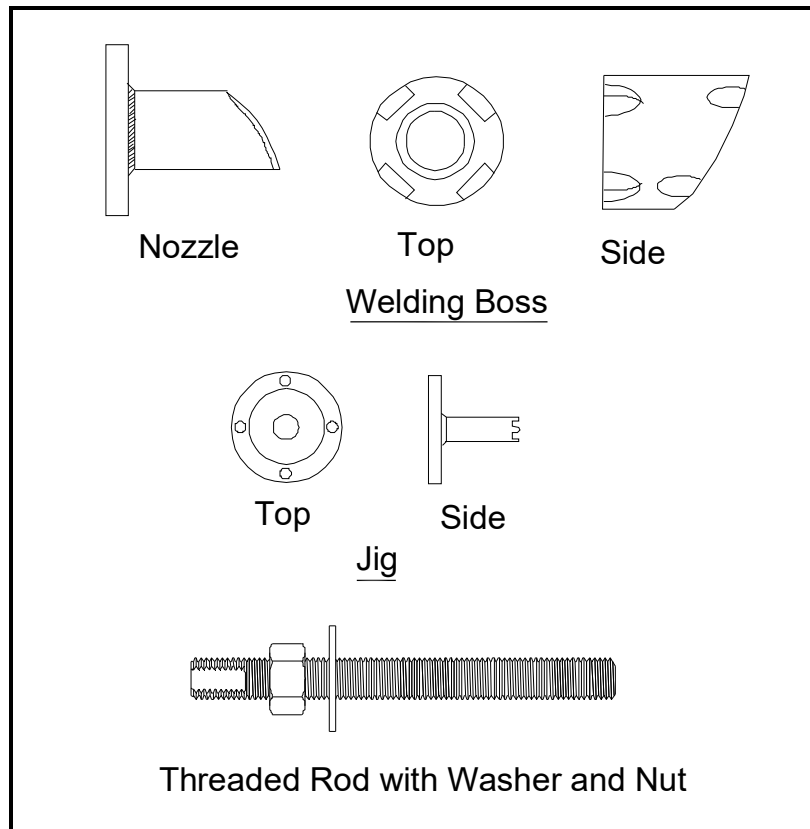



Figure 2: Components for Nozzle Installation Kit

2.3 Selecting and Marking the First Nozzle Location


CAUTION! Correct nozzle alignment is critical to the successful operation of the flowmeter; therefore, all marking, positioning and welding operations must be carried out with the utmost attention to accuracy. Unless otherwise stated, dimensional positioning of the nozzles must be held to a tolerance of $\pm 1/16$ in. (1.6 mm) relative to each other and with respect to the pipe centerline. The angular tolerance must be held to $\pm 1^\circ$.

All hole cutting in process piping must be performed using hot tapping equipment.

1. For optimum performance, you should select a location that has undisturbed straight run pipeline at least 10 pipe diameters upstream and 5 pipe diameters downstream from the point of measurement. Undisturbed pipe means avoiding sources of turbulence such as valves, flanges, elbows; avoiding swirl; and avoiding disturbed flow profiles.

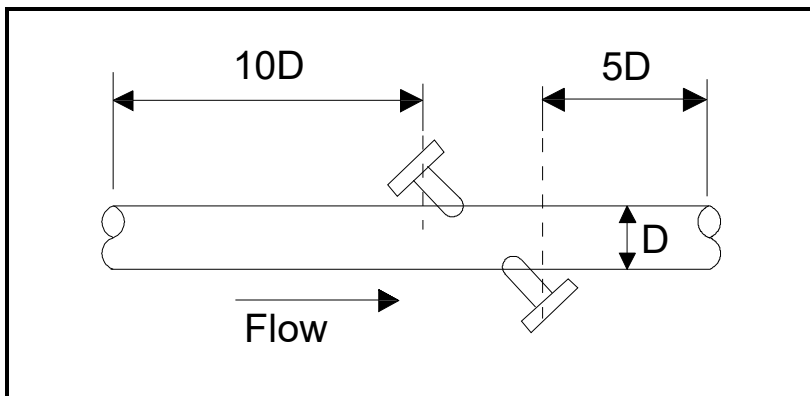


2. We recommend that you install the nozzles on a diameter as near as possible to the horizontal plane (i.e., 3 o'clock and 9 o'clock) as shown below.

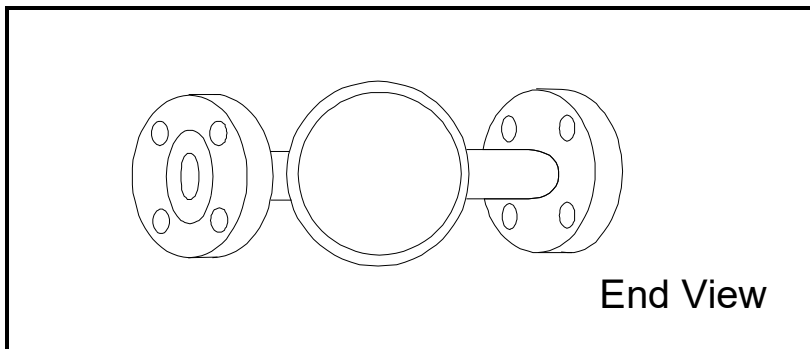


2.3 Selecting and Marking the First Nozzle Location (cont.)

3. At the 3 o'clock position, center punch the pipe to mark the position for the center of the first nozzle.

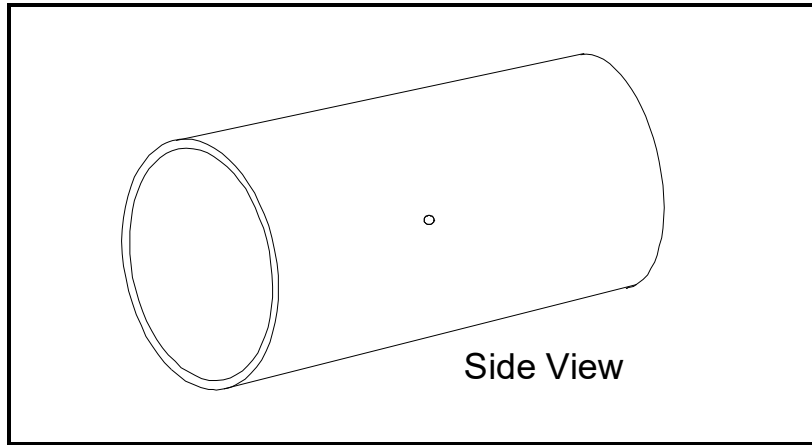


4. Spray this area with a marking dye product. Using a metal edge, scribe a vertical and a horizontal line (6 in. long) that intersect at the center punch mark.

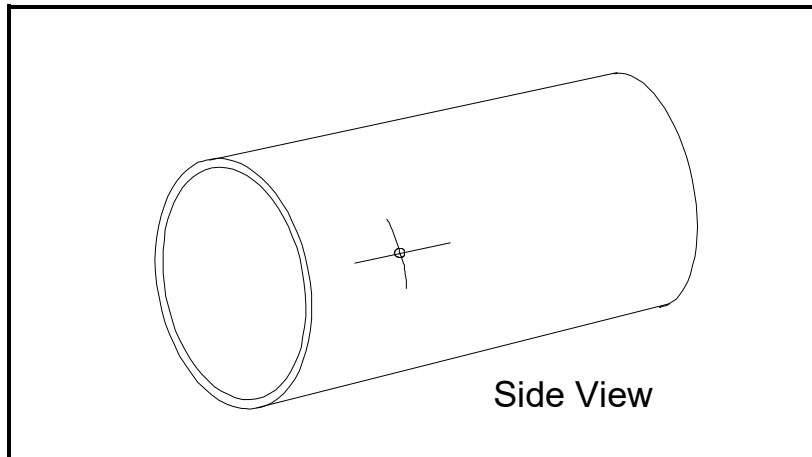

2.4 Determining and Marking the Second Nozzle Location


1. The position for the second nozzle is a distance equal to one pipe diameter along the pipe and located on the opposite side of the pipe (i.e., 180° around). Spray this area with a marking dye product.
2. Due to the possible variation in outside diameter of the pipe, measure the outside diameter of the pipe at four locations between the nozzle centers. Calculate the average outside diameter based on these measurements.

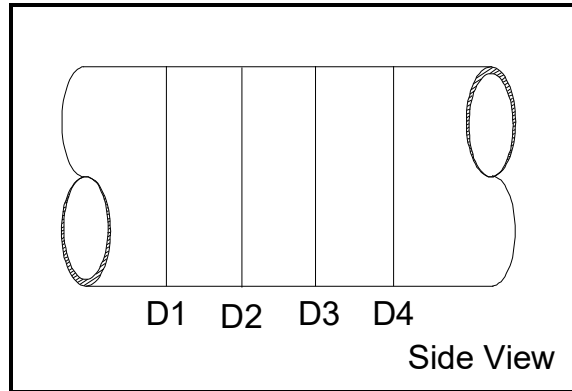

3. Using a roll of polyester film (or equivalent), cut a strip of film at the width and length as follows:


IMPORTANT: Ensure that the sides of the film are cut parallel to each other.

- Width - equal to the average outside diameter calculated in Step 1 above.
- Length - equal to 4 times the outside diameter of the pipe.

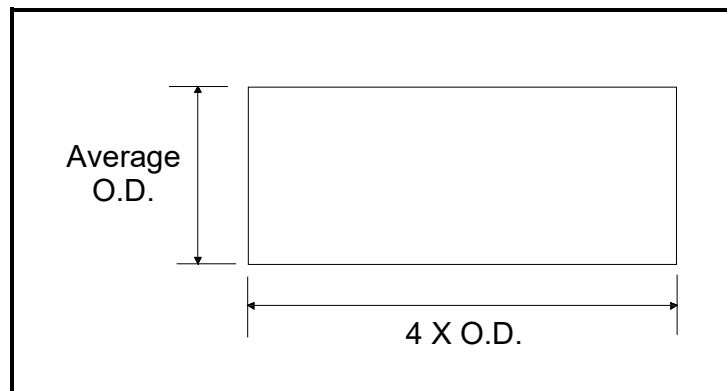


2.4 Determining and Marking the Second Nozzle Location (cont.)


4. Wrap the strip of film around the pipe with one edge running along the vertical scribe line at the first nozzle location. Make sure the strip overlaps squarely around the pipe and mark the overlap position of the strip. This equals the circumference of the pipe.

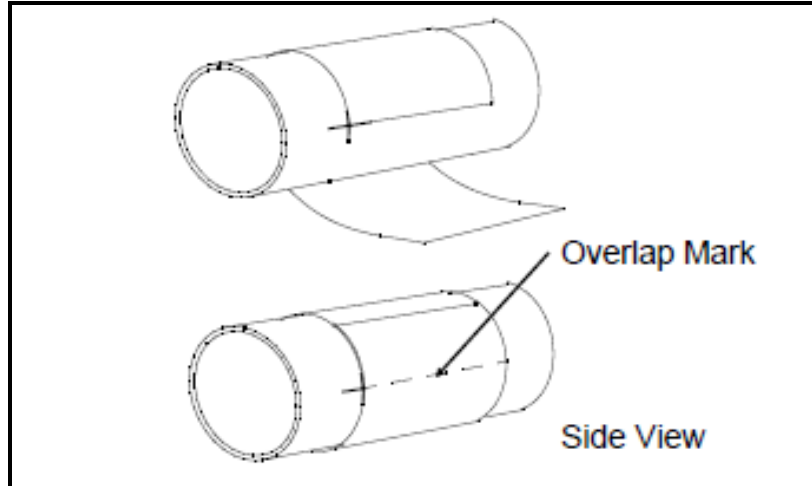

5. Remove the strip of film and fold it as shown below to determine the position which is diametrically opposite the overlap position when the film is reapplied to the pipe.

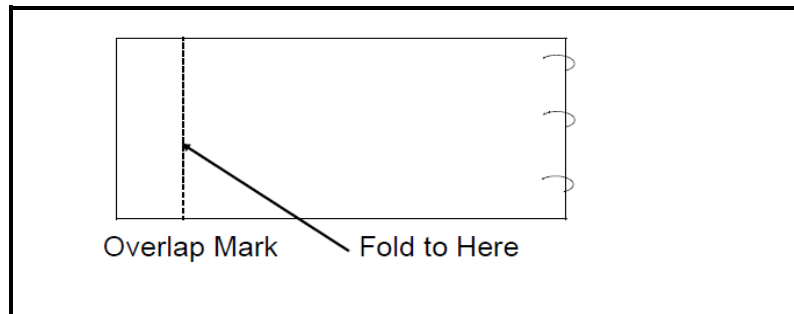


6. Mark the outside of the fold for reference.

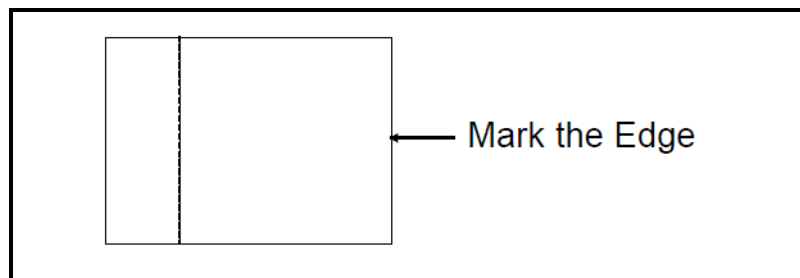


2.4 Determining and Marking the Second Nozzle Location (cont.)


7. Place the strip of film on the pipe again; this time, line up the overlap mark with the horizontal and vertical scribe lines. Again, make sure you wrap the strip of film squarely around the pipe.

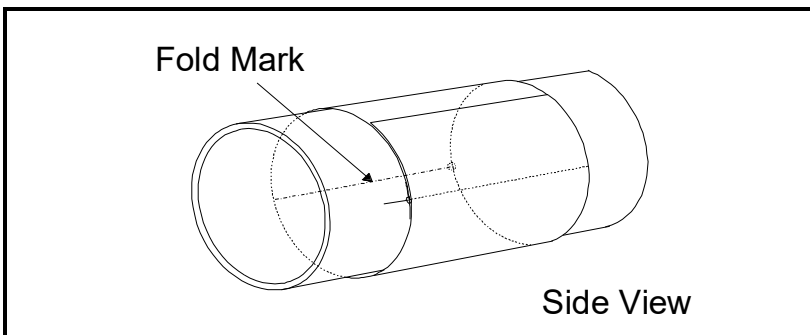

8. The new position of the center of the second nozzle is now identified as the intersection of the fold line and the second edge of the strip of film. Center punch this location prior to removing the strip of film.

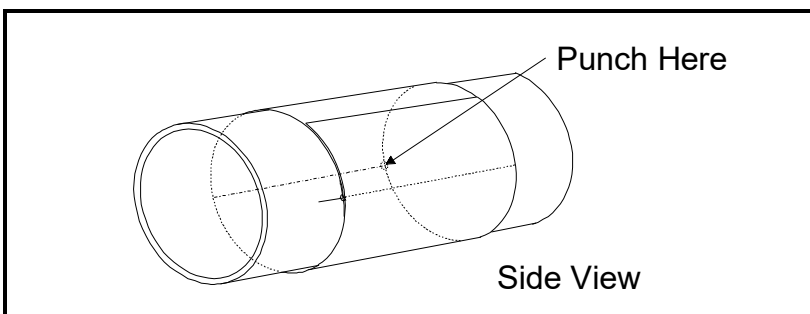

9. Remove the film.
10. Scribe vertical and horizontal lines (each 6 in. long) to intersect at the center-punch mark.

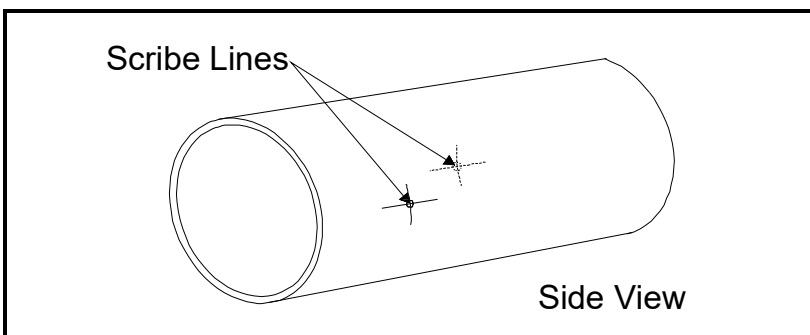

2.5 Installing the First Welding Boss

- Before welding the first boss, you must add another scribe line known as the oblique center line. The oblique center line compensates for the slope or oblique of the boss. The oblique center line is offset from the true center (vertical) scribe line marked earlier by a distance of "X," which is dependent on the pipe outside diameter as follows:

$$X = (D \div 2) - \frac{d \div 2}{\tan[\sin^{-1}(d \div D)]}$$

where:

D = pipe outside diameter


d = welding boss outside diameter, 1.660 in. (4 cm)

Table 1 below shows values of X for various pipe sizes.

Table 1: X values for Various Pipe Sizes


Pipe		X Dimensions
NPS (DN)	O.D.	
6 in. (150 mm)	6.625 in. (17 cm)	0.106 in. (2.69 mm)
8 in. (200 mm)	8.625 in. (22 cm)	0.081 in. (2.06 mm)
10 in. (250 mm)	10.75 in. (27 cm)	0.064 in. (1.62 mm)
12 in. (300 mm)	12.75 in. (32 cm)	0.054 in. (1.37 mm)
14 in. (350 mm)	14.00 in. (35.5 cm)	0.049 in. (1.24 mm)

- Scribe the oblique center line on the pipe at the prescribed distance from the true center line. The oblique center line should be marked on the side of the true center line that is closer to the second nozzle location.

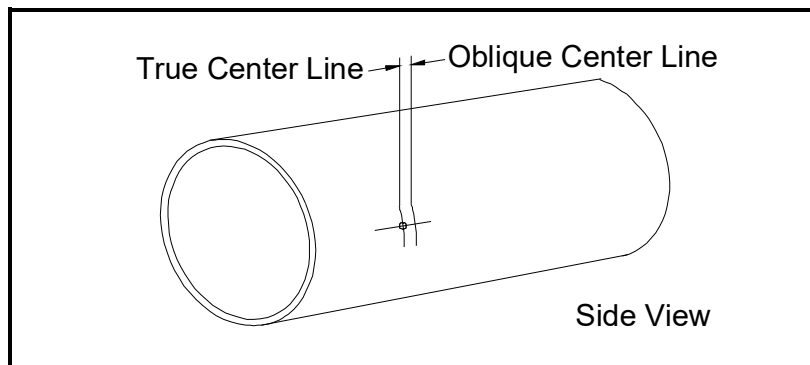

2.5 Installing the First Welding Boss (cont.)

- Position the welding boss such that the four scribe lines on the welding boss are lined up with the horizontal scribe mark and the oblique center line on the pipe. Make sure you orient the boss as shown below.

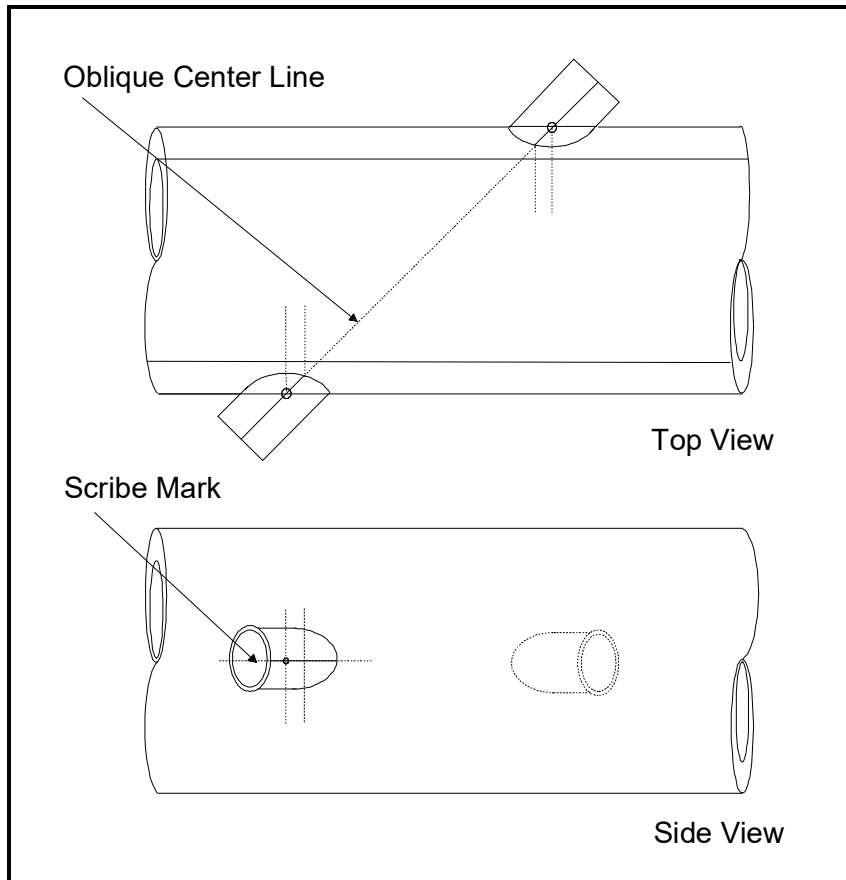


- Clamp the boss in place using a pipe strap or equivalent so that it cannot move during tack welding.
- Check the boss alignment, then tack weld the carbon steel boss to the pipe in each of the four grooves between the boss scribe marks.
- Remove the clamp and check the alignment again. If the boss is misaligned by 0.02 in. (0.5 mm) or more, remove the boss, grind off the welds and reinstall.


2.6 Installing the First Nozzle

IMPORTANT: It is essential that the nozzle is set up and fixed in position using the jig and 1-in. threaded rod provided, prior to welding the nozzle.

1. Screw the threaded rod into boss that is welded onto the pipe. If necessary, remove the washer and nut from the threaded rod.

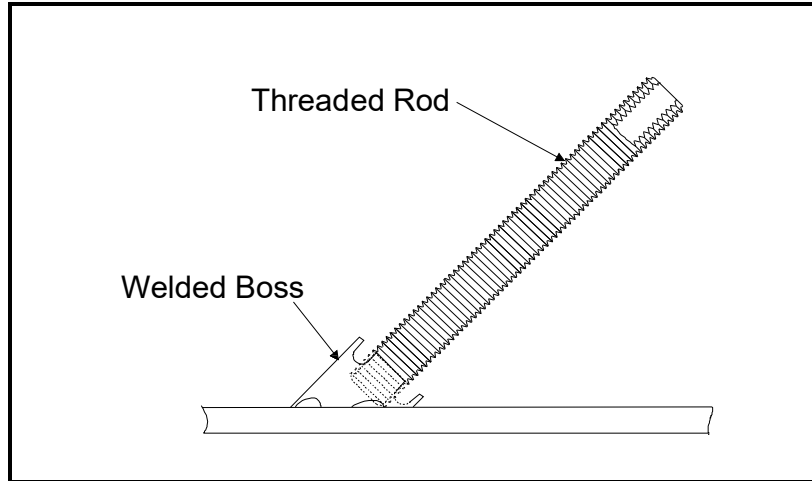


2. Insert the pipe section of the jig into the pipe section of the nozzle and fasten using four studs and eight nuts (not supplied).

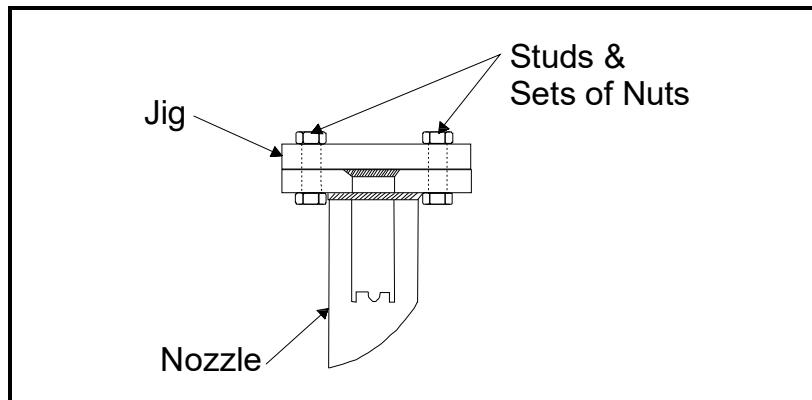


2.6 Installing the First Nozzle (cont.)

- Slide the jig/nozzle assembly over the threaded rod, fitting the jig into the welding boss while aligning the contoured end of the nozzle so it matches the pipe arc.

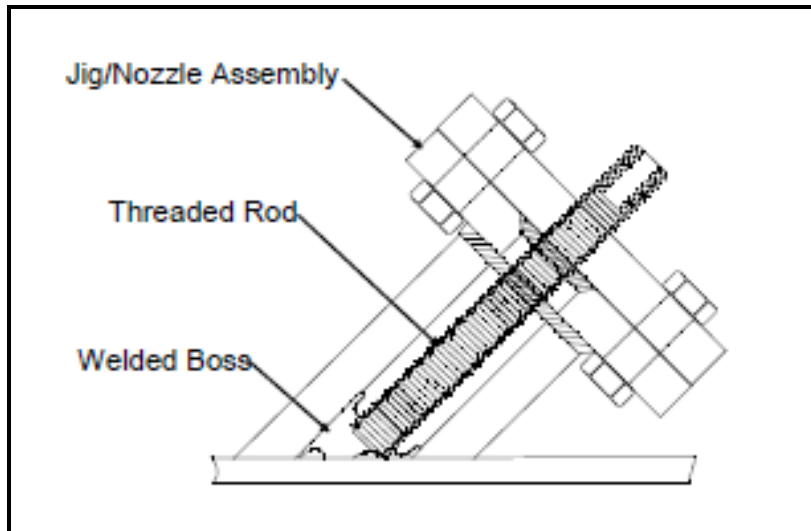

- Align the nozzle scribe marks with the pipe scribe marks and tighten the assembly in place, using the washer and nut.

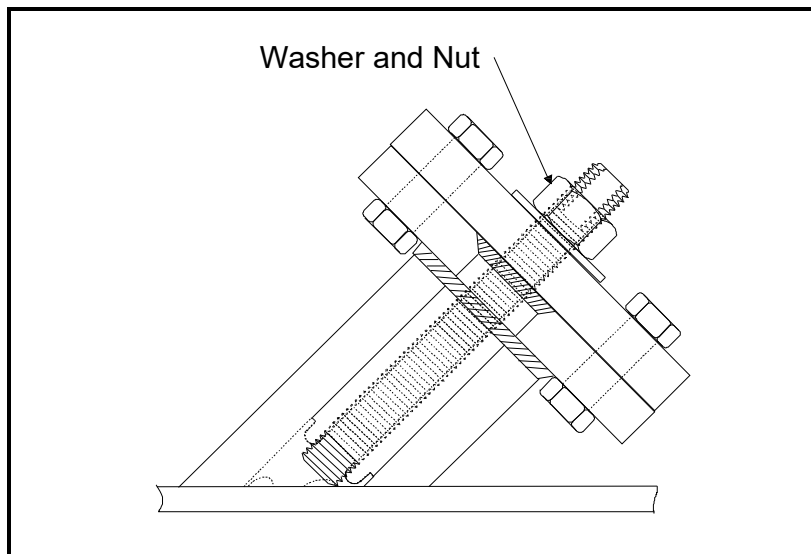

2.6 Installing the First Nozzle (cont.)


- The jig, boss, and nozzle combination is designed to provide a 0.094 in. (2.4 mm) root gap between the beveled edge of the nozzle and the outside diameter of the pipe. If the 0.094 in. (2.4 mm) clearance does not exist all around, the nozzle must be removed and ground appropriately to provide the required clearance. If the root gap is larger than the 0.094 in. (2.4 mm) dimension, then suitably sized washers may be inserted between the jig and the nozzle in order to reduce the root gap dimension.

WARNING! ONLY QUALIFIED PERSONNEL SHOULD WELD BOSSES AND NOZZLES, USING A SUITABLE ASME IX QUALIFIED WELDING PROCEDURE.

- Tack weld the nozzle to the pipe at four diametrically opposed points, each tack being approximately 0.6 in. (15 mm) in length. Allow to cool for 30 seconds between tacks.
- Proceed to complete the root pass and subsequent filler passes as required.
- Allow to cool, then remove the threaded rod, washer, nut, and jig.

2.7 Installing the Second Welding Boss and Nozzle

Install the second welding boss and nozzle at the required position as described in *Installing the First Welding Boss* and *Installing the First Nozzle* beginning on page 10. The completed installation should appear as shown below.

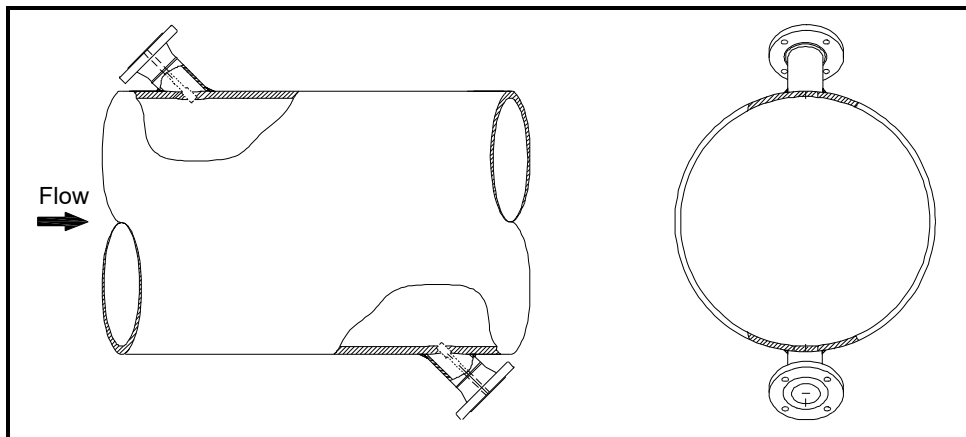

2.8 Hot Tapping the Pipe

WARNING! HOT TAPPING SHOULD BE PERFORMED ONLY BY QUALIFIED PERSONNEL. FOLLOW ALL APPLICABLE CODE AND SAFETY PRACTICES DURING THESE PROCEDURES.

- Install 3 in. ANSI flanged full-bore isolation valves on both nozzles (8 in. face-to-face for 150#RF or 11.125 in. for 300#RF) with gasket and 5/8-in. diameter studs and nuts. Orient valve handles to minimize interference.
- Hot tap holes in the pipe using hot tap machine equipped with a 3/4 in. (19 mm) drill bit. Then use a coupon retaining hole saw to cut a hole a minimum diameter of 2.36 in. (60 mm).

Chapter 3. Inserting T9 Transducers into the Pipe

3.1 Introduction

The T9 transducer is typically installed into a meter body. The meter body is a section of pipe that contains the ports where the transducers will be mounted. The meter body may be prefabricated or created by installing ports on the existing pipe. The T9 can be inserted into the pipes using a number of methods:

- Simple Holder
- Barrel Holder
- Flanged Holder

3.2 Inserting Transducers with the Simple Holder


The simple holder consists of a flange with a compression fitting tapped or welded in the middle of the flange. Transducers are usually installed in a diagonal 45° configuration, although other configurations are available.

The procedure below applies to a diagonal 45° single-traverse configuration when the transducer insertion depth does not exceed the pipe inside diameter. Consult Panametrics for other configurations.

IMPORTANT: If you do not know the transducer insertion depth, measure the length of the nozzle (from the top of the nozzle to the pipe) and then add the pipe ID to that measurement. If this measurement equals the Z dimension, then the transducer insertion depth does **not** exceed the pipe ID.


Use the steps below to insert the simple holder.

1. Measure the Z dimension as shown below. The Z dimension is set at the factory and should be verified.

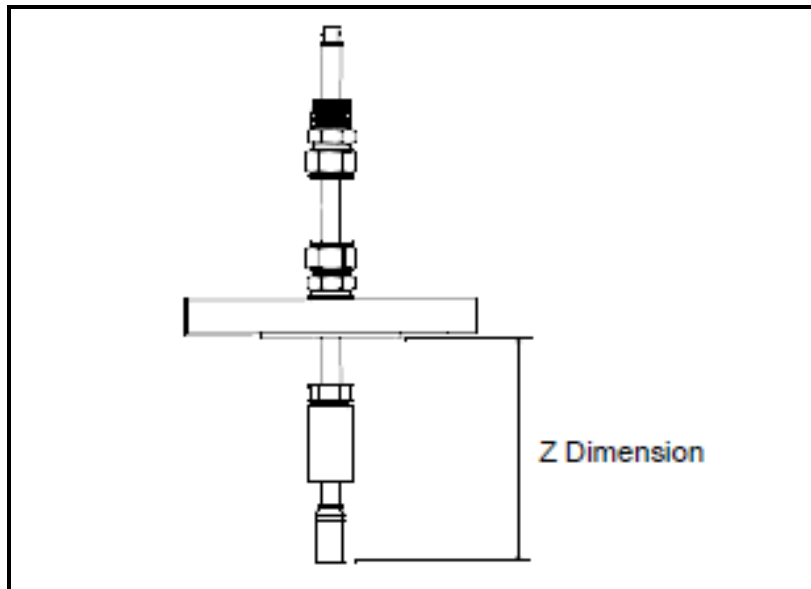


3.2 Inserting Transducers with the Simple Holder (cont.)

2. Insert the holder into the pipe nozzle. Place a spiral-wound gasket between the nozzle and the holder. The nozzle length determines the transducer face position.

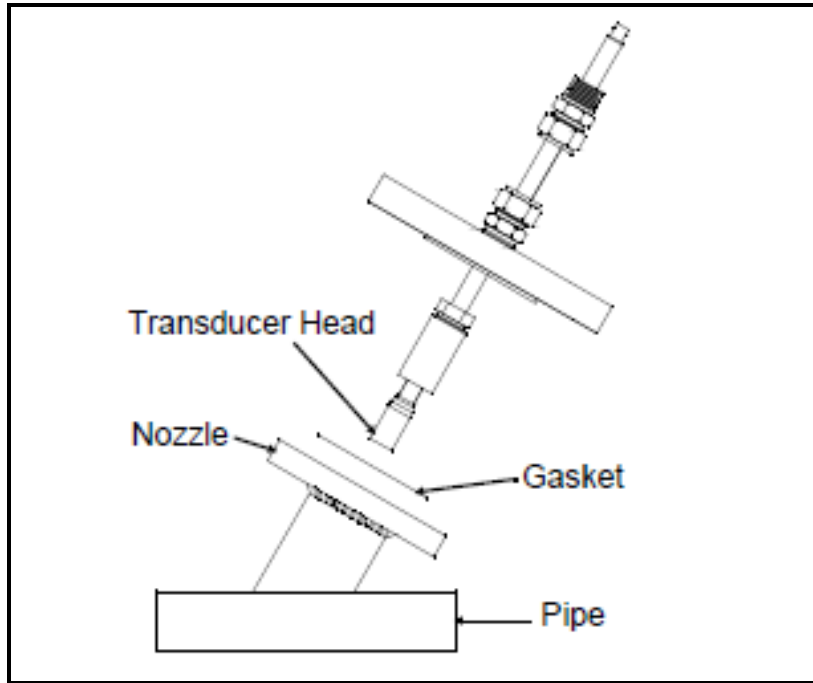


3. Bolt the holder flange onto the nozzle flange as shown below.

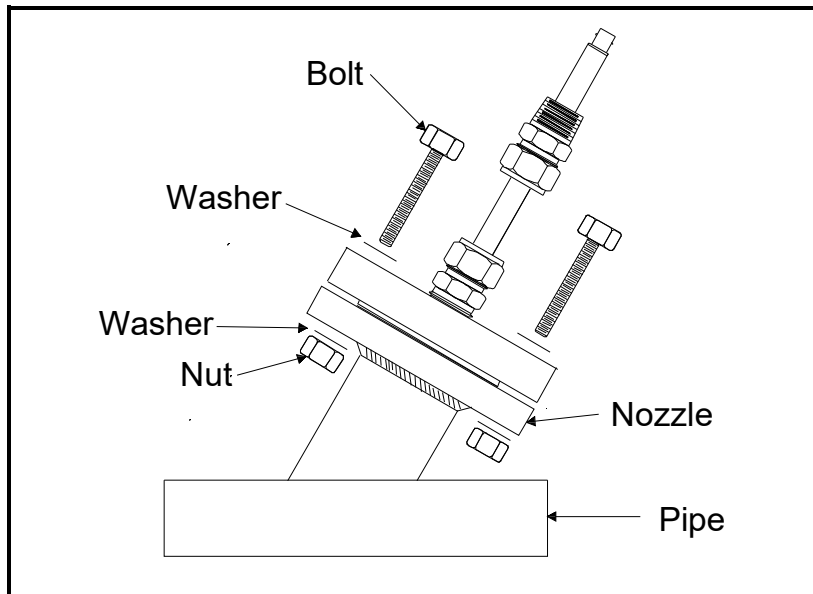


3.2 Inserting Transducers with the Simple Holder (cont.)

4. Install the junction box on the end of the transducer using the compression fitting.

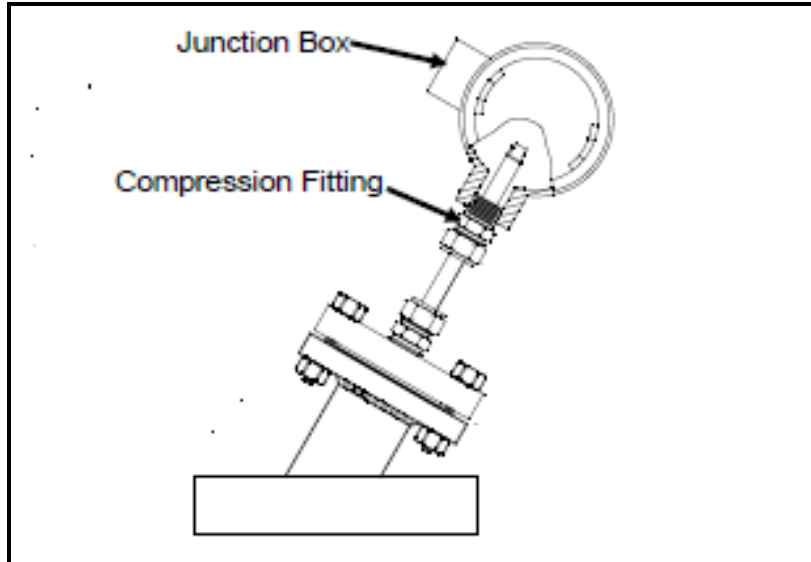

5. Repeat the above steps for the other transducer. The figure below shows a completed installation.

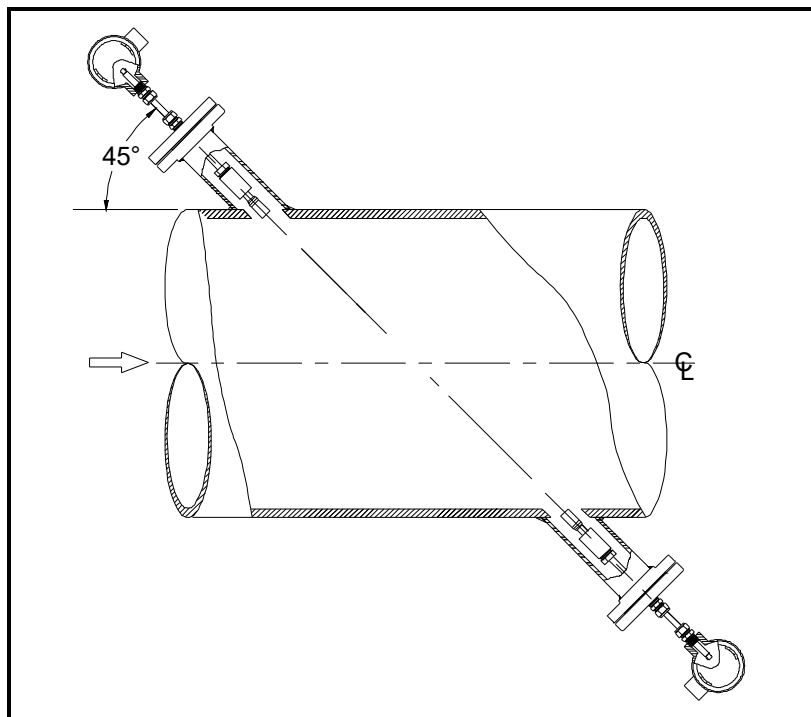


3.2 Inserting Transducers with the Simple Holder (cont.)

6. Use the equation below to calculate the path length (P) based on the pipe inside diameter and transducer face angle:

$$P = ID / \cos(A)$$

where: ID = pipe inside diameter and
A = nozzle angle

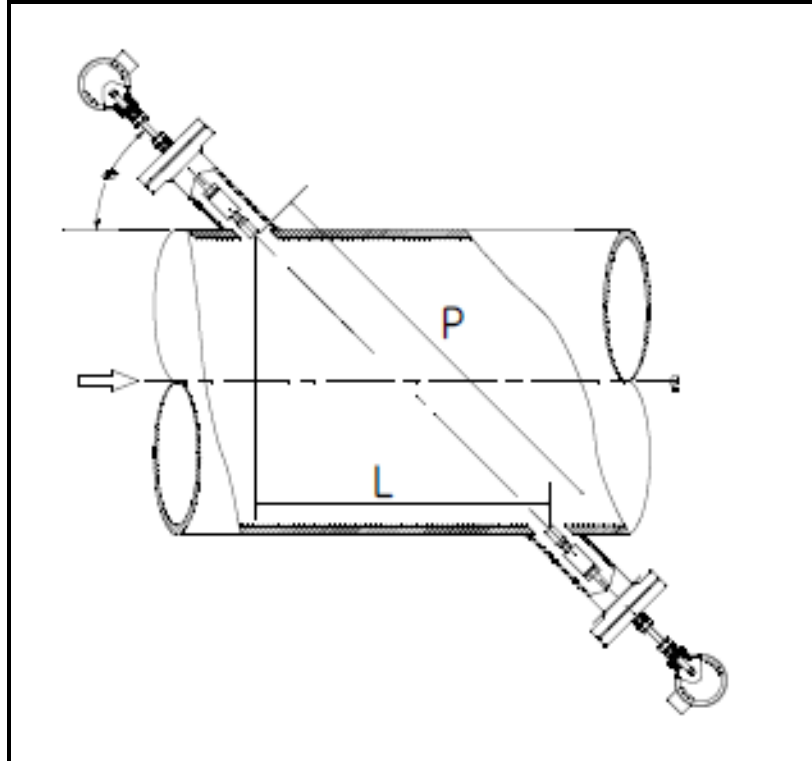

7. Record the axial dimension (L). The L dimension is equal to the pipe inside diameter.
8. Refer to your flowmeter *Startup Guide* or *User's Manual* to make transducer electrical connections. You have completed transducer installation.

3.3 Inserting Transducers with the Barrel Holder

A barrel holder is a flange with a pipe welded through its center (the flange and pipe size are dependent upon the application.) The pipe provides support for the transducer. Compression fittings on the top and bottom of the barrel holder keep the transducer in place. See Figure 3.


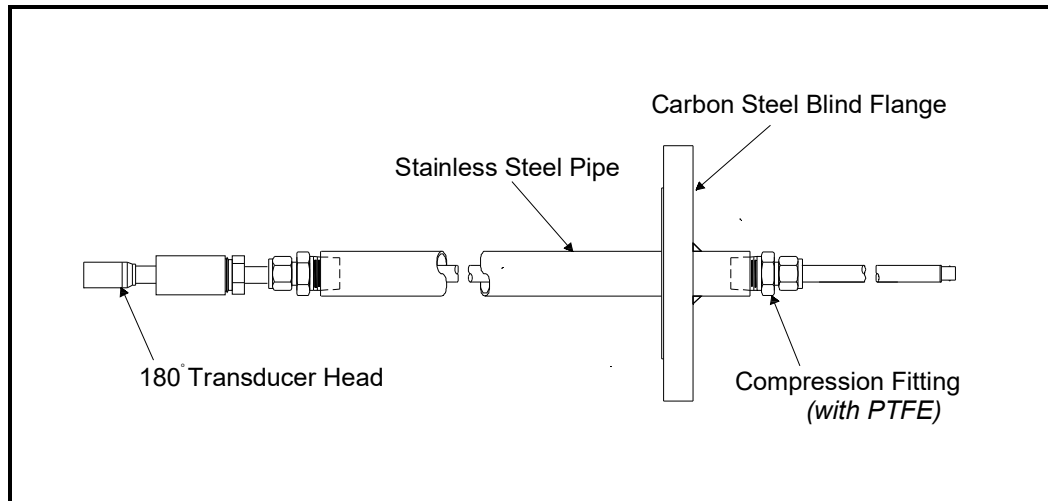


Figure 3: Barrel Holder with 180° Head Transducer


1. All equipment comes pre-assembled. Measure the insertion depth as shown below. The insertion depth is set at the factory and should be verified.

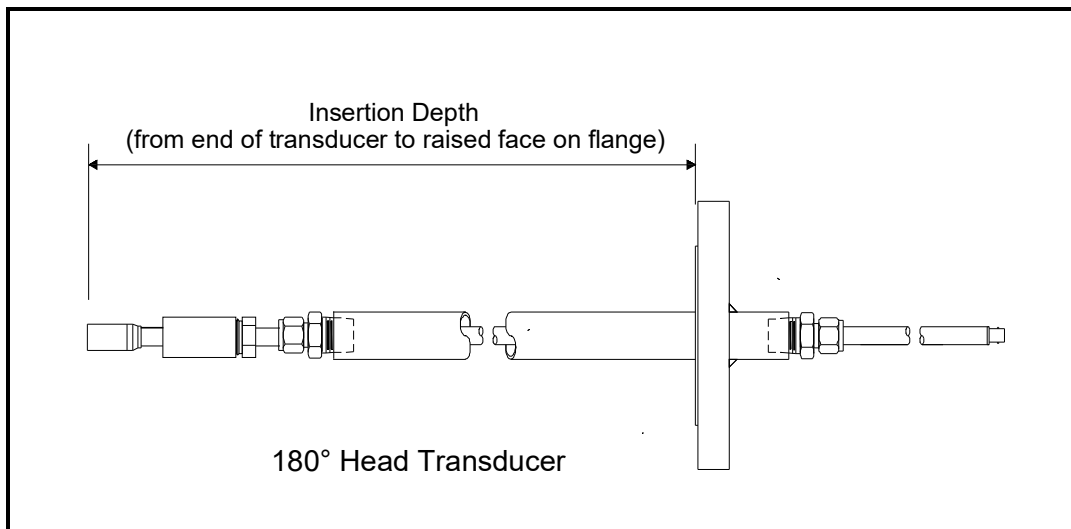


Inserting Transducers with the Barrel Holder (cont.)

Procedure for Inserting Transducers with the Barrel Holder (cont.)

2. Insert the holder into the pipe nozzle. Place a spiral-wound gasket between the nozzle and the holder. The nozzle length determines the transducer face position.

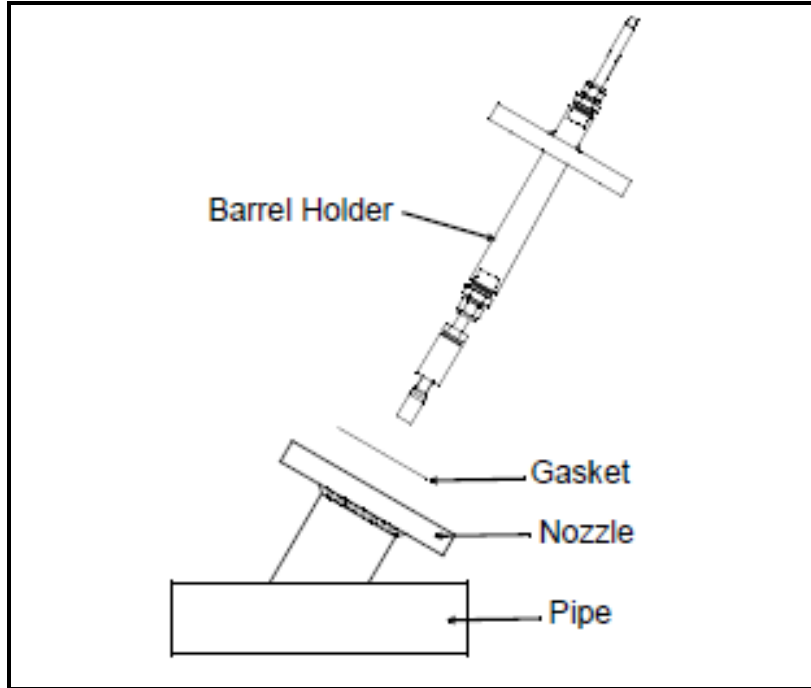


3. Bolt the holder flange onto the nozzle flange as shown below.

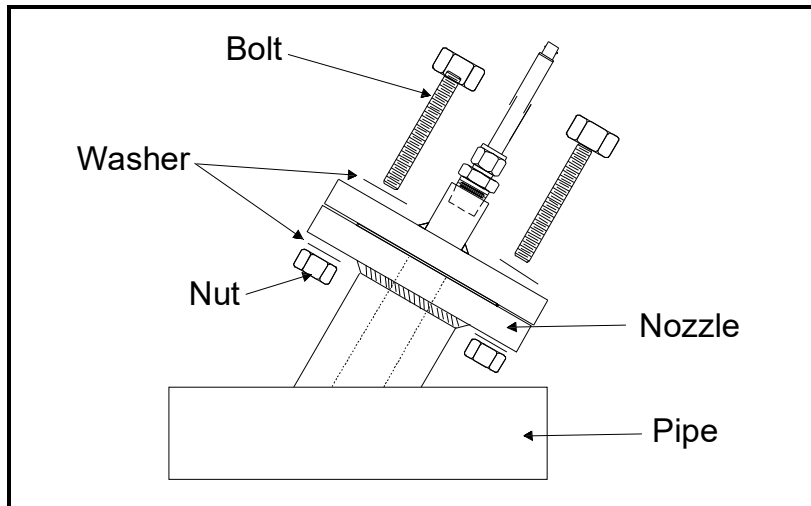

3.3 Inserting Transducers with the Barrel Holder (cont.)


4. Install the junction box on the end of the transducer using the compression fitting.

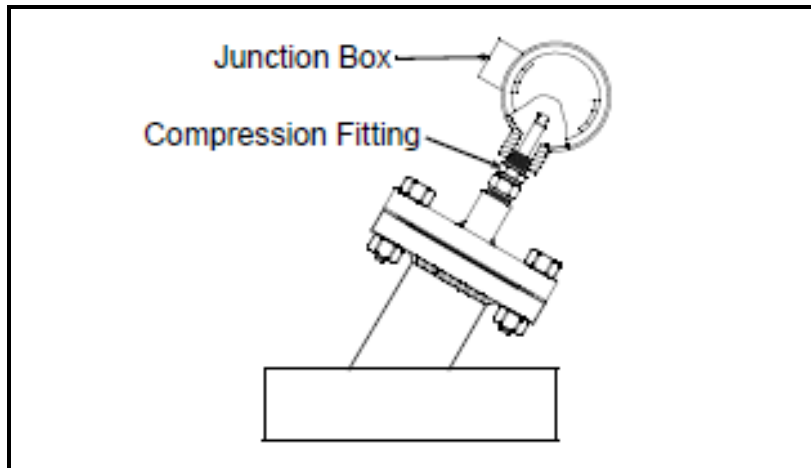

5. Repeat the above steps for the other transducer.
6. Use the equation below to calculate the path length (P) based on the pipe inside diameter and transducer face angle:

$$P = ID / \cos(A)$$

where: ID = pipe inside diameter
A = nozzle angle

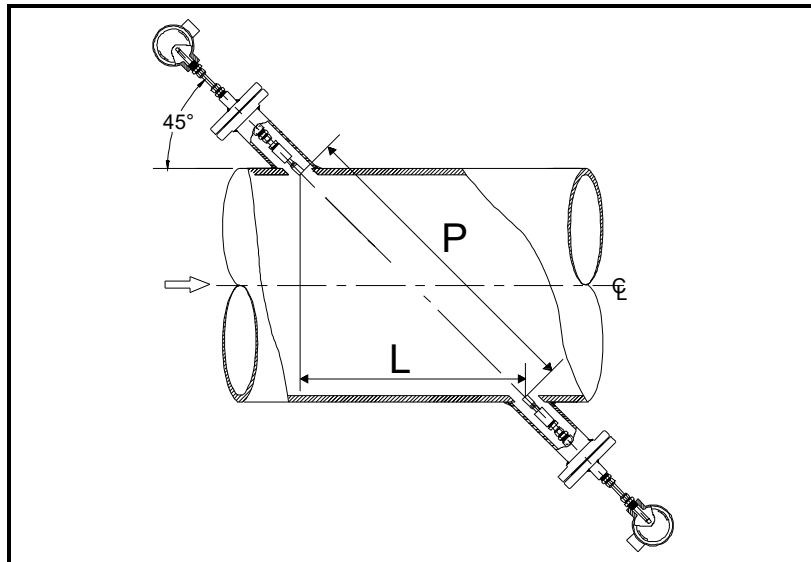

7. Record the axial dimension (L).
8. Refer to your flowmeter *Startup Guide* or *User's Manual* to make transducer electrical connections. You have completed transducer installation.

3.4 Inserting Transducers with the Flanged Holder

The flanged holder is constructed of a 1½ in.-300 or 1½ in.-600# flange. The flange has a large hub that supports the T9 transducer and also provides acoustic isolation. The transducer is inserted through the flange and is held in place by a 1/2 in. tube compression fitting. See Figure 4.

Use the procedure below to install transducers.


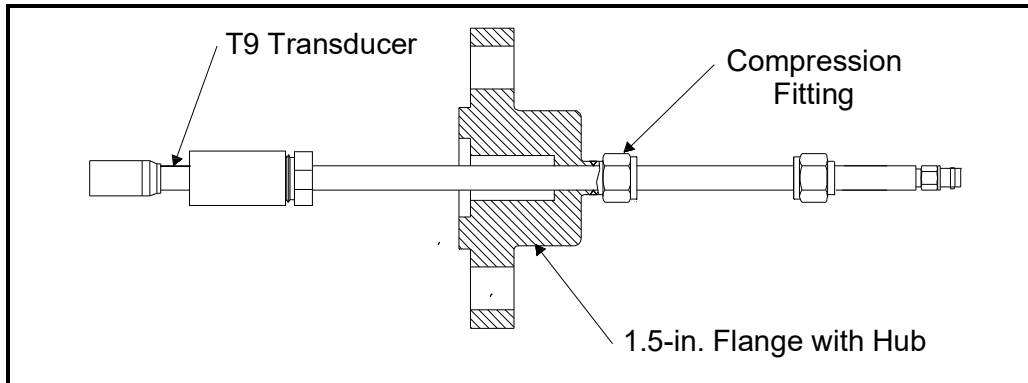


Figure 4: Flanged Holder with T9 Transducer

1. Calculate the transducer insertion depth (TID). To do this measure from the inside diameter of the pipe to the raised face of the nozzle flange via the centerline. Then add 0.125 in. (3.2 mm) to the measurement. This equals the TID. If you are not able to measure from the inside of the nozzle, use the following equation:

$$\text{Transducer Insertion Depth} = \text{Nozzle Length} + \frac{\text{Pipe Wall Thickness}}{\cos A} + 0.125 \text{ in. (3.2 mm)} \text{ (where } A = \text{Nozzle Angle)}$$


2. Set the transducer to the desired depth by loosening the compression fitting and moving the transducer to the calculated insertion depth.

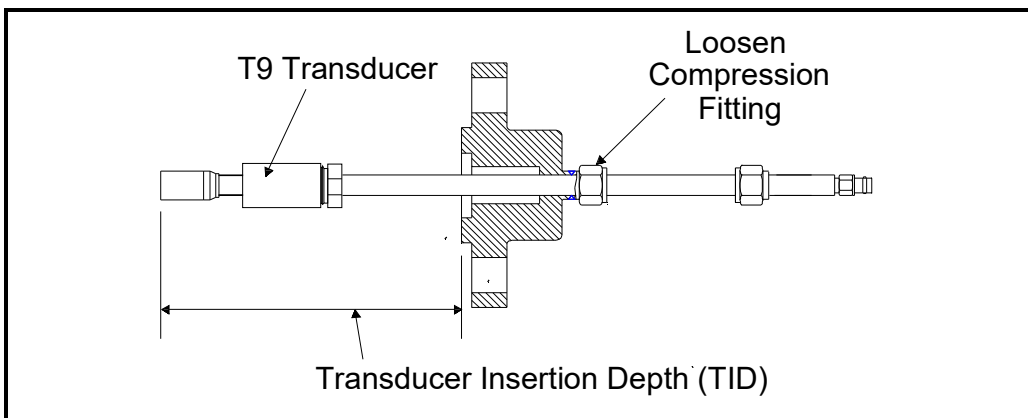


3.4 Inserting Transducers with the Flanged Holder (cont.)

3. Tighten the compression fitting to hold the transducer in place.
4. Place a spiral-wound gasket over the end of the transducer.

Note: You must use a gasket in order to provide the proper acoustic isolation.

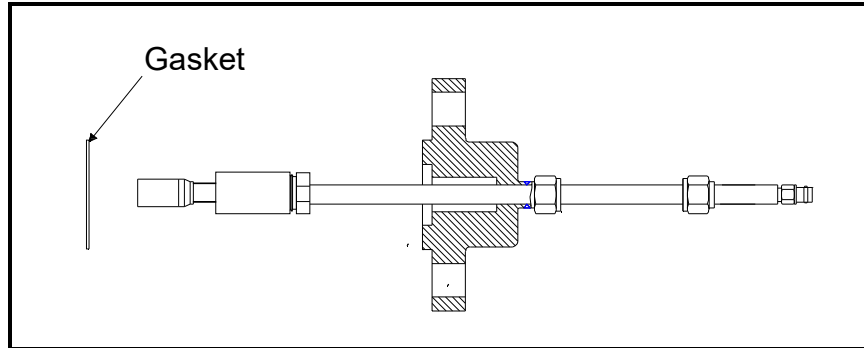


5. Inspect the pipe nozzle. Make sure it is free from dirt/rust. Use the steel wool to clean the pipe nozzle if necessary.
6. Insert the transducer into the nozzle.

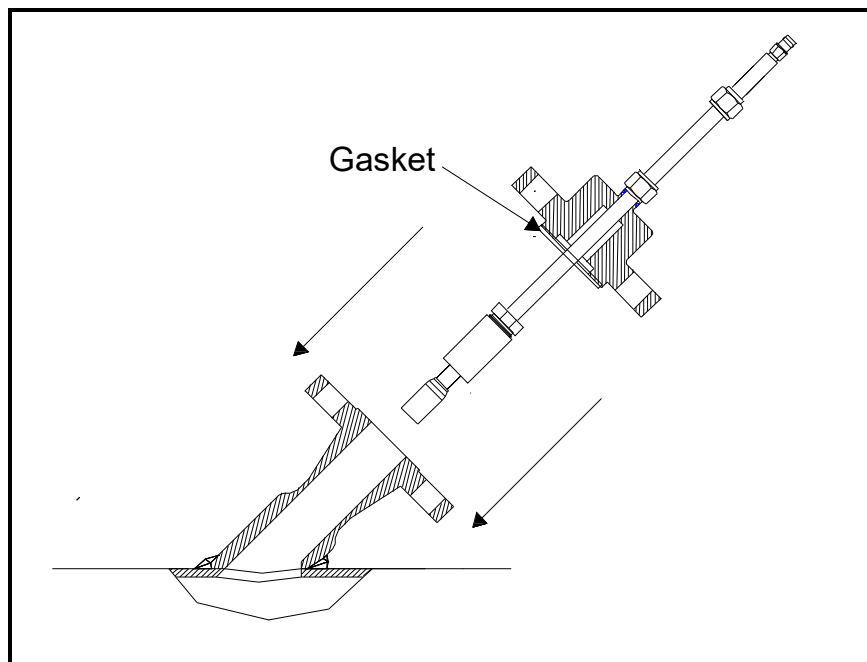

3.4 Inserting Transducers with the Flanged Holder (cont.)


3.4.1 Securing the Transducers

1. Secure the flanges together by placing the studs, washers and nuts as shown below. Hand-tighten each stud. The factory recommends using ASTM A193 Grade B7 (or equivalent) studs and ASTM A19 Grade 2H (or equivalent) nuts.

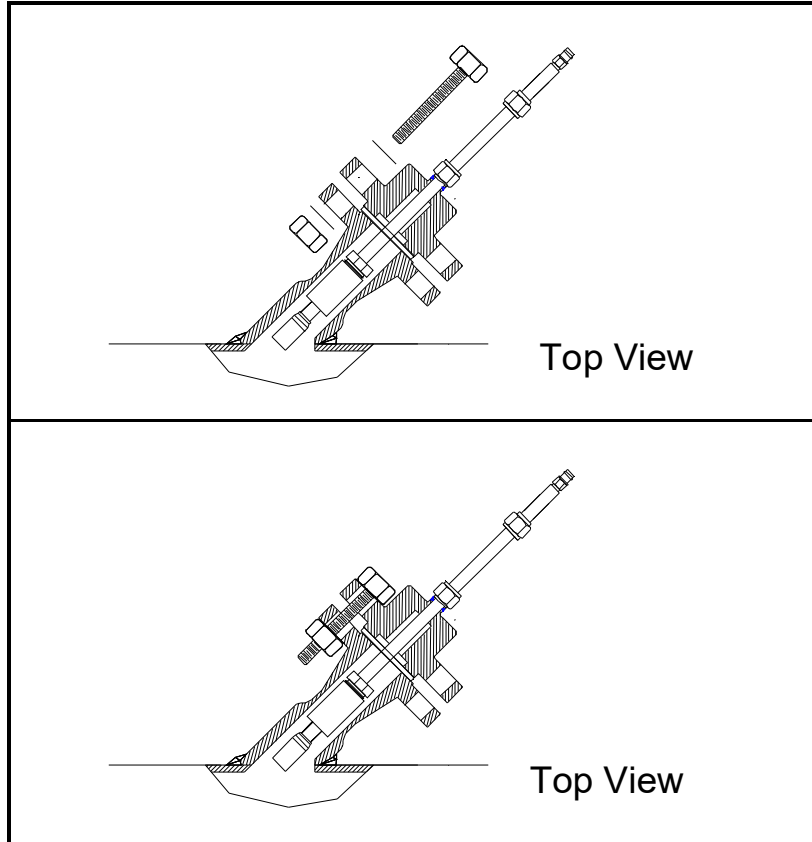


3.4.1 Securing the Transducers (cont.)

- Once all the studs are inserted and hand-tightened, the studs must be torqued to 80 ft-lb (108 N-m) in three stages. Set the torque wrench to 30 ft-lb (40 N-m) and torque the studs in the order shown below.

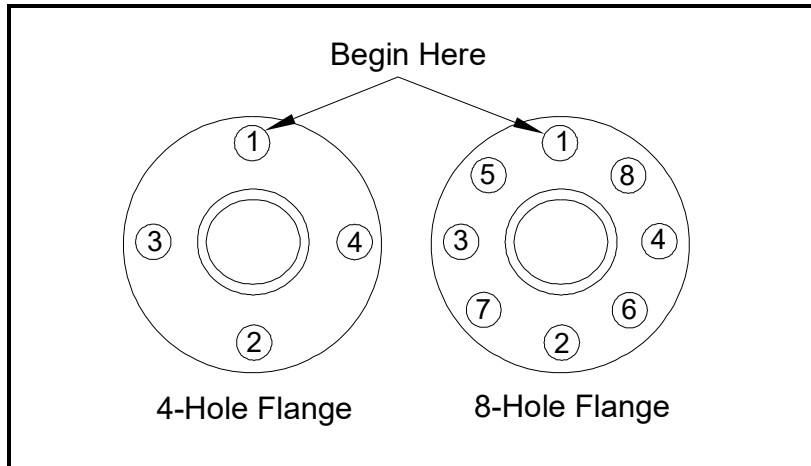


- Set the torque wrench to 60 ft-lb (81 N-m) and torque in the order shown below.

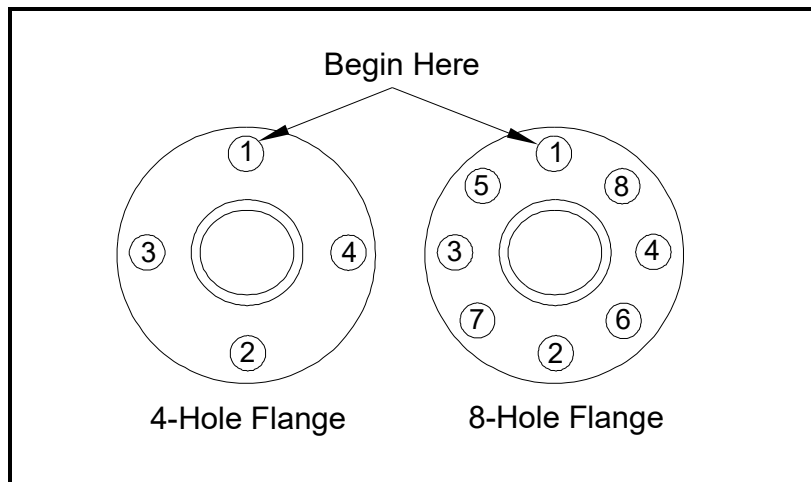

- Set the torque wrench to 80 ft-lb (108 N-m) and tighten in the order shown above.
- Repeat steps 1 through 4 for the other nozzle.

3.4.1 Securing the Transducers (cont.)

6. Install the junction boxes on the end of the transducers using the compression fittings.

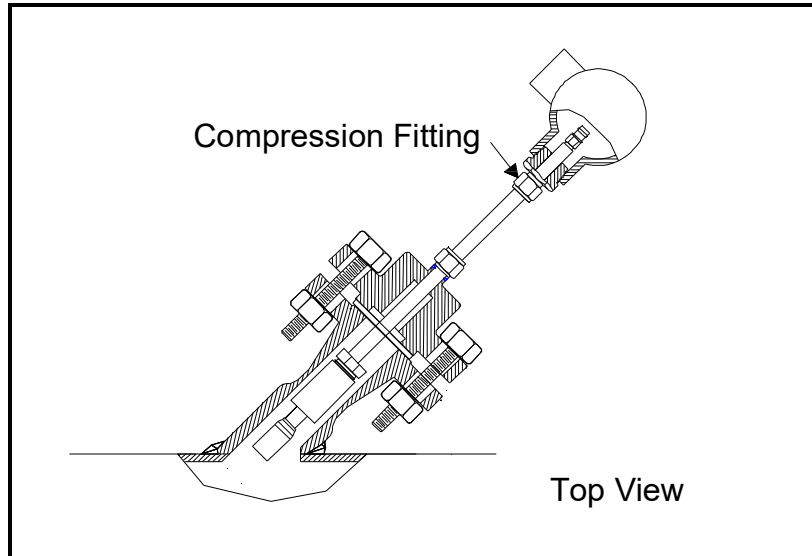

7. Refer to your flowmeter *Startup Guide* or *User's Manual* to make transducer electrical connections.

Chapter 4. Maintenance

4.1 Introduction

Once the transducers are properly installed into the pipe nozzles as described in the previous section, the T9 transducers require no additional adjustments.

Periodic inspection of the installation to verify the torque on the mounting bolts may be required, if erratic flow rate measurements are observed.

If you suspect something is wrong with a transducer or need to replace a transducer, use the appropriate removal procedure that follows.

4.2 Removing Transducers

Use the steps below to remove transducers that have been installed with a simple, barrel or flange holder.

Note: *The illustrations in the steps below use a simple holder.*

WARNING! FOLLOW ALL APPLICABLE SAFETY CODES WHILE PERFORMING THE FOLLOWING PROCEDURES.

1. Disconnect power from the flowmeter.


WARNING! MAKE SURE POWER IS DISCONNECTED BEFORE PERFORMING THE FOLLOWING STEPS.

2. Shut down or isolate the process line where you will be removing the transducers.

WARNING! SHUT DOWN THE PROCESS LINE BEFORE REMOVING TRANSDUCERS. SERIOUS INJURY MAY OCCUR IF TRANSDUCERS ARE REMOVED FROM A LIVE PROCESS LINE.


4.2 Removing Transducers (cont.)

3. Disconnect the transducer cables at the junction box.

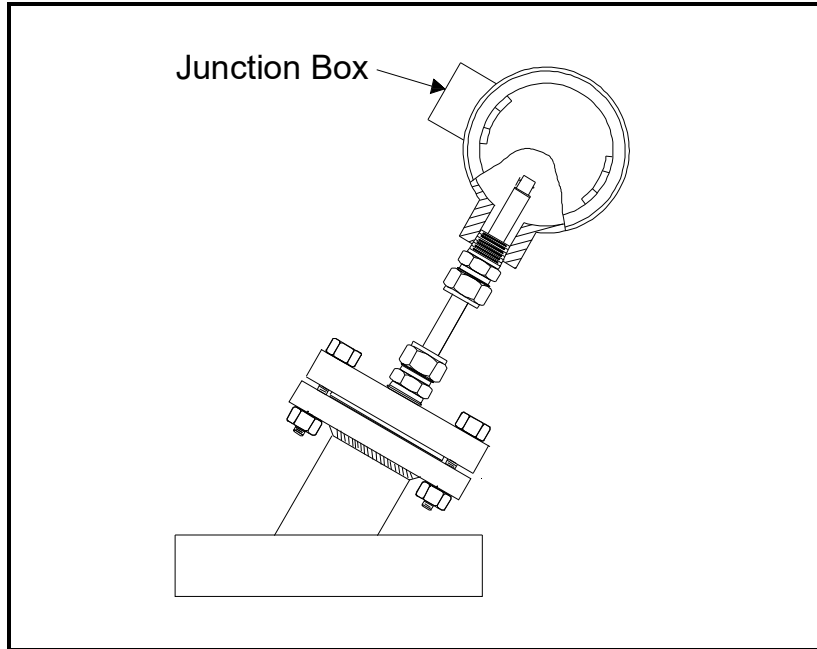


4.2 Removing Transducers (cont.)

4. Remove the junction box from the end of the transducer by loosening the compression fitting and unscrewing the junction box.

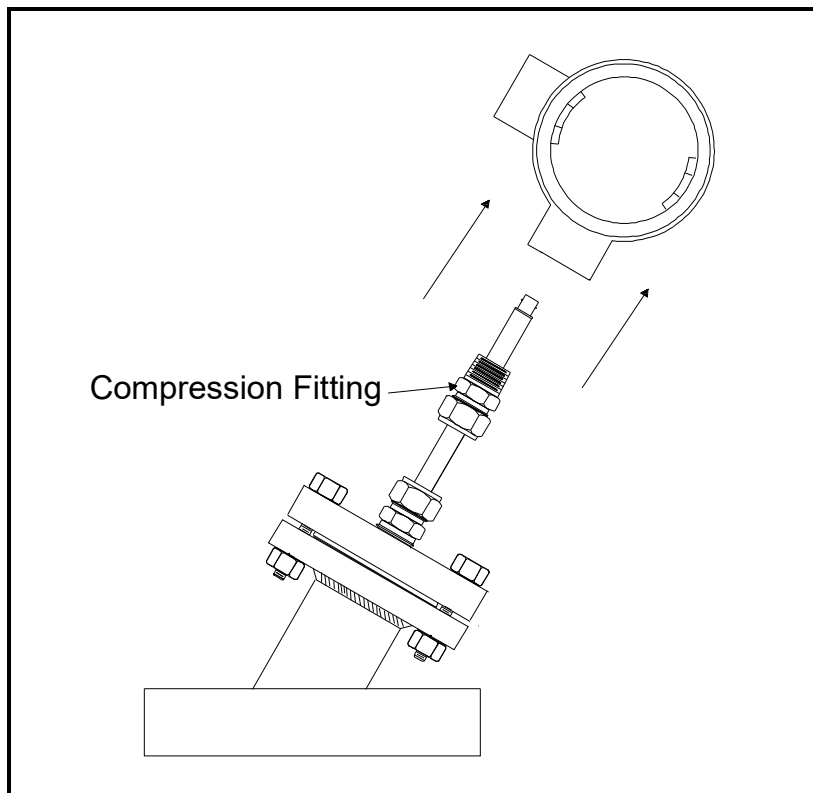


4.2 Removing Transducer (cont.)

5. Remove the bolts that fasten the simple/barrel/flange holder to the nozzle flange, and remove it from the pipe nozzle.

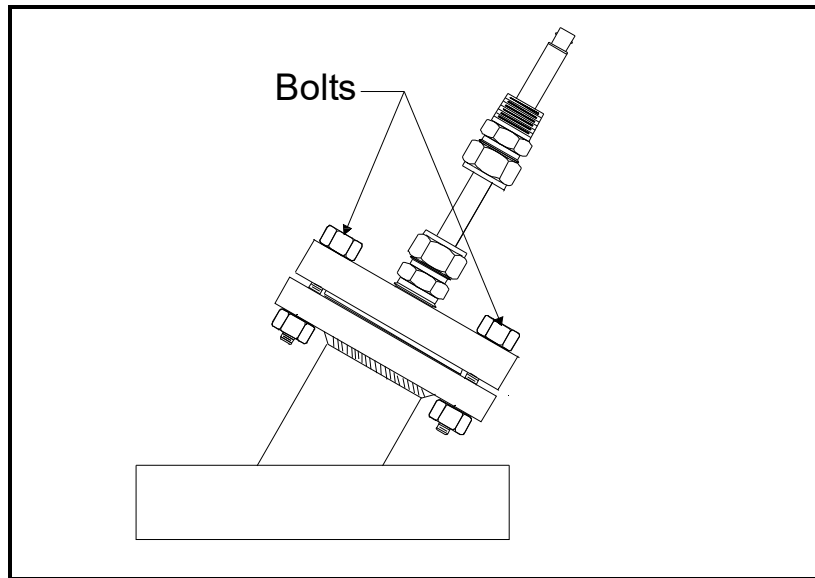

6. Install a new flange gasket on the pipe nozzle. Then, fasten the "blind" flange to the pipe nozzle with the bolts removed in the previous step.

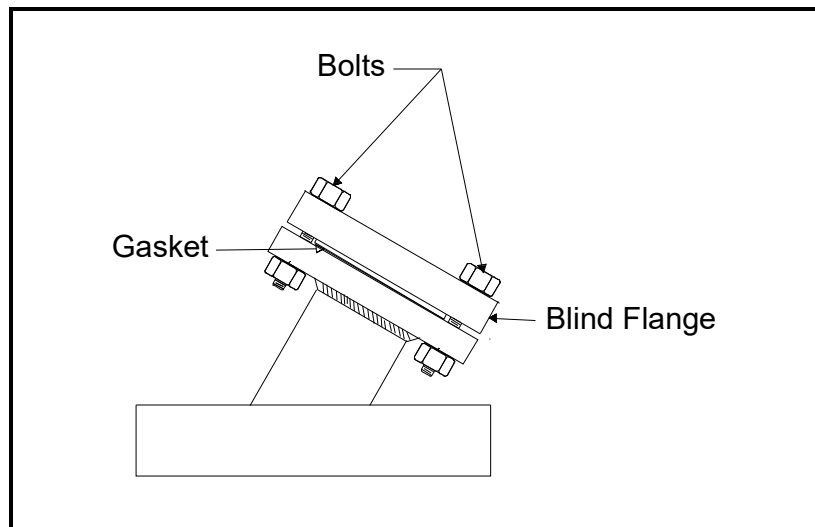

7. Repeat steps 3 through 6 for the other transducer if necessary.
You have completed the removal procedure, it is now safe to reopen the process line.

Chapter 5. T9 Specifications

5.1 Specifications

Table 2: T9 Transducer Specifications

Transducer	T9 Specification
Designation	Hazardous area applications; flare gas, hydrocarbon gases, saturated steam.
Installation Type	Wetted
Material	<i>Standard:</i> Titanium <i>Optional:</i> 316SS, Monel [®] or Hastelloy [®]
Field Mounting	Flowcell, hot or cold tap
Process Connection	1.5 in. (40 mm) flanged
Holder Type	Simple, barrel or flanged holder
Holder Ratings	150#, 300#, 600#
Operating Frequency	100 kHz
Pressure Range	0 to 2700 psig
Electrical Rating	200 V peak-to-peak, 5 mA
Ambient Temperature Range	<i>Europe:</i> -40 to +158°F (-40 to +70°C) <i>North America:</i> -4 to +140°F (-20 to +60°C)
Process Temperature Range	<i>Normal Temperature:</i> -58 to +302°F (-50 to +150°C) <i>High Temperature:</i> -58 to +500°F (-50 to +260°C)

[no content intended for this page]

Warranty

Each instrument manufactured by Panametrics is warranted to be free from defects in material and workmanship. Liability under this warranty is limited to restoring the instrument to normal operation or replacing the instrument, at the sole discretion of Panametrics. Fuses and batteries are specifically excluded from any liability. This warranty is effective from the date of delivery to the original purchaser. If Panametrics determines that the equipment was defective, the warranty period is:

- one year from delivery for electronic or mechanical failures
- one year from delivery for sensor shelf life

If Panametrics determines that the equipment was damaged by misuse, improper installation, the use of unauthorized replacement parts, or operating conditions outside the guidelines specified by Panametrics, the repairs are not covered under this warranty.

The warranties set forth herein are exclusive and are in lieu of all other warranties whether statutory, express or implied (including warranties or merchantability and fitness for a particular purpose, and warranties arising from course of dealing or usage or trade).

Return Policy

If a Panametrics instrument malfunctions within the warranty period, the following procedure must be completed:

- 1.** Notify Panametrics, giving full details of the problem, and provide the model number and serial number of the instrument. If the nature of the problem indicates the need for factory service, Panametrics will issue a RETURN AUTHORIZATION NUMBER (RAN), and shipping instructions for the return of the instrument to a service center will be provided.
- 2.** If Panametrics instructs you to send your instrument to a service center, it must be shipped prepaid to the authorized repair station indicated in the shipping instructions.
- 3.** Upon receipt, Panametrics will evaluate the instrument to determine the cause of the malfunction.

Then, one of the following courses of action will then be taken:

- If the damage is covered under the terms of the warranty, the instrument will be repaired at no cost to the owner and returned.
- If Panametrics determines that the damage is not covered under the terms of the warranty, or if the warranty has expired, an estimate for the cost of the repairs at standard rates will be provided. Upon receipt of the owner's approval to proceed, the instrument will be repaired and returned.

[no content intended for this page]

Customer Support Centers

U.S.A.

The Boston Center
1100 Technology Park Drive
Billerica, MA 01821
U.S.A.

Tel: 800 833 9438 (toll-free)
978 437 1000

E-mail: panametricstechsupport@bakerhughes.com

Ireland

Sensing House
Shannon Free Zone East
Shannon, County Clare
Ireland

Tel: +353 (0)61 470291

E-mail: panametricstechsupport@bakerhughes.com

Copyright 2023 Baker Hughes company.

This material contains one or more registered trademarks of Baker Hughes Company and its subsidiaries in one or more countries. All third-party product and company names are trademarks of their respective holders.

BH047C21 EN C (05/2023)

Baker Hughes 