

# What are the benefits of preventative maintenance?

Over time contamination and wear can affect the performance of your ADTS unit.

To ensure the continued reliability of your ADTS, we recommend preventative maintenance is performed at 1000 hours of use, and again at 3000 hours of use.

# 1000 Hour Service includes:

- Replacement of all port seals
- · Replacement of all filters
- · Replacement of release valve
- · Comprehensive health check

### 3000 Hour Service Includes:

- · All items included on 1000 hours service
- · Replacement of all pump seals
- Replacement of vibration mounts
- · Replacement of all valves

For full details please consult product handbook.

All preventative maintenance work is carried out by fully trained Druck Technicians.

#### Want more information?

Click <u>here</u> to contact our Service team. Alternatively, please reach our to our Customer Care team using the below contact information;

Contact number: +44 (0) 116 2317107

Email: druckservices@bakerhughes.com



# every 1000 hours

of use in operation requires preventative maintenance to be performed to keep unit in specification


# every 3000 hours

of use requires replacement of all pump seals and O rings. Along with mounting and vibration mounts.





# Service and support locations

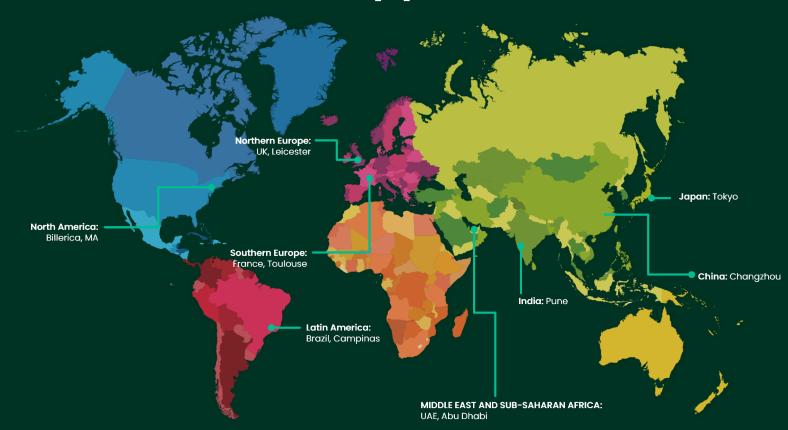

# **GLOBAL TECHNICAL SUPPORT**

Email: mstechsupport@bakerhughes.com

# **ASIA PACIFIC**

Japan, Tokyo

Phone: +81 03-6894-1838

Email: service.druck.jp@bakerhughes.com

#### CHINA

China, Chanazhou

Phone: 021-38582280

Email: druckcustcare.CN@bakerhughes.com

#### MIDDLE EAST AND SUB-SAHARAN AFRICA

UAE, Abu Dhabi

Phone: +971 2 4079381

Email: druckihservice.meat@bakerhughes.

com

**INDIA** 

India, Pune

Phone: +91 213 5620421 to 425

Email: druckihservice.india@bakerhughes.

com

# **NORTHERN EUROPE**

UK, Leiceste

Phone: +44 (0) 116 2317107

Email: druckservices@bakerhughes.com

#### **SOUTHERN EUROPE**

France, Toulouse

Phone: +33 562 888 250

Email: druckcustcare.FR@bakerhughes.com

#### **NORTH AMERICA**

USA, Billerica

Phone: +1 (281) 542-3650

Email: namservice@bakerhughes.com

## **LATIN AMERICA**

Brazil, Campinas

Phone: +55 21 3262-1801

Email: druckcustcare.BR@bakerhughes.com

